

LNA SERIES HYBRID INVERTER

WITH BREAKER | R5KLNA R6KLNA R7K6LNA R8KLNA R10KLNA



DECLARATION

SHENZHEN MEGAREVO TECHNOLOGY CO., LTD. (hereinafter referred to as "MEGAREVO") reserves the right to modify the frame dimensions, functionality, technical data, parameters, standards without prior notice.

The contents of this manual have been checked for accordance with its described hardware and software. However, the contents of this manual may be subject to appropriate modification as a result of product upgrade, specification change and update of the manual, we cannot guarantee full accordance all the time. But the data in this manual are reviewed regularly and any necessary corrections are included in subsequent editions. Suggestions for improvement from readers are appreciated.

No part of this manual may be reproduced in any form, or by any means, without prior written permission of Megarevo.

All rights © SHENZHEN MEGAREVO TECHNOLOGY CO., LTD.

OTHER RIGHTS



and other MEGAREVO trademarks used in this manual are owned by MEGAREVO.

Using data contained in firmware or software developed by MEGAREVO, in part or in full, for commercial purposes by any means is prohibited.

Reverse engineering, cracking or any other operation that destroys the original programming design of software developed by MEGAREVO is prohibited.

PREFACE

Thank you for choosing hybrid inverter (hereinafter referred to as "inverter").

This user manual presents a detailed description of with respect to product features, structural characteristics, functions, installation, parameter settings, troubleshooting, commissioning and daily maintenance, etc. Be sure to carefully read through the safety precautions before use and keep it properly at a place for easy access.

IMPORTANT NOTES

-
- Please assure the intactness of product enclosure and all safety covers before installation. Operation must conform to the requirements of this manual and local industrial safety regulations and/or electrical codes.
 - In the event of damage or loss of user manual, users may ask local distributors, offices or our technical service department for a new one.
 - Contents of this manual may be subject to appropriate modification as a result of product upgrade, specification change and update of the manual.
 - If any item as stated in this manual is not clear, please contact our technical service department.
 - If any anomaly occurs after power up or during the operation, it is essential to stop the machine and identify the fault or seek technical services as soon as possible.
-

It will be referred to as "inverter" hereinafter unless otherwise specified.

The inverter must only be installed by professional technicians. The professional technician is required to meet requirements as follows:

- Know electronic, electrical wiring and mechanical expertise, and be familiar with electrical and mechanical schematics.
- Be familiar with local standards and relevant safety regulations of electrical systems.
- Have received professional training related to the electrical equipment installation and commissioning.
- Be able to quickly respond to hazards or emergencies that occur during installation and commissioning.

TECHNICAL SUPPORT

Before installation, wiring, operation, and repair to the inverter, please read carefully and strictly comply with all its safety precautions in this manual.

Please ensure all the warning marks on the inverter are clear and distinct. Replace or add the obscure or missed warning marks.

The information from following sources is all effective.

Scan the QR code for the latest information and services:



WhatsApp

Service time: 24/7

Users may acquire general technical data and information through MEGAREVO official website: <http://www.megarevo.com>

If you have any question, or anything that it is not clear for you, or have some troubles during installation, wiring, and/or operation, you are suggested to contact MEGAREVO via its recommended contact information in this manual or contact its sales representatives or service engineers.

CONTENT

About this manual	VI
1 Safety introductions	001
1.1 Symbols used	001
1.2 Important safety instructions	001
1.3 Explanation of symbol	004
2 Product introduction	006
2.1 Product overview	006
2.2 Product size	007
3 Installation	008
3.1 Check for physical damage	008
3.2 Packing list	008
3.3 Mounting	009
3.4 Battery connection	013
3.5 PV connection	015
3.6 Grid / GEN connection and backup load connection	016
3.7 CT connection	018
3.8 Wi-Fi / GPRS connection	019
3.9 Earth connection	020
3.10 RSD (ON / OFF) installation	020
3.11 Function port definition	021
3.12 Wiring system for inverter	023
3.13 Generator application scenario wiring diagram	024
3.14 Split phase (120 / 240Vac) parallel connection diagram	026
3.15 Parallel connection for 120 / 208 three phase	027
3.16 AC couple (micro-inverter) connection	028
4 Operation	029
4.1 Power ON / OFF	029
4.2 Main screen	029
4.3 LCD operation flow chart	030
4.4 Energy statistical display	032
5 Basic setup menu	036
5.1 Input password	036
5.2 Enter the settings interface	036

5.3 AC couple function setting.....	042
5.4 Parallel setup menu.....	044
5.5 Battery setup menu.....	046
5.6 Grid setup menu.....	048
5.7 Generator setup menu.....	049
5.8 Inverter information.....	053
6 Maintenance setup menu.....	055
6.1 Input password.....	055
6.2 System settings.....	055
6.3 Custom grid set.....	056
6.4 Grid parameters.....	057
6.5 Grid reconnect parameter.....	057
6.6 Grid function.....	058
6.7 Reactive power parameter	059
7 Advanced mode operation guide.....	060
8 Fault diagnosis and solutions.....	064
9 APP operation	067
9.1 Home page.....	067
9.2 Local mode	067
10 Technical parameters	075

About this manual

This manual is an integral part of Hybrid, it describes the assembly, installation, commissioning, maintenance, and failure type of the product. Please read it carefully before operating.

R5KLNA

R6KLNA

R7K6LNA

R8KLNA

R10KLNA

Naming rules, for example: R7K6LNA.

- "R": means "Company product internal identification symbol".
- "7K6": means "output power 7.6kW".
- "L": means "low battery voltage".
- "NA": means "North America".

Store this manual where it will be always accessible.

1 Safety introductions

This manual is for qualified electricians. The tasks described in this manual only can be performed by qualified electricians.

1.1 Symbols used

The following types of safety instructions and general information appear in this document as described below:



- "Danger" indicates a hazardous situation which, if not avoided, will result in death or serious injury.



- "Warning" indicates a hazardous situation which, if not avoided, could result in death or serious injury.



- "Caution" indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.



- "Note" provides tips that are valuable for the optimal operation of ours.

1.2 Important safety instructions



- Danger to life due to high voltages in the inverter!
- All work must be carried out by qualified electrician.
- The appliance is not to be used by children or persons with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
- Children should be supervised to ensure that they do not play with the appliance.



- Danger of burn injuries due to hot enclosure parts!
- During operation, the upper lid of the enclosure and the enclosure body may become hot.
- Only touch the lower enclosure lid during operation.



- Possible damage to health as a result of the effects of radiation!
- Do not stay closer than 20cm to inverter for any length of time.



- Grounding the PV generator.
- Comply with the local requirements for grounding the PV modules and the PV generator. It is recommended connecting the generator frame and other electrically conductive surfaces in a manner which ensures continuous conduction and ground these in order to have optimal protection of system and persons.



- Ensure input DC voltage \leq Max. DC voltage. Over voltage may cause damage.
- Permanent damage to inverter or other losses, which will not be included in warranty!



- Authorized service personnel must disconnect both AC and DC power from inverter before attempting any maintenance, cleaning or working on any circuits connected to inverter.
- Do not operate the inverter when the device is running.
- Risk of electric shock!

- Please keep the user manual properly. When operating equipment, in addition to following the general precautions in this document, follow the specific safety instructions. We will not be liable for any consequence caused by the violation of the safety operation regulations and design, production, and usage standards.
- Only accessories shipped with the inverter are recommended for use. Otherwise, it may result in a risk of fire, electric shock, or injury to person.
- Make sure the existing wiring is in good condition and the wire is not undersized. Do not disassemble any parts of the inverter which are not mentioned in the installation guide. It contains no user-serviceable parts. See warranty for instructions on obtaining service. Attempting to service the inverter yourself may result in a risk of electric shock or fire and will void your warranty.
- Keep away from flammable, explosive materials to avoid fire disaster.
- The installation place should be away from humid or corrosive substance.
- Authorized service personnel must use insulated tools when installing or working with this equipment.
- Never touch either the positive or negative pole of the PV connecting device. It's strictly prohibited touching both at the same time.
- The unit contains capacitors that remain charged to a potentially lethal voltage after the MAINS, battery and PV supply has been disconnected.
- Hazardous voltage will present for up to 5 minutes after disconnection from power supply.
- CAUTION-RISK of electric shock from energy stored in capacitor, never operate on the inverter couplers, the MAINS cables, Battery cables, PV cables or the PV generator when power is applied. After switching off the PV, battery, and mains, always wait for 5 minutes to let the intermediate circuit capacitors discharge before unplugging DC, battery in plug and MAINS couplers.



- When accessing the internal circuit of inverter, it is very important to wait 5 minutes before operating the power circuit or demounting the electrolyte capacitors inside the device. Do not open the device beforehand since the capacitors require time to sufficiently discharge!
- Surge protection devices (SPDs) for PV installation.

-
-
- Over-voltage protection with surge arresters should be provided when the PV power system is installed.
 - The grid connected inverter is not fitted with SPDs in both PV input side and MAINS side.
-
-

- Lightning will cause a damage either from a direct strike or from surges due to a nearby strike.
 - Induced surges are the most likely cause of lightning damage in majority or installations, especially in rural areas where electricity is usually provided by long overhead lines. Surge may be included on both the PV array conduction and the AC cables leading to the building.
 - Specialists in lightning protection should be consulted during the end use application. Using appropriate external lightning protection, the effect of a direct lightning strike into a building can be mitigated in a controlled way, and the lightning current can be discharged into the ground.
 - Installation of SPDs to protect the inverter against mechanical damage and excessive stress include a surge arrester in case of a building with external lightning protection system (LPS) when separation distance is kept.
 - To protect the DC system, surge suppression device (SPD type2) should be fitted at the inverter end of the DC cabling and at the array located between the inverter and the PV generator, if the voltage protection level (VP) of the surge arresters is greater than 1100V, an additional SPD type3 required for surge protection for electrical devices.
 - To protect the AC system, surge suppression devices (SPD type2) should be fitted at the main incoming point of AC supply (at the consumers cutout), located between the inverter and the meter/distribution system.
 - All DC cables should be installed to provide as short a run as possible, and positive and negative cables of the string or main DC supply should be bundled together. Avoiding the creation of loops in the system.
 - Spark gap devices are not suitable to be used in DC circuits once conducting, they won't stop conducting until the voltage across their terminals is typically more than 30 volts.
-
-

Anti-islanding effect

- Islanding effect is a special phenomenon that grid-connected PV system still supply power to the nearby grid when the voltage loss has happened in the power system. It is dangerous for maintenance personnel and the public.
- Hybrid series inverter provide active frequency drift (AFD) to prevent islanding effect.

PE connection and leakage current

- The end-use application shall monitor the protective conductor by residual current operated protective device (RCD) with rated fault current $I_{fn} \leq 240\text{mA}$ which automatically disconnects the device in case of a fault.
- The device is intended to connect to a PV generator with a capacitance limit of approx. 700nf.
- Incorrect grounding can cause physical injury, death or equipment malfunction and increase electromagnetic.



- High leakage current!
- Earth connection essential before connecting supply.

Battery safety instructions




- Hybrid series inverter should be worked with low voltage battery, for the specific parameters such as battery type, nominal voltage and nominal capacity etc, please refer to user manual.
- As accumulator batteries may contain potential electric shock and short-circuit current danger, to avoid accidents that might be thus resulted, the following warnings should be observed during battery replacement:
 1. Do not wear watches, rings or similar metallic items.
 2. Use insulated tools.
 3. Put on rubber shoes and gloves.
 4. Do not place metallic tools and similar metallic parts on the batteries.
 5. Switch offload connected to the batteries before dismantling battery connection terminals.
 6. Only personal with proper expertise can carry out the maintenance of accumulator batteries.










1.3 Explanation of symbol

This section gives an explanation of all the symbols shown on the inverter and on the type label.

Table 1-1


Symbols on the type label

Symbols	Symbols on the type label
	UL certified.
 	This symbol indicates that you should wait at least 5mins after disconnecting the inverter from the utility grid and from the PV panel before touching any inner live parts.

Symbols	Symbols on the type label
	Keep dry! The package/product must be protected from excessive humidity and must be stored under cover.
	Refer to the operating instructions.
	Fragile - The package/product should be handled carefully and never be tipped over or slung.
	Products should not be disposed as household waste.
	No more than six (6) identical packages being stacked on each other.
	Components of the product can be recycled.
	Danger of hot surface!
	Danger of high voltage and electric shock!
	Caution! Failure to observe a warning indicated in this manual may result in injury.

2 Product introduction

2.1 Product overview

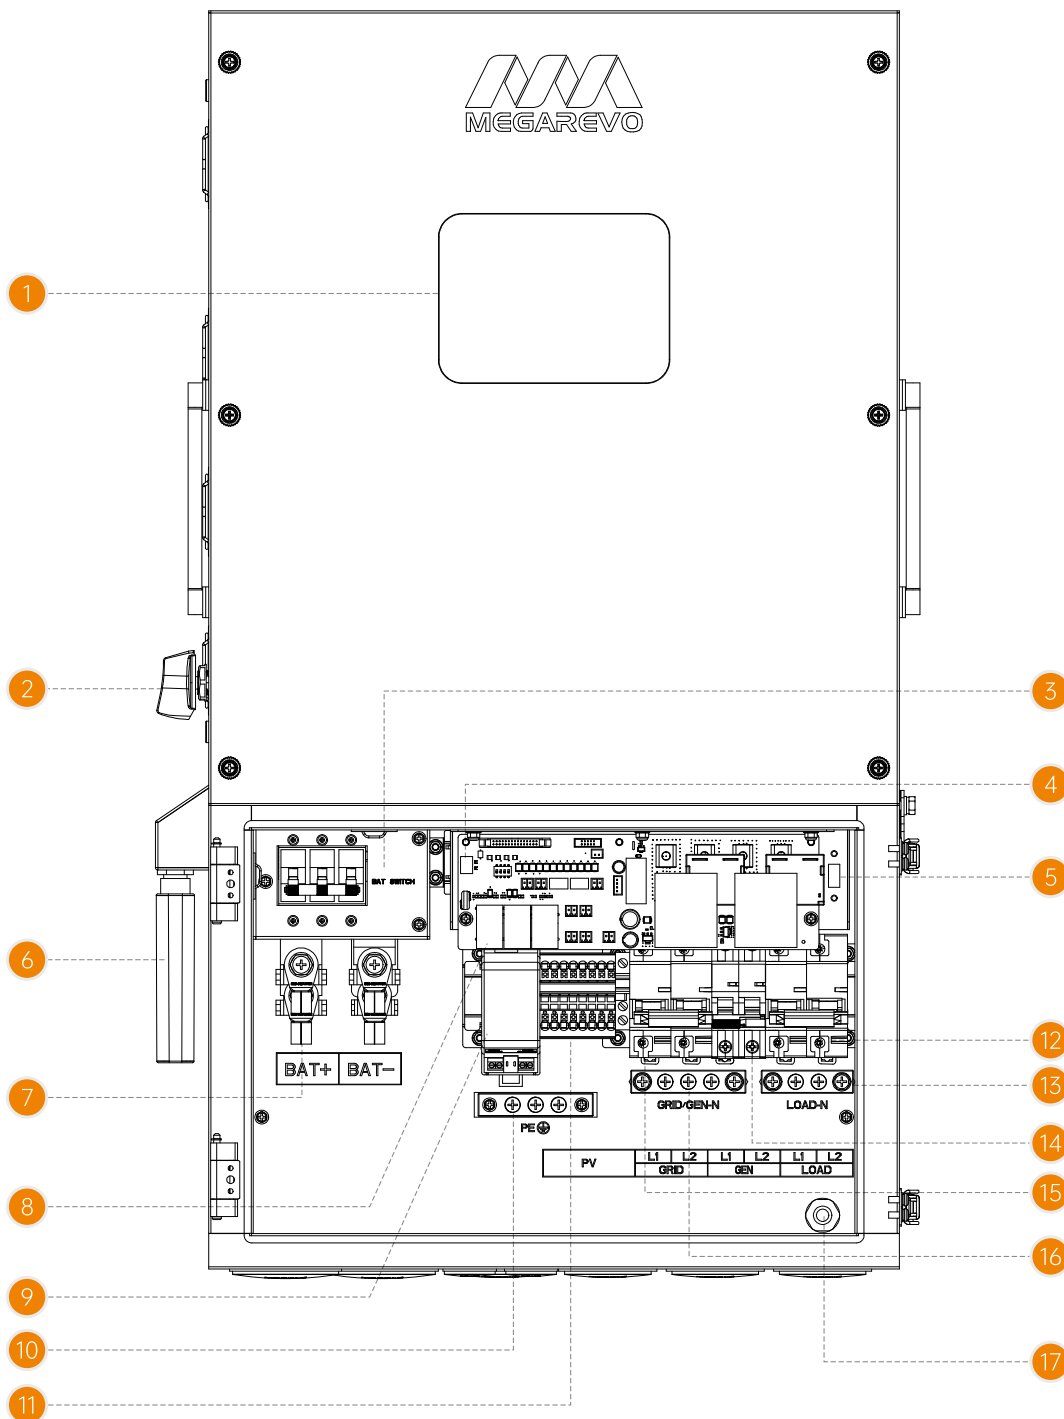

Product overview

1. LCD touch screen

2. PV DC-switch


3. BAT DC-switch

4. Type-C upgrade port


5. USB screen upgrade port

6. Wi-Fi/GPRS (optional)

7. BAT input	8. Parallel/BMS/CT/Meter/ Display port	9. Ti-go RSD (optional)
10. PE port	11. PV input	12. Load L1/L2 input
13. Load-N copper bar	14. Generator input	15. Grid L1/L2 input
16. Grid/Gen-N port	17. Vent hole	18. On/Off button
19. PE screw	20. Rubber waterproof plug	

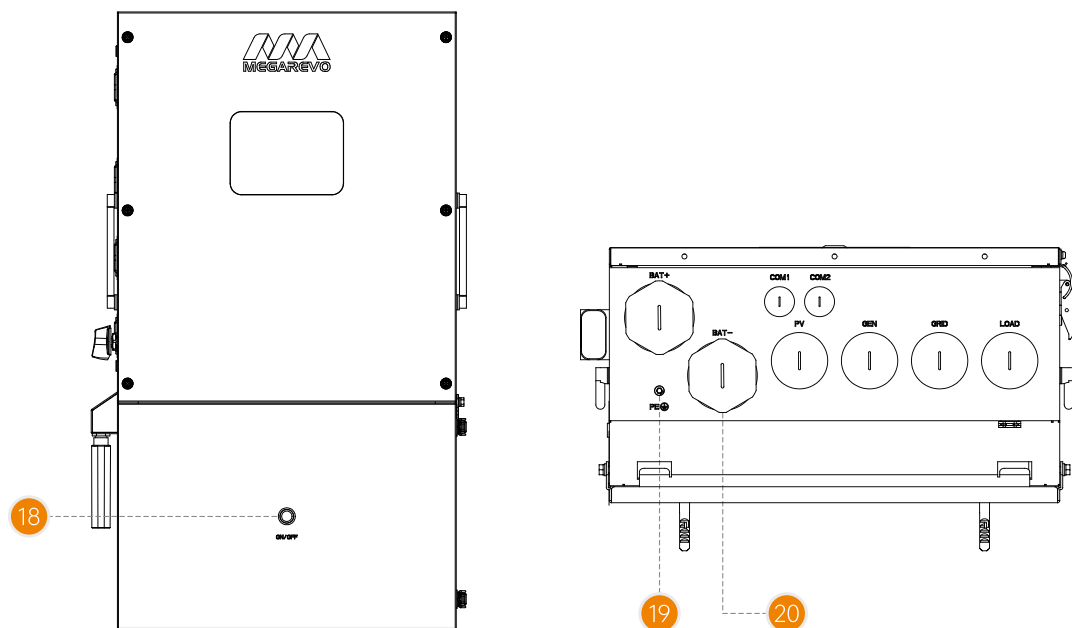

2.2 Product size

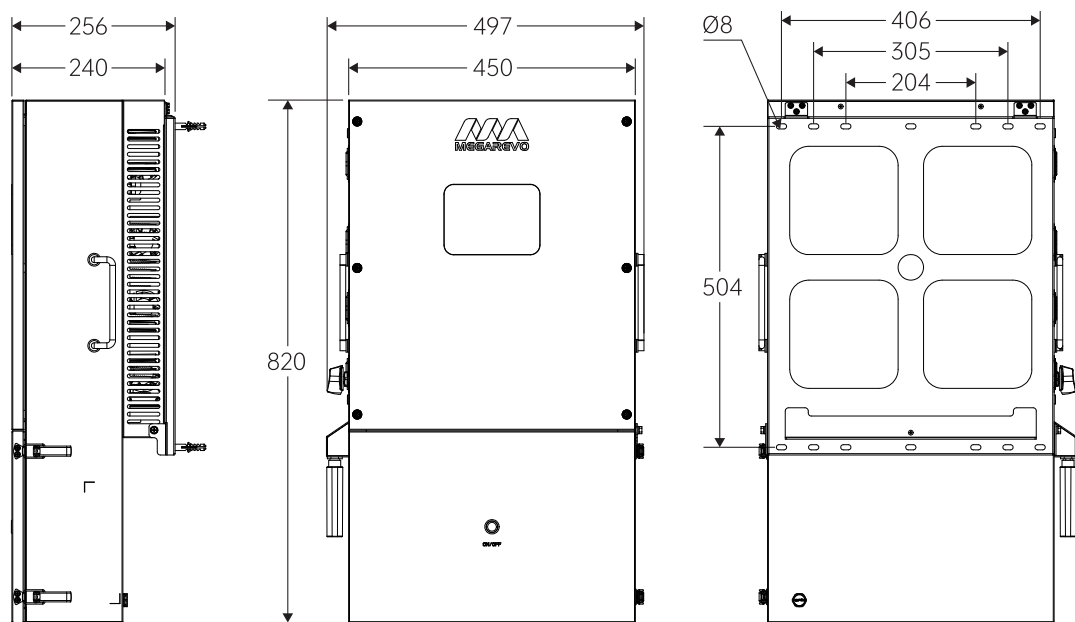


3 Installation

3.1 Check for physical damage

Make sure the inverter is intact during transportation. If there is any visible damage, such as cracks, please contact your dealer immediately.

3.2 Packing list

Open the package and take out the product, please check the accessories first. The packing list shown as below.

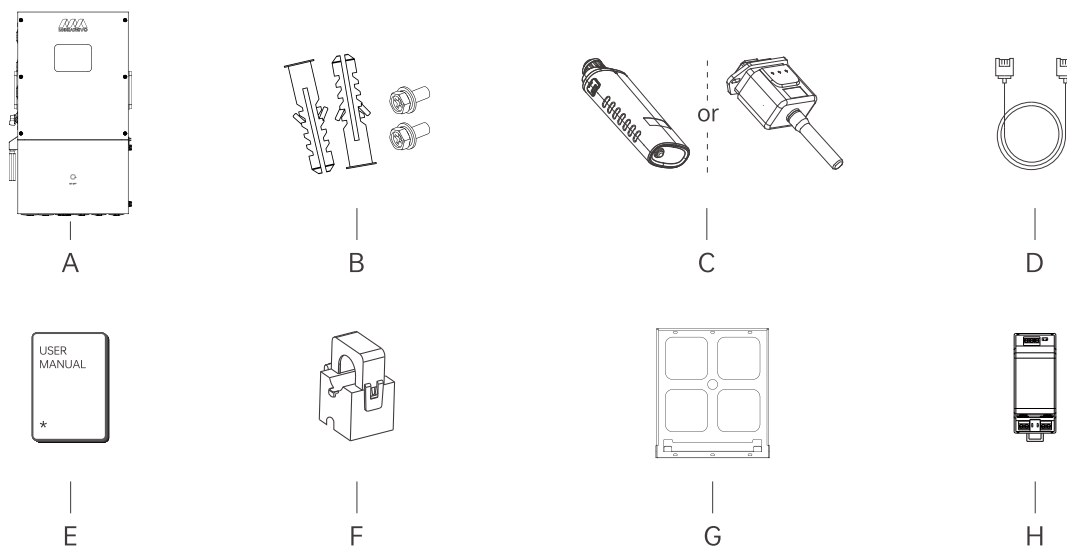

Object	Description
A	Hybrid inverter
B	M6 expansion screw M4*12 hanger screw M6-12 hanger screw
C	Wi-Fi/GPRS plug(optional)
D	Parallel communication cable
E	User manual
F	Current transformers
G	Hanging rack
H	Ti-go RSD transmitter(optional)


3.3 Mounting

Installation precaution:


Inverter is designed for outdoor installation (IP65). Make sure the installation site meets the following conditions:

- Not in direct sunlight.
- Not in areas where highly flammable materials are stored.
- Not in potential explosive areas.
- Not in the cool air directly.
- Not near the television antenna or antenna cable.
- Not higher than altitude of about 2000m above sea level.
- Not in environment of precipitation or humidity (> 95%).
- Under good ventilation condition.
- The ambient temperature in the range of -20°C to +60°C .
- The slope of the wall should be within $\pm 5^\circ$.
- The wall hanging the inverter should meet conditions below:
 1. Solid brick/concrete, or strength equivalent mounting surface.
 2. Inverter must be supported or strengthened if the wall's strength isn't enough (such as wooden wall, the wall covered by thick layer of decoration).


Please AVOID direct sunlight, rain exposure, snow laying up during installation and operation.

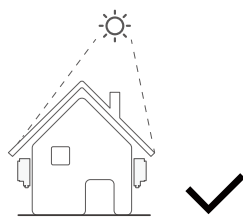


No direct sunlight

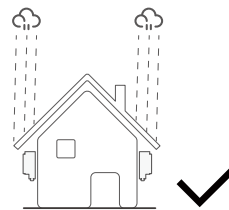


No rain exposure

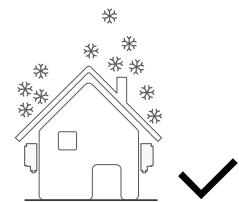


No snow lay up

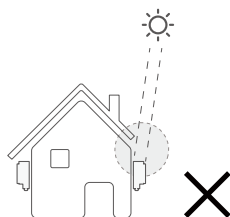

Direct sunlight

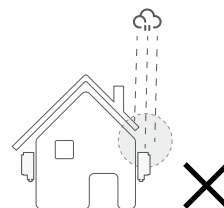


Rain exposure

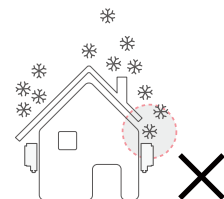

Snow lay up

Space requirement



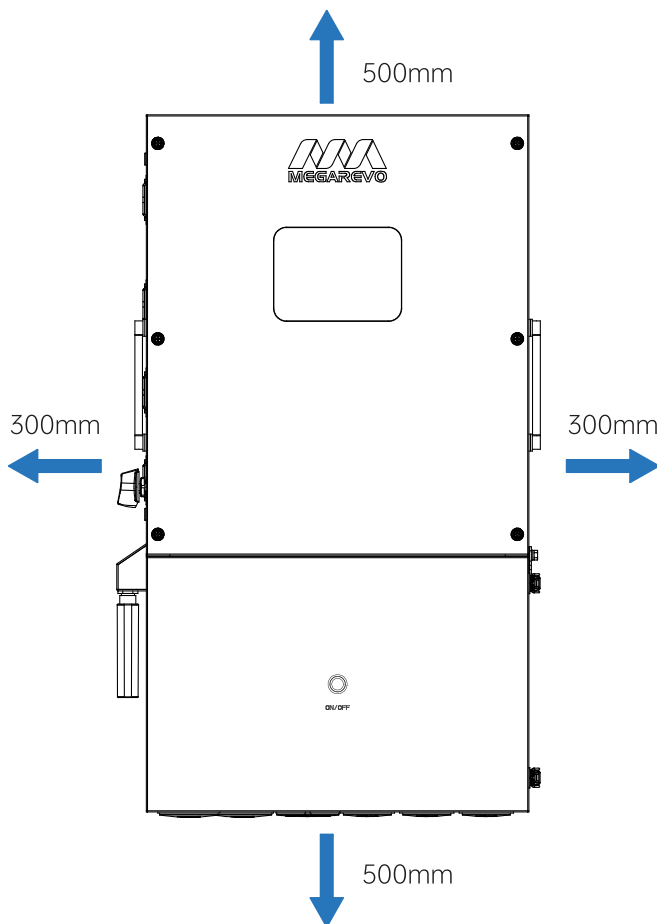


Position	Min. size
Left (Air inlet)	300mm
Right (Air outlet)	300mm
Top (Heat dissipation)	500mm
Bottom (Prevent water immersion)	500mm
Front (Operation and maintenance)	1000mm

Mounting the inverter


Tools required for installation.

Installation tools: crimping pliers for binding post and RJ45, screwdriver, manual wrench etc.

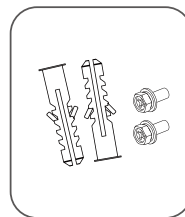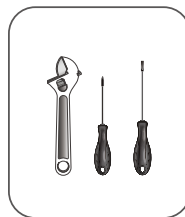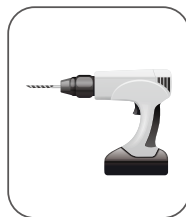


Step1: Mounting the hanging rack on the inverter.


1. Place the hanging rack on the back of the inverter.
2. Then install the Hex head bolt into the inverter.

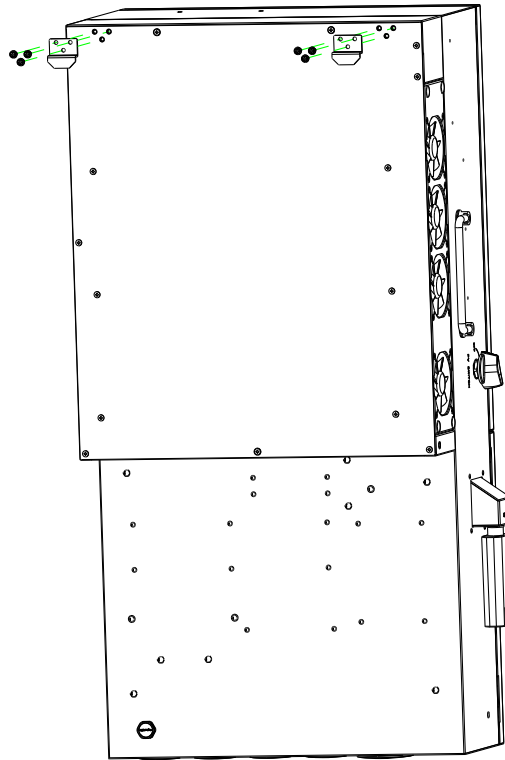


Step2: We provide three different spacing of the mounting holes, please choose the corresponding aperture according to the actual situation to install the inverter. Drill 4 holes in the wall according to the following distance dimensions, 50~60mm depth. Then use a proper hammer to fit the expansion bolt into the holes.

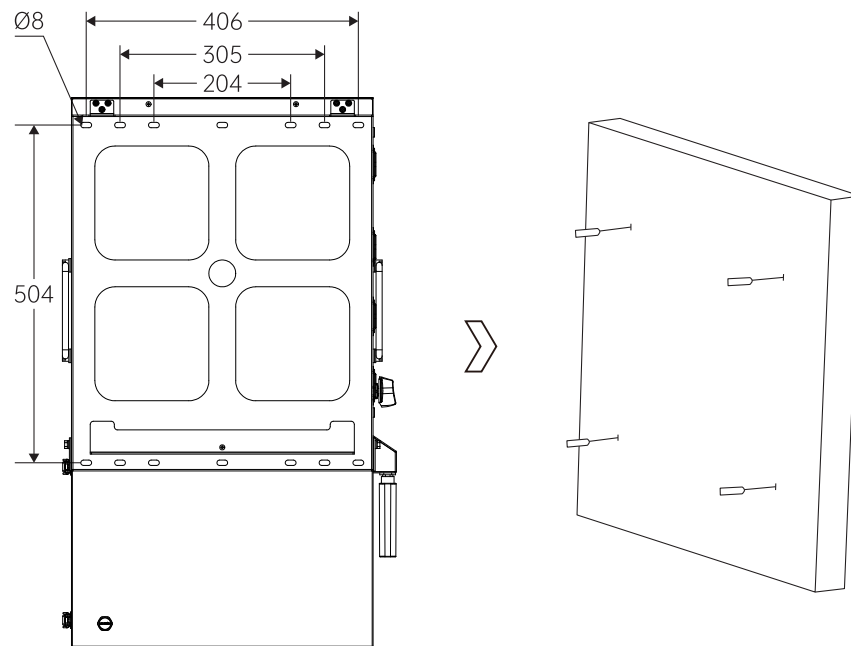


Step3: Lift the inverter and ensure that the four hooks on the back of the inverter are aligned with the four depressions of the hanging rack to fix it to the Hanging rack. Use 2 M6x12 hanger screws to fix the left and right sides of the bottom.

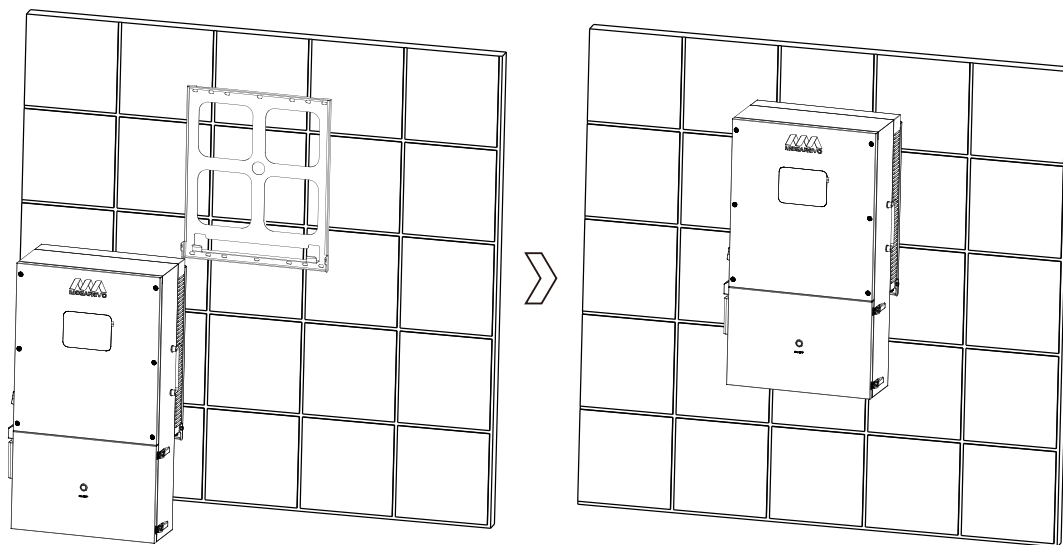

Step4: The two latches on the lower right of the inverter open upward to open the waterproof cover. Remove the four screws fixing the transparent protective cover with a cross screwdriver, and remove the transparent protective cover. After the line is installed, install the transparent protective cover plate back.

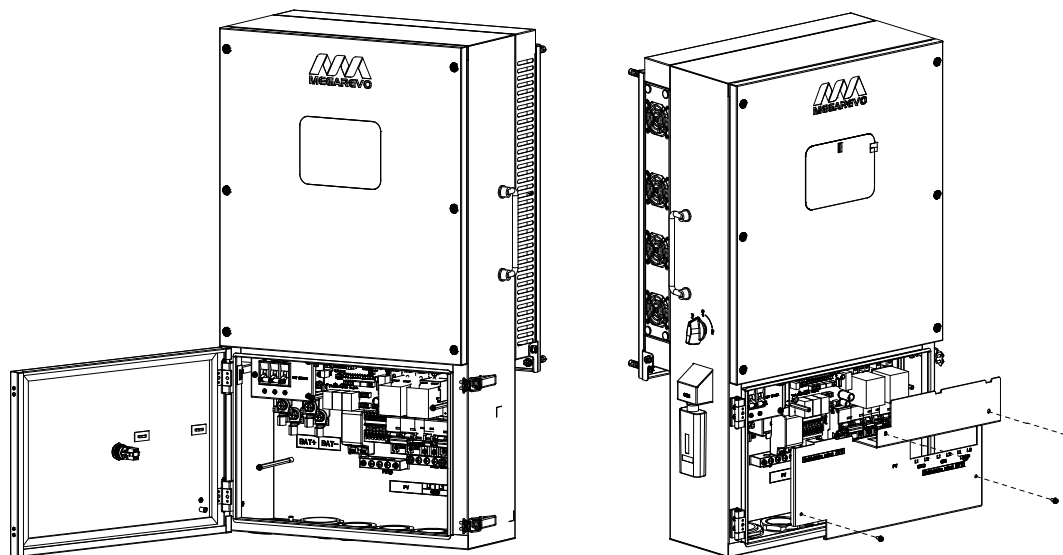

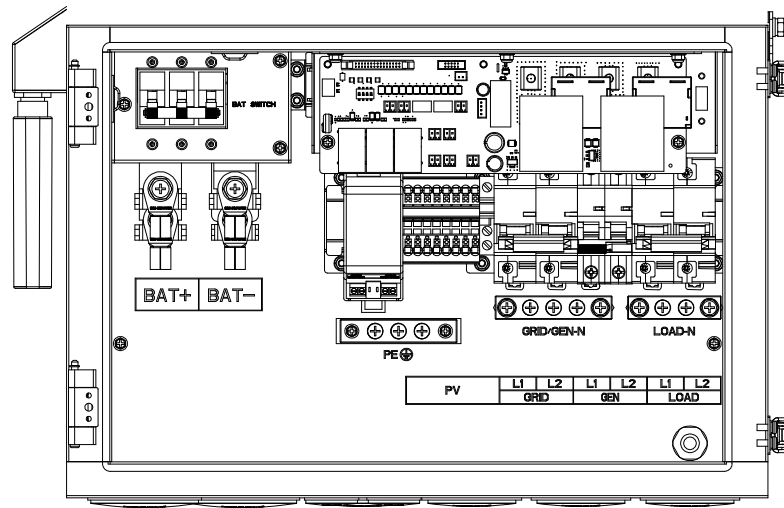

3.4 Battery connection

For safe operation and compliance, a separate DC over-current protector or disconnect device is required between the battery and the inverter. The positive battery port of the inverter is already pre-installed with a 250A DC circuit breaker, so there is no need to repeat the installation.

Model	Current (A)	Wire size/cable (4PCS)	Torque value (max)
5/6kW	130	5AWG/18mm ² (2+,2-)	24.5Nm
7.6/8kW	190	4AWG/22mm ² (2+,2-)	
10kW	210	2AWG/35mm ² (2+,2-)	


The battery port provides four terminals for connection. As shown in the table above, users can connect according to the actual situation of the battery.

Power connection battery

Step1: Select the cable of the correct diameter and strip the front end of the cable for 15mm. Select 4 O-terminals with an aperture of M8. Insert the wire into the O-terminal and clamp it with crimping pliers. Fasten with heat shrinkable sleeve to ensure insulation reliability.




Step2: Insert the battery cable into the inverter battery port and tighten the setting screws with a maximum torque of 24.5Nm. Make sure the positive and negative terminals are connected correctly.

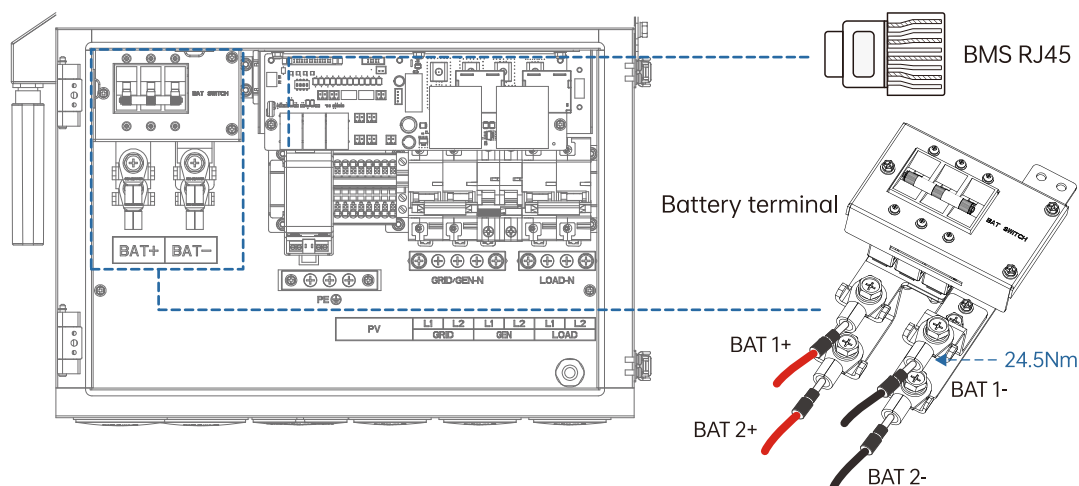

Step3: Connect the BMS communication line of the lithium battery to the BMS communication input interface of the inverter. If the battery BMS communication cable distinguishes the direction of the network port, adjust the connection direction correctly.


When the lead-acid battery is used, the battery BMS communication cable is not required.

Battery connection diagram

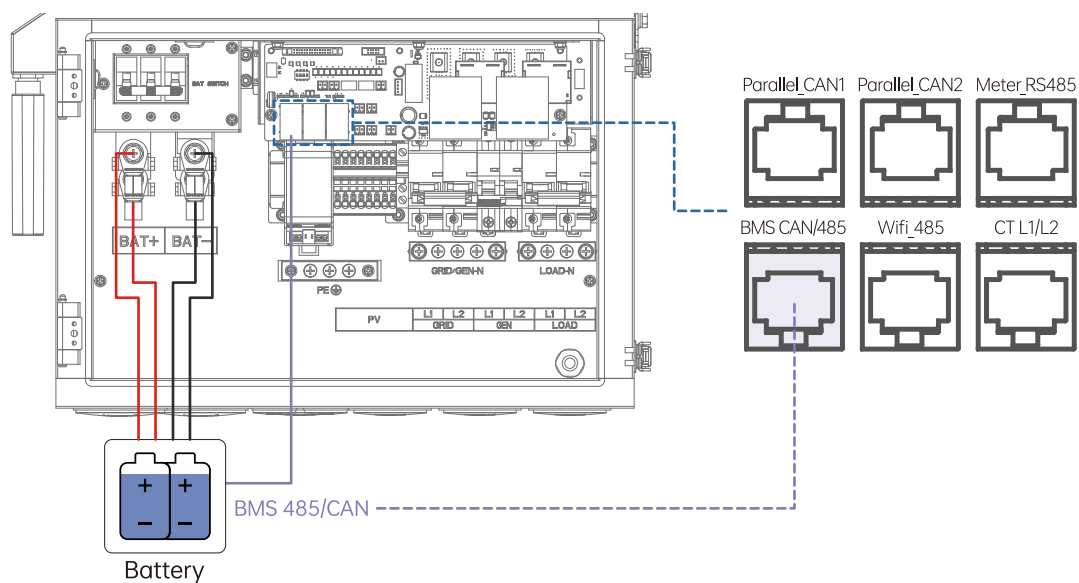

BMS PIN definition

Communication interface between inverter and battery is RS485 or CAN with a RJ45 connector.

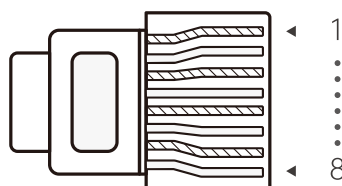

	PIN	1	2	3	4	5	6	7	8
CAN	Definition	X	X	X	BMS_CANH	BMS_CANL	X	X	X
RS485	Definition	X	X	X	X	X	GND	BMS_485A	BMS_485B

When using RS485 protocol, please note that PIN2 must be disconnected!



- The battery communication can only work when the battery BMS is compatible with the inverter.

3.5 PV connection

Before connecting the PV, install a separate DC circuit breaker between the inverter and the PV. Based on the inverter design requirements, the following recommended cable sizes are recommended for PV connections.

Model	R5KLNA	R6KLNA	R7K6LNA	R8KLNA	R10KLNA
PV Max. DC input power (kW)	7.5	9	12	12	15
Wire size (AWG)	12				
Cable (mm ²)	4				

PV module selection


Please select the appropriate PV module input parameters according to the following parameters.

- The open circuit voltage (VOC) of the PV string cannot exceed the maximum PV input voltage of the inverter.
- The open-circuit voltage (VOC) of the PV string cannot be lower than minimum input voltage of the inverter PV.
- The input power of each MPPT shall not exceed 3.6kW, and the input current shall not exceed 14A.
- Use PV modules that meet international standards.


Model	R5KLNA	R6KLNA	R7K6LNA	R8KLNA	R10KLNA
PV Max. DC input power (kW)	7.5	9	12	12	15
NO. MPPT tracker	4				
PV input voltage range (V)	120 - 500				
Full power operating voltage range (V)	120 - 430				
Max. input current (A)	14				
Max. short circuit current (A)	22				

PV wire connection

Step1: Remove 18mm of insulation from the end of the 12AWG cable and connect its cold rolled terminals to the with crimping pliers.

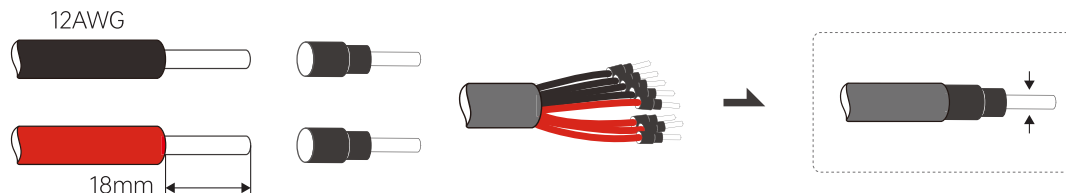

Step2: Route the cable through the PV interface and insert the cable into the hole on the PV terminal.

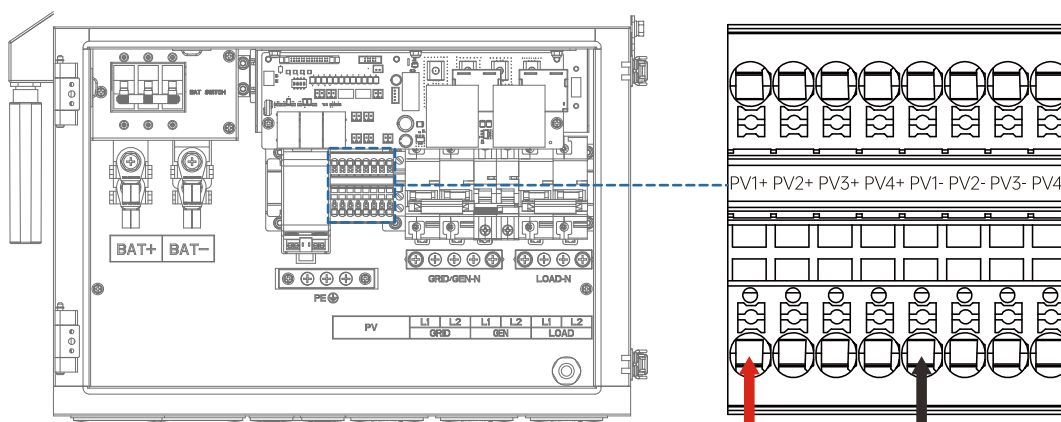

WARNING

- PV module voltage is very high, which already achieve dangerous voltage range, please comply with electric safety rules when connecting.
- Please do not make PV positive or negative ground!



- The following requirements of PV modules need to be applied for each input area.
- Please do not make PV positive or negative ground!
- In order to save cable and reduce the DC loss, we suggest installing the inverter near PV modules.

3.6 Grid / GEN connection and backup load connection

For safety reasons, a separate AC circuit breaker must be installed between the inverter and the grid and the standby load. The inverter already has 3 AC breakers built in, so the customer doesn't need to install them again. The circuit breakers are GRID, GEN, and backup load from left to right. Please connect AC input and output at the correct position!

All wiring must be performed by qualified personnel. The use of appropriate cables for AC input connections is important for safe and efficient operation of the system. Use the correct cable recommended below.


Model	R5KLNA	R6KLNA	R7K6LNA	R8KLNA	R10KLNA
Cable (AWG)	8		6		5




- The inverter is designed for a maximum bypass current of 100A. If this is required, a 2AWG cable must be used for connection.

AC wire connection


- Before connecting the GRID, Backup load, and GEN port, turn off the AC circuit breaker or isolation switch.
- Pay attention to distinguish between GRID, Backup, and GEN interfaces, and do not connect them incorrectly.
- Note that GRID-N cannot be short-circuited with LOAD-N, they have separate copper bars.

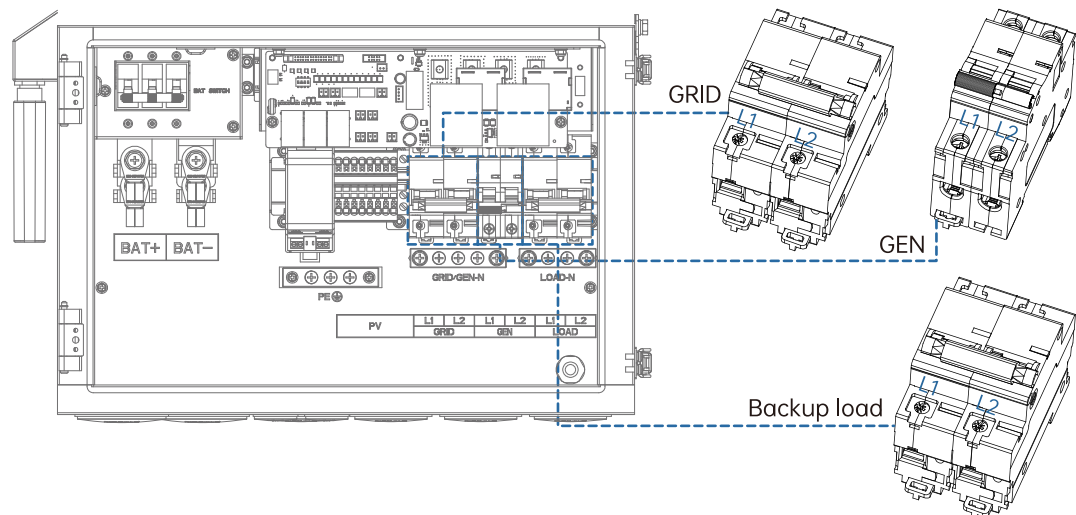

Step1: Select the appropriate wire and remove the 18mm insulation layer from the end of the wire. Connect the wire to the cord end terminal using crimping pliers.

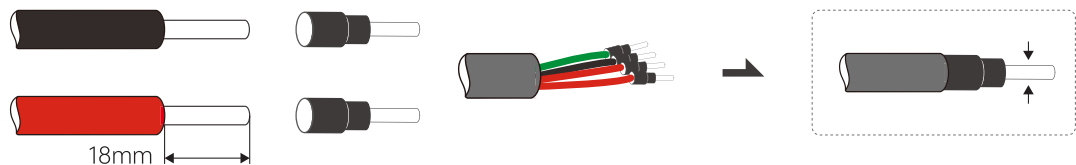

Step2: Route the cable through the bottom wiring port and connect the cable to the AC terminal. Tighten the screw with a maximum torque of 1.2Nm.

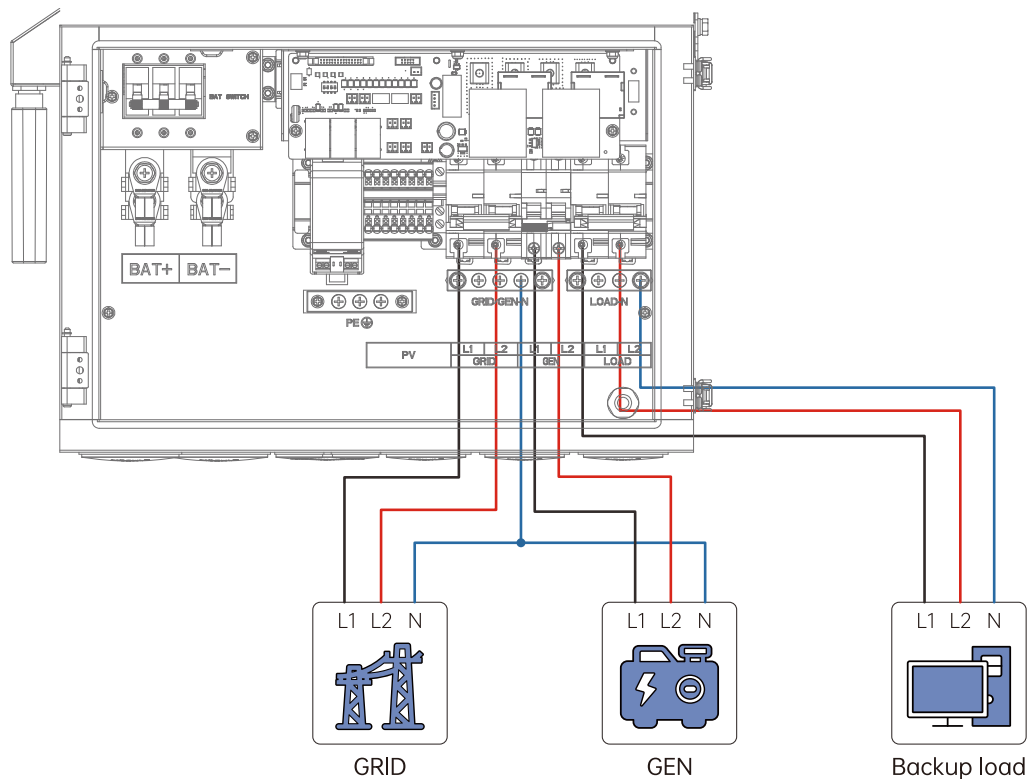

WARNING


- We have a common mode filter inductance between the GRID port and the LOAD port, short GRID-N and LOAD-N outside will damage this filter inductance.
- If using this interface to support load, please ensure that the N line of the load is connected to the "LOAD-N" port. DO NOT connect "Load-N" to "GRID-N" directly.
- Make sure the BACK-UP load power rating is within BACK-UP output rating, otherwise the inverter will shut down with an "over load" warning.
- When an "over load" appears, adjust the load power to make sure it is within the BACK-UP output power range, then turn the inverter back on.
- For the nonlinear load, please make sure the inrush power should be within the BACK-UP output power range.

3.7 CT connection


CT is short for "current transformer" and is used to detect the current of the grid.

The CT device is printed with black silk screen, please pay attention to distinguish L1 and L2.

If the customer uses a third-party CT device, it is necessary to connect the CT signal input to the reserved CT sampling input port of the inverter. Ensure that the third-party CT meets the standard of UL2808.

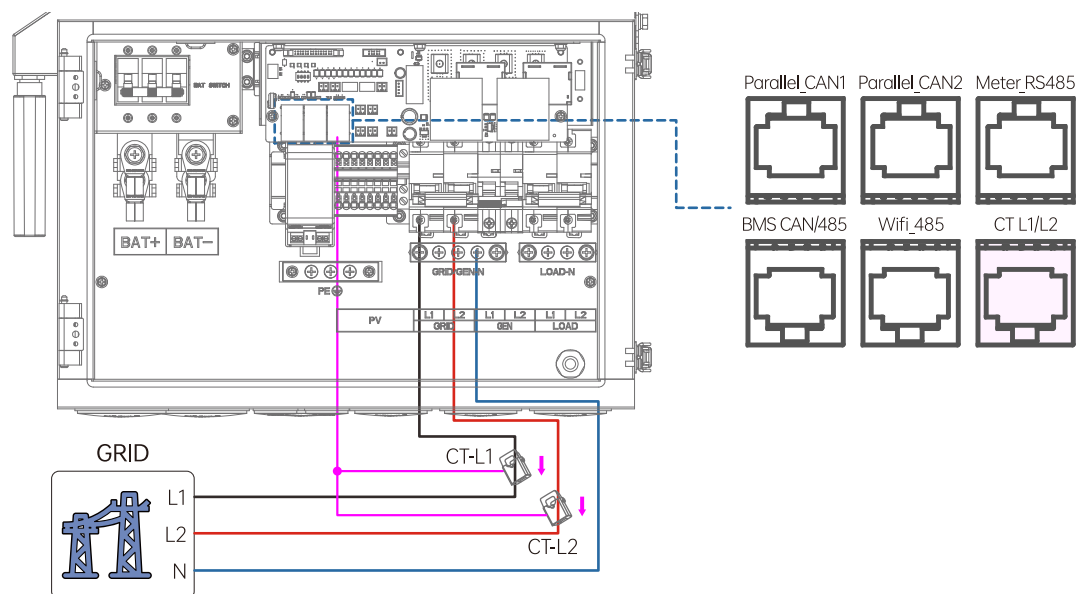

When the customer is connected to the home load, the CT location needs to be connected to the following location.

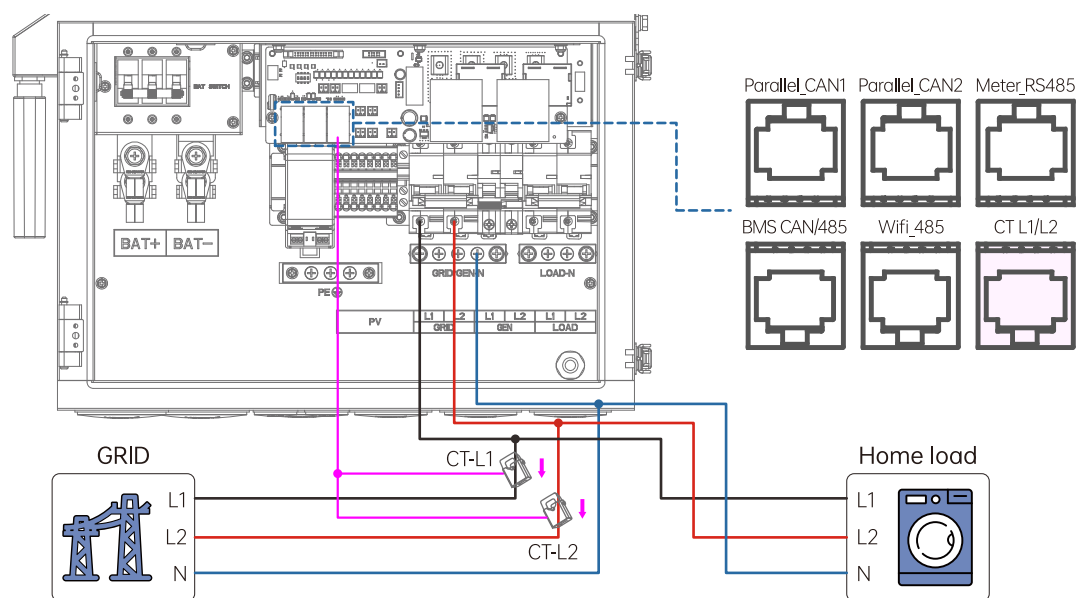


- If CT is not installed or installed reversely, the functions of "self-disable", "self-use", "peak-shift" ... will not be realized.
- The direction of the arrow on the CT, points from this inverter to the GRID!

3.8 Wi-Fi / GPRS connection

The Wi-Fi / GPRS connection port is in the lower left corner of the inverter. Insert the Wi-Fi device into the reserved port of the inverter, pay attention to the holes between them, and turn clockwise to tighten.


For the configuration of Wi-Fi plug, please refer to illustrations of the Wi-Fi plug.

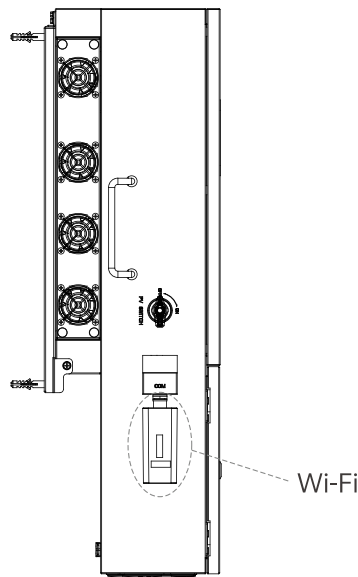

3.9 Earth connection

The ground cable should be connected to the ground cable of the power distribution box to prevent the original ground conductor from failing in emergencies.

Please connect the grounding wire of the distribution box to the grounding screw at the bottom of the inverter or the PE copper bar inside. When installing the grounding wire, it is not allowed to use multi-point grounding.

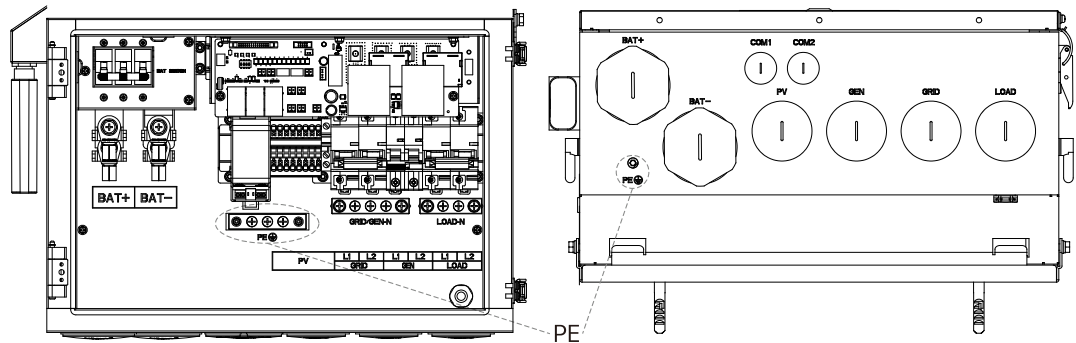

3.10 RSD (ON / OFF) installation


RSD function and ON / OFF function are the same button.

ON / OFF: The button is connected to dry contacts "DRY1_1B" and "DRY1_1A" through two terminals, if the two terminals are both shorted, the inverter will power on. In addition, the inverter reserves a remote power off terminals. The contact has been shorted before delivery. If necessary, customers can connect a external switch to control the inverter ON and OFF.


RSD: short for "rapid shutdown". PV system circuits installed on or in buildings include a rapid shutdown function to reduce shock hazard for emergency responders.

Release the button to disconnect 12V (12V_COM) output. The RSD transmitter is powered off, and the input of all PV modules is disconnected.

DC switch: PV input switch.

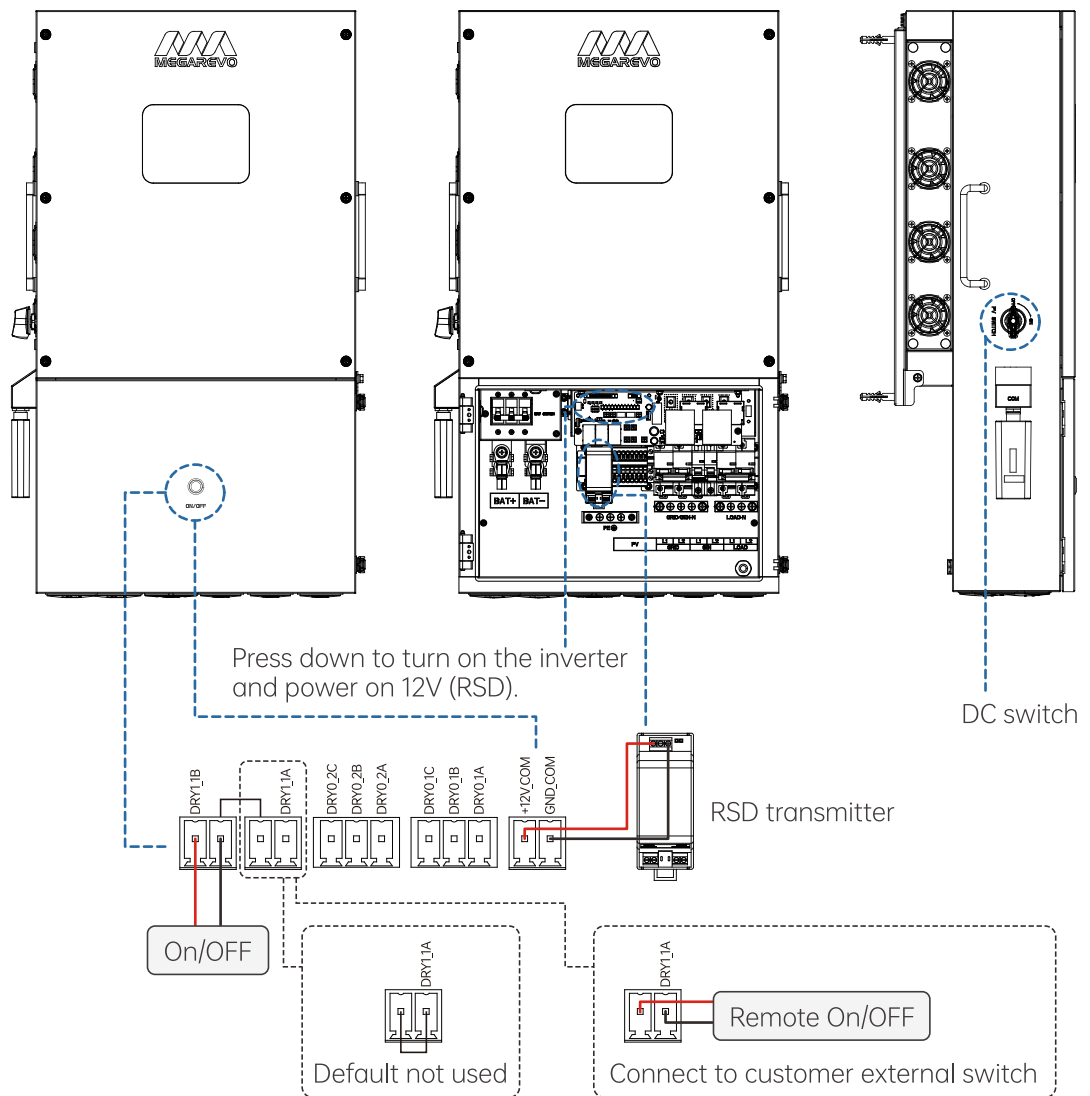

3.11 Function port definition

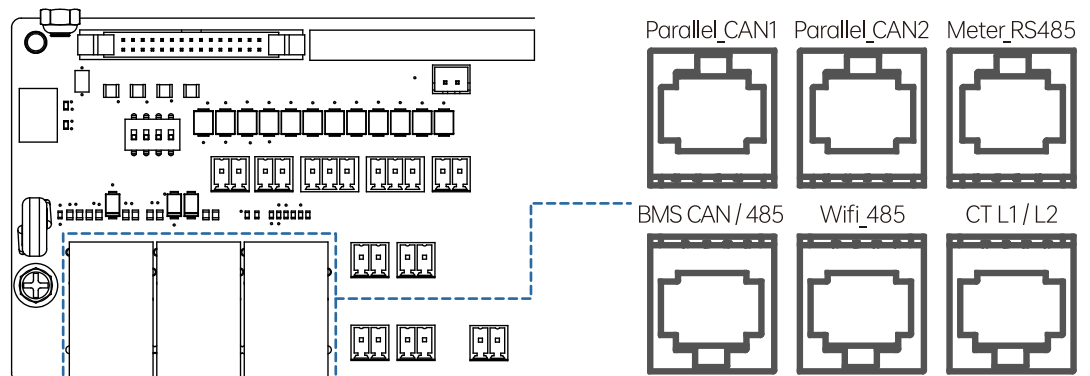


Parallel CAN1 / CAN2: Communication interface for connecting inverters.

Meter_RS485: Read the inverter data and send it to the display screen.

BMS-485 / BMS-CAN: BMS communication for lithium battery.

Wi-Fi_485: Standby crystal port for the Wi-Fi module.

CT L1 / L2: For external grid side CT to detect current size.

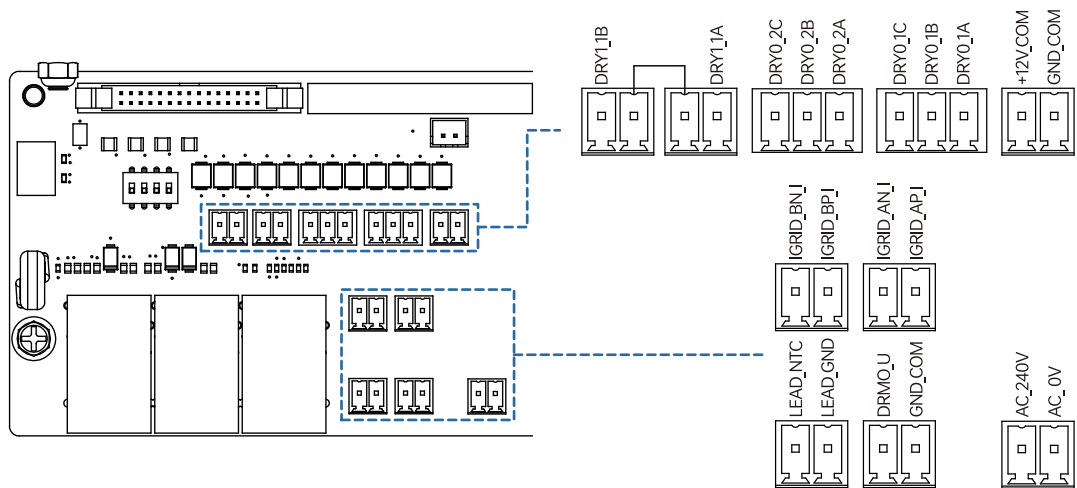

DRY1_1B / DRY1_1A: Used to start or stop the inverter. Two contacts are connected to the external complete system shutdown button.

DRY0_2A (common): Reserved dry contact port.

DRY0_2B (normally open): Reserved dry contact port.

DRY0_2C (normally closed): Reserved dry contact port.

DRY0_1A (common): Together with the other two contacts, the switch function is formed.

DRY0_1B (normally open): In the generator automatic mode, the contact is closed when starting.

DRY0_1C (normally closed): In the generator automatic mode, the contact is disconnected when starting.

+12V_COM / GND_COM: Used to connect Rapid Solar Shutdown (RSS).

GRID_AN_I / IGRID_AP_I: CT-L1 standby signal port.

IGRID_BN_I / IGRID_BP_I: CT-L2 standby signal port.

LEAD_NTC / LEAD_GND: Lead-acid battery temperature sampling input interface.

DRMO_U / GND_COM: Reserved dry contact port.

AC_240V / AV-0V: AC240V reserved output port.




WARNING

- Qualified electrician will be required for the installation.

3.12 Wiring system for inverter

Figure 3-1

Wiring system for inverter

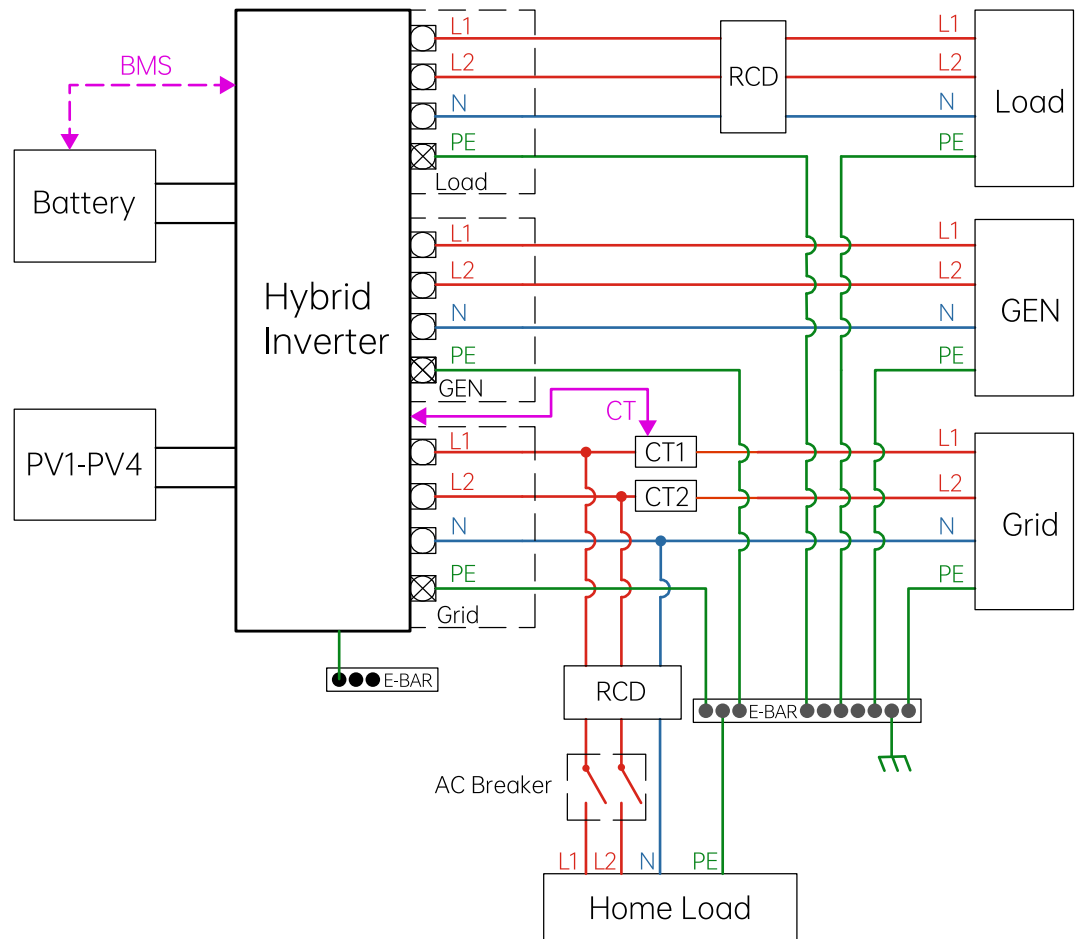

3.13 Generator application scenario wiring diagram

Figure 3-2

Connect to generator port


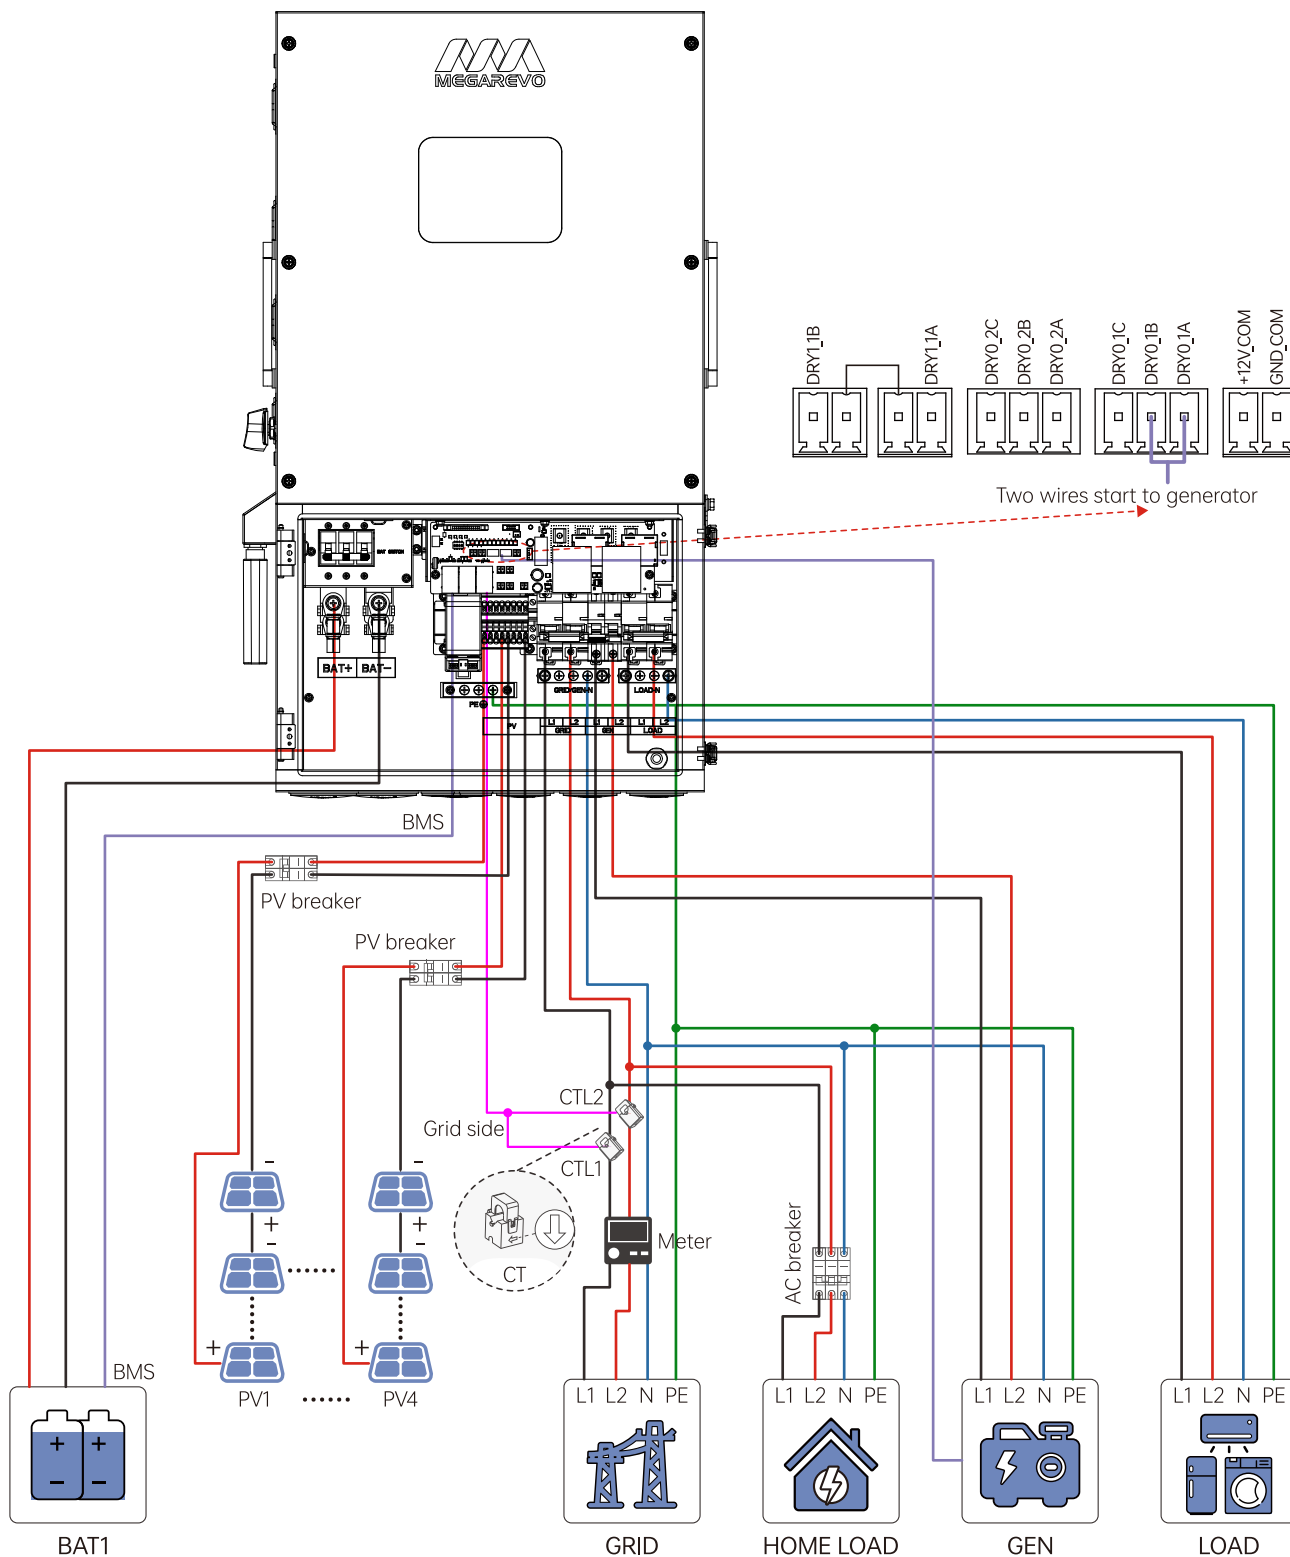


Figure 3-3 Connect to grid port

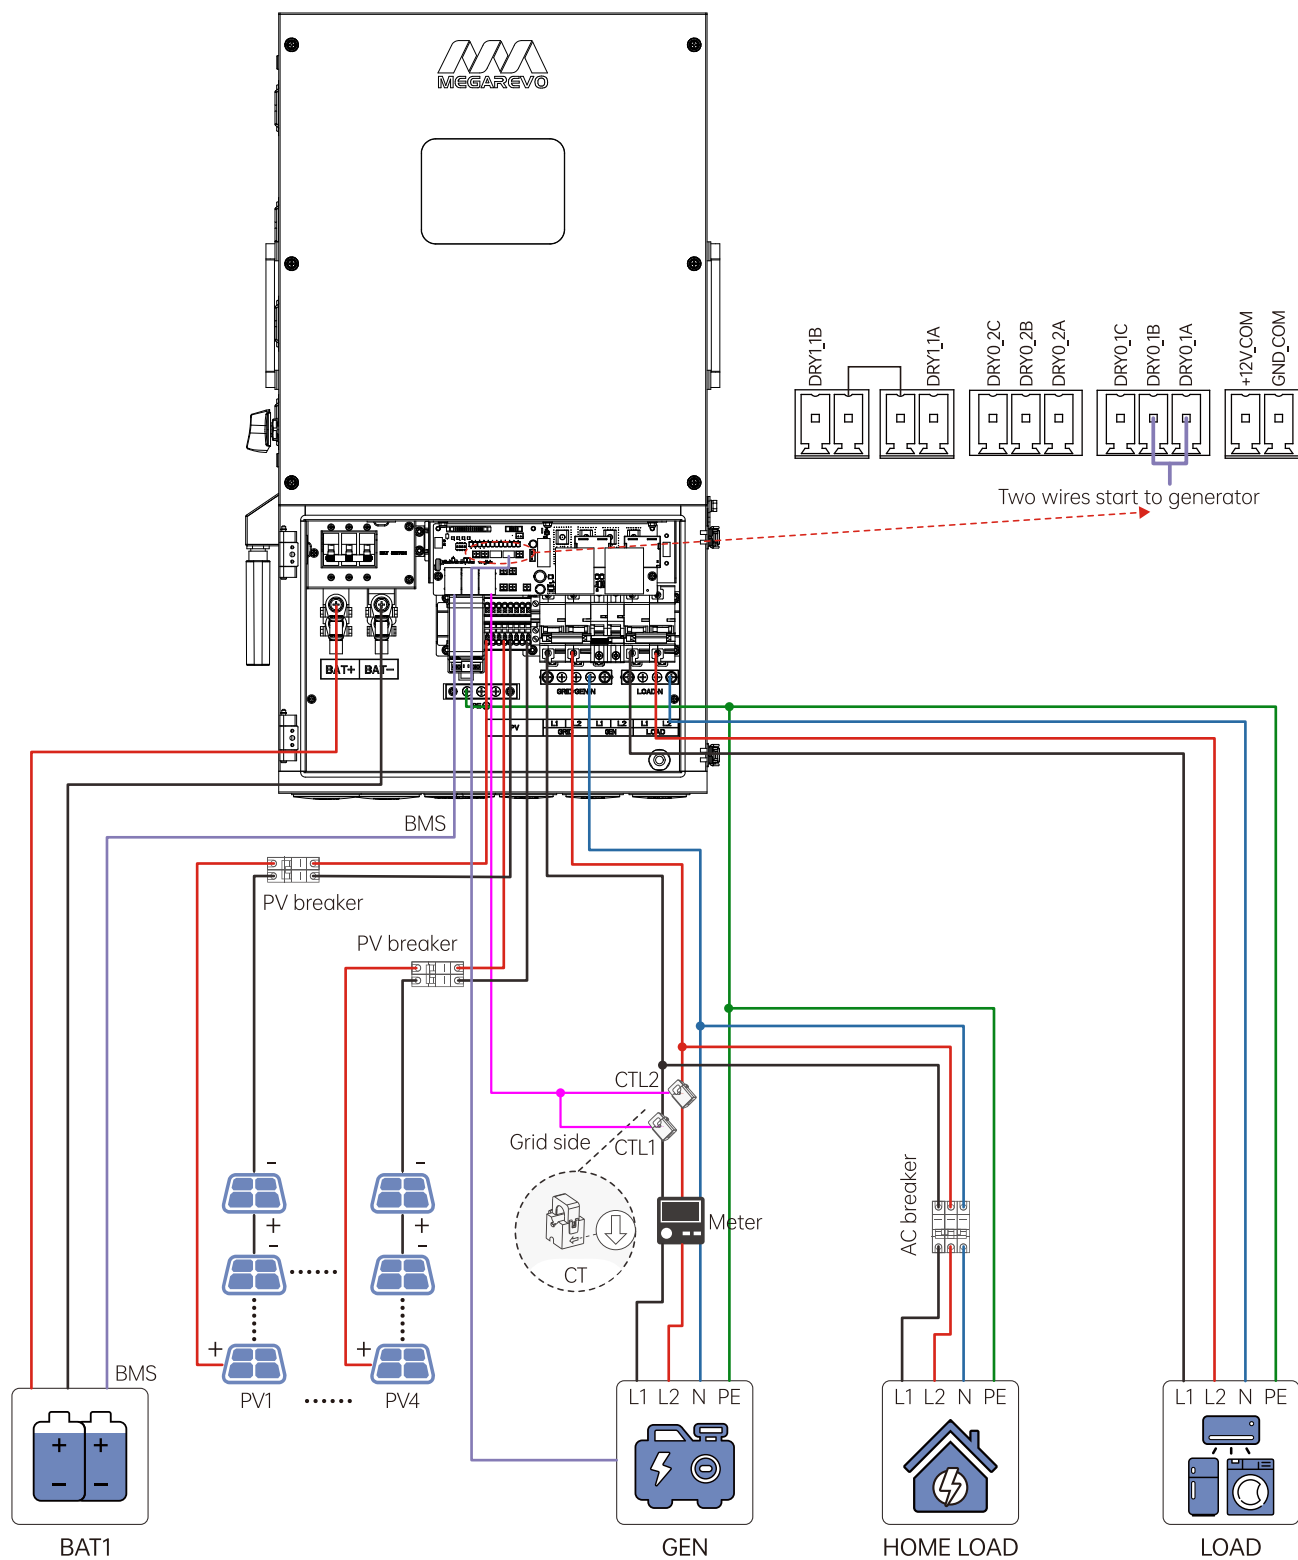

3.14 Split phase (120 / 240Vac) parallel connection diagram

GRID standard: US
GRID set: 120V/240V

Parallel set:
Master set:
parallel num: 3 parallel adr: 1
Master/slave: Master Common CT: Yes
Parallel en: Enable
Charge curr: xx A Discharge curr: xx A

Slave 1 set:
parallel num: 3 parallel adr: 2
Master/slave: Slave Common CT: Yes
Parallel en: Enable


Slave 2 set:
parallel num: 3 parallel adr: 3
Master/slave: Slave Common CT: Yes
Parallel en: Enable

GEN set:
Start SOC: xx% Stop SOC: xx%
Charge curr: xx A MAX run time: xx hour
Cooldown: xx hour


Manual contrl:
GEN en: enable Gen charge: enable
Auto start: disable Manual start: enable
Connect to grid: disable

Auto contrl:
GEN en: enable Gen charge: enable
Auto start: enable Manual start: disable
Connect to grid: disable

Note: Set the master and slave at same time

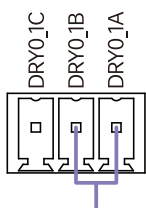


Two wires start to generator

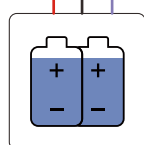

BATTERY

AC breaker depends on home load current.

The CT arrow points in the directions of the grid.

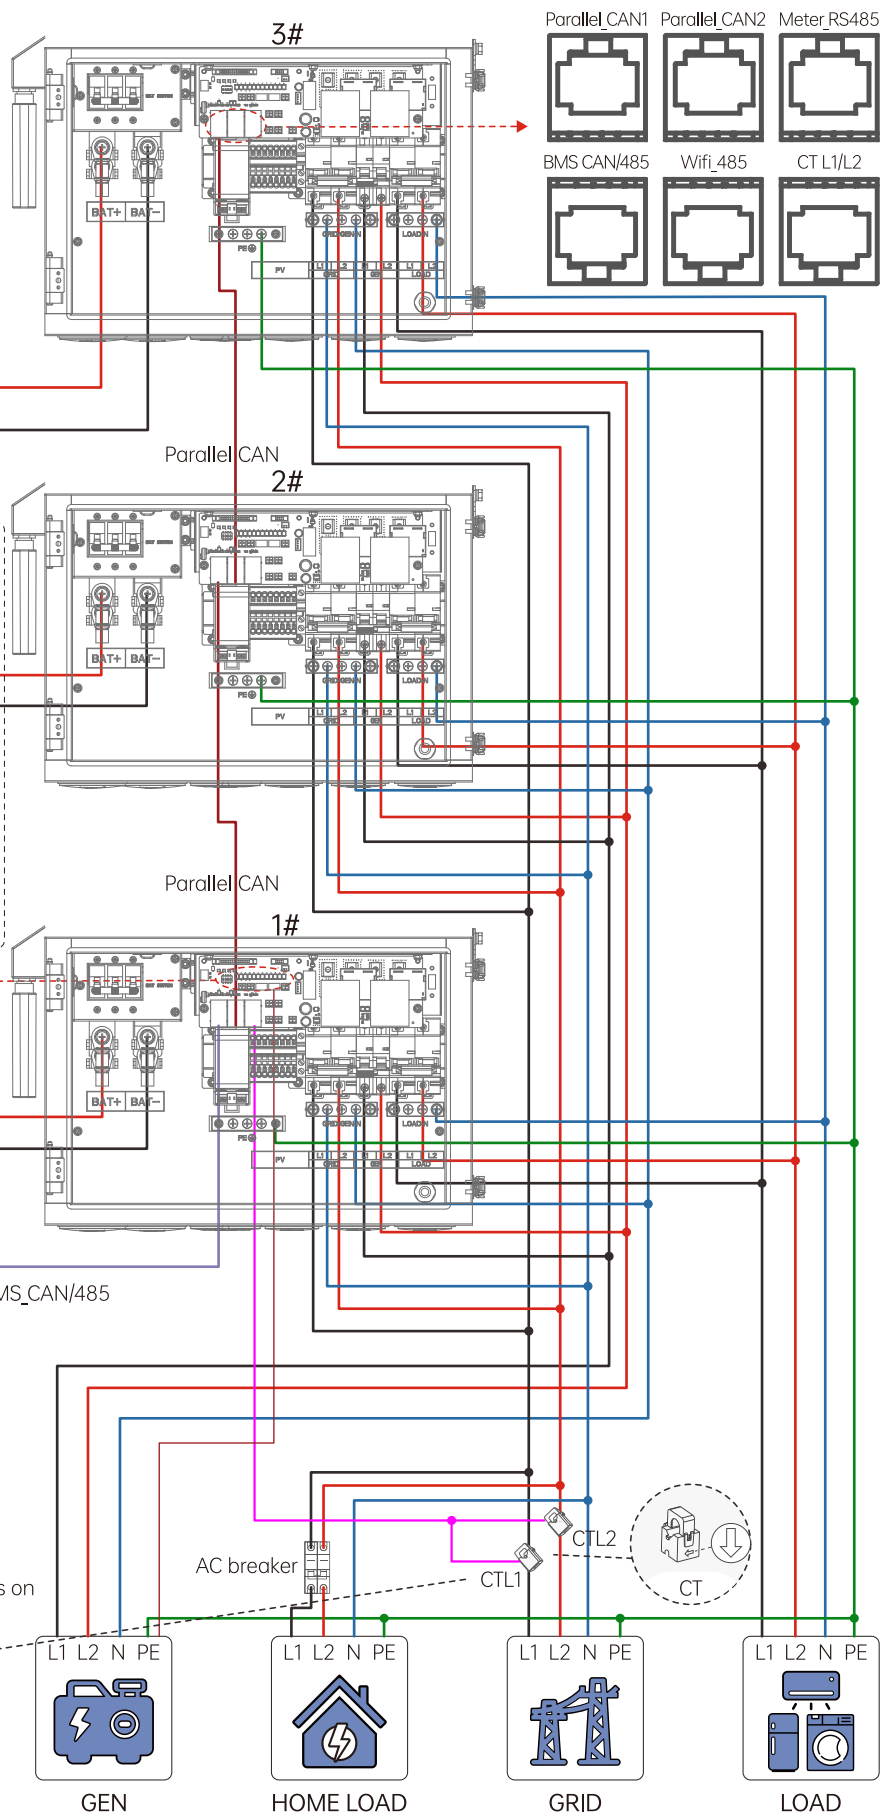

3.15 Parallel connection for 120 / 208 three phase

GRID standard: US
GRID set: 120V/208V

Parallel set:
Master set:
parallel num: 3 parallel adr: 1
Master/slave: Master Common CT: Yes
Parallel en: Enable
Charge curr: xx A Discharge curr: xx A
Phase set: A 3Phase en: enable

Slave 1 set:
parallel num: 3 parallel adr: 2
Master/slave: Slave Common CT: Yes
Parallel en: Enable
Phase set: B 3Phase en: enable


Slave 2 set:
parallel num: 3 parallel adr: 3
Master/slave: Slave Common CT: Yes
Parallel en: Enable
Phase set: C 3Phase en: enable

GEN set:
Start SOC: xx% Stop SOC: xx%
Charge curr: xx A MAX run time: xx hour
Cooldown: xx hour


Manual contrl:
GEN en: enable Gen charge: enable
Auto start: disable Manual start: enable
Connect to grid: disable

Auto contrl:
GEN en: enable Gen charge: enable
Auto start: enable Manual start: disable
Connect to grid: disable

Note: Set the master and slave at same time

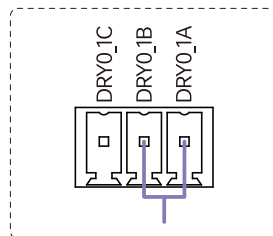

Two wires start to generator

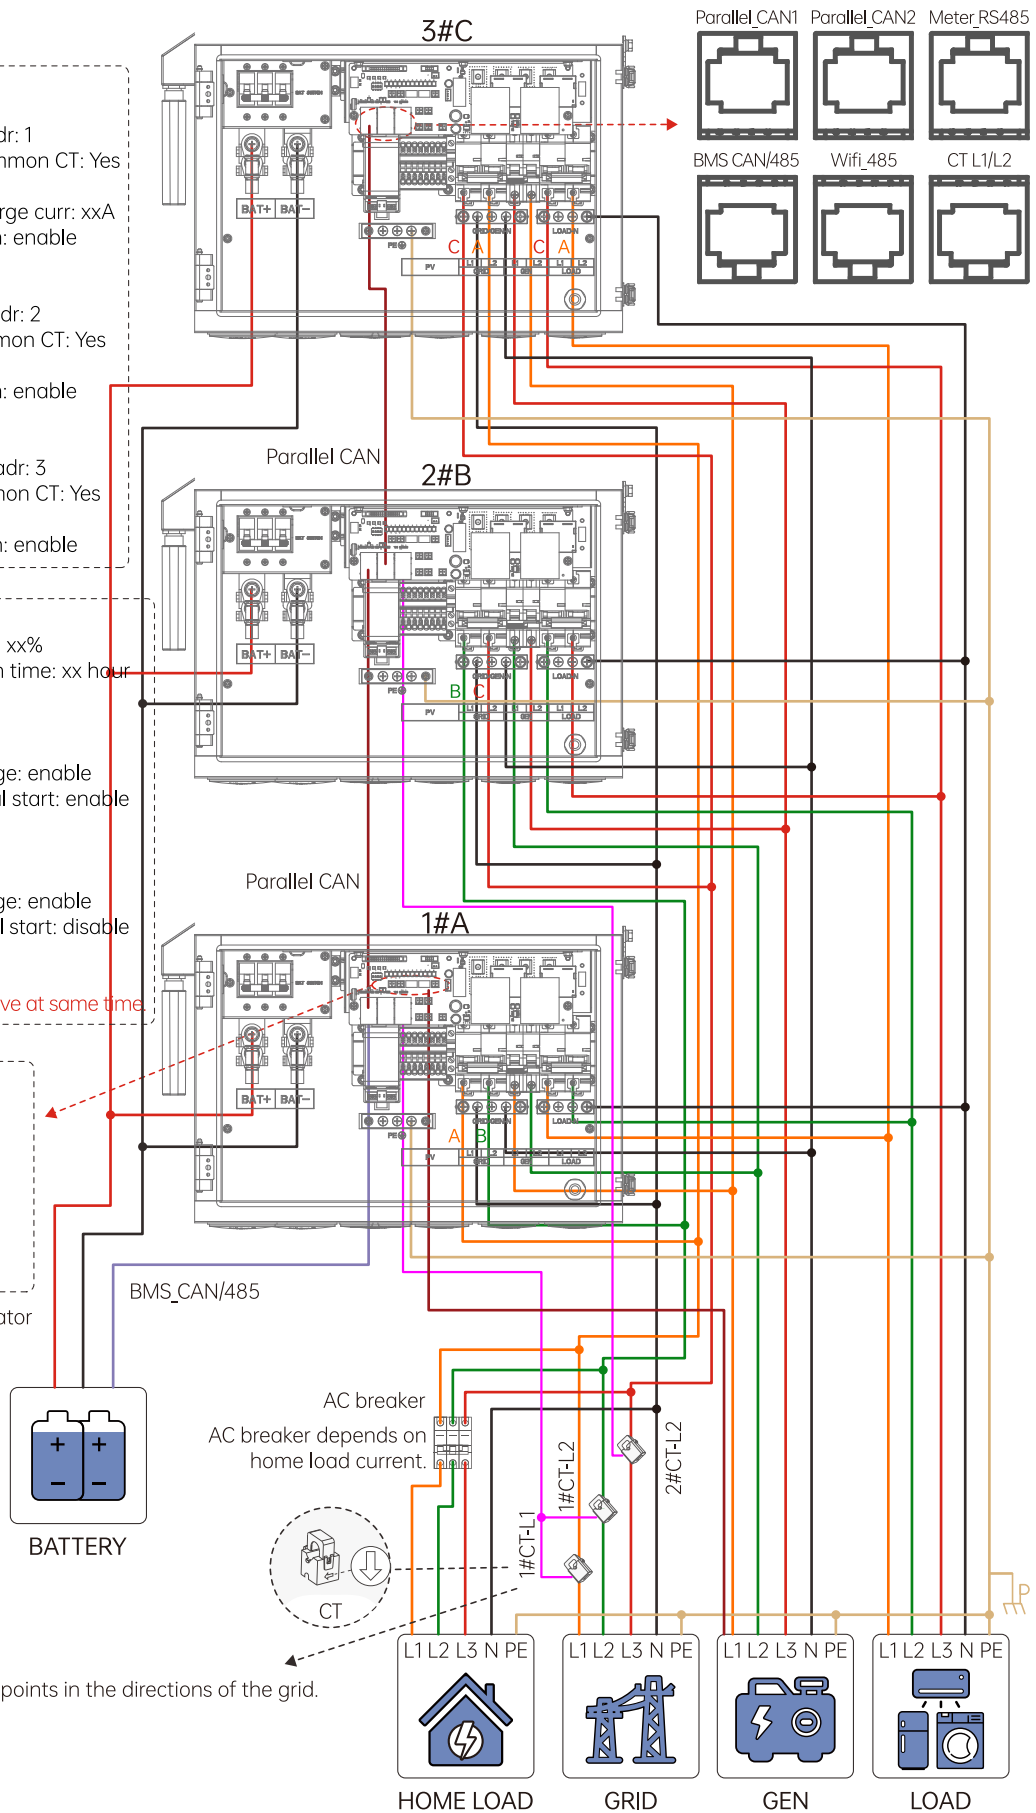


The CT arrow points in the directions of the grid.

3.16 AC couple (micro-inverter) connection

In the occasion without generator use, we recommend the user to use the generator terminal to be connected. The power of PV inverters or micro inverters can be measured by the internal sensor of the hybrid inverter.

Figure 3-4

Connect to generator port

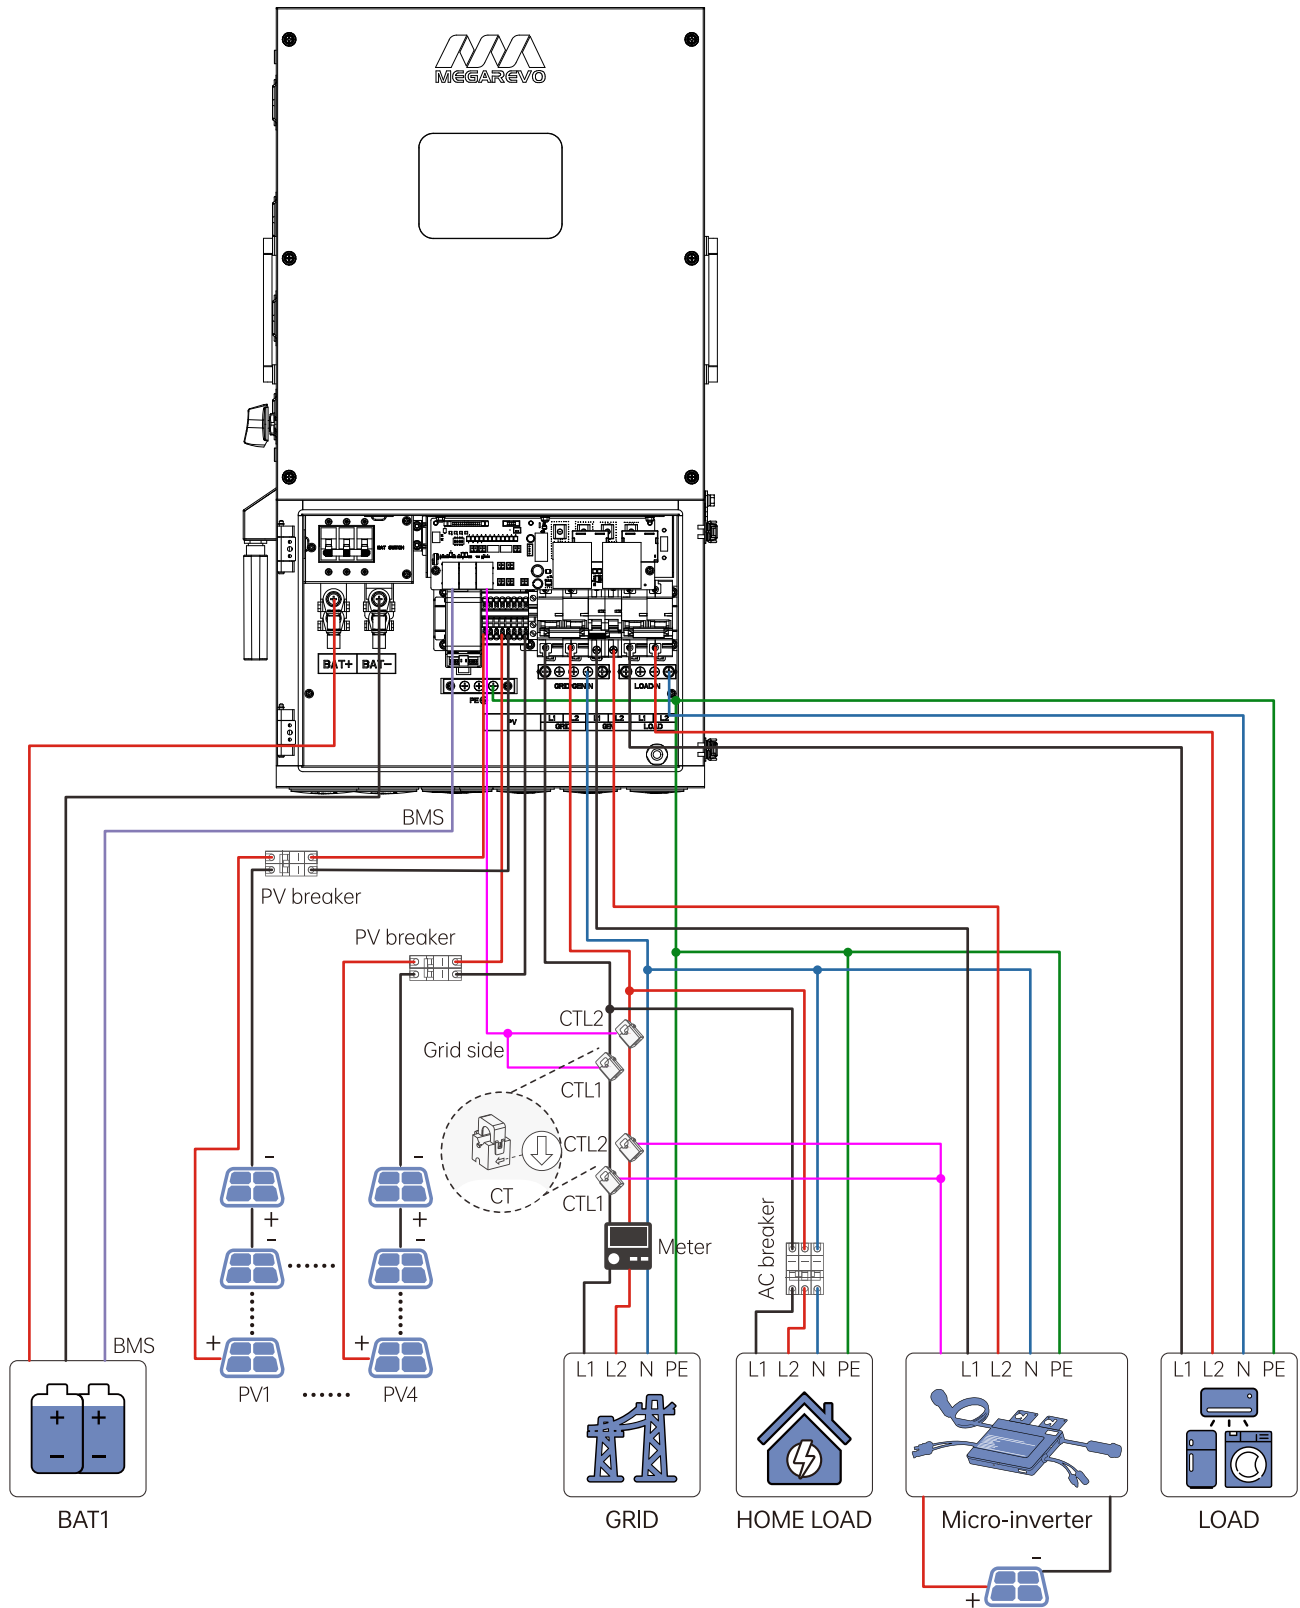


4 Operation

4.1 Power ON / OFF

Once the device is properly installed, press the ON/OFF button (located on the front of the chassis) to put the machine into operation. In any case, the system can operate only when the ON/OFF button is pressed, otherwise it is always in standby state.

4.2 Main screen

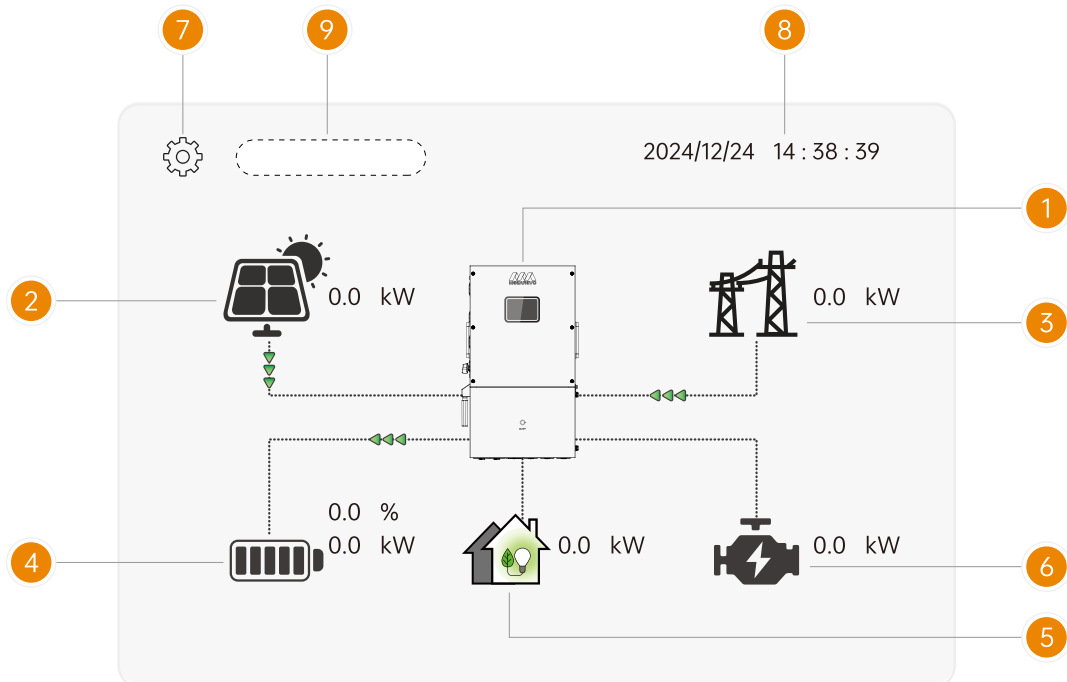


Code	Name	Explanation
1	Hybrid inverter	Click hybrid inverter to enter the working status interface of the hybrid inverter.
2	PV	Display the real-time PV power. Click PV to enter the working status interface of PV.
3	Grid	Display the real-time grid power. Click grid to enter the working status interface of grid.
4	Battery	Display the real-time battery power and percentage of battery surplus capacity from the BMS. Click battery to enter the working status interface of battery.
5	Load	Display the real-time load power. Click load to enter the working status interface of load.
6	Generator	Display the real-time generator power. Click generator to enter the working status interface of generator.


7	Setting	Users can click setting to enter the settings interface.
8	Data/Time	Date and time of the inverter.
9	Alarm information	The alarm information of the current inverter is displayed. For details, see the alarm information table in the appendix.



- It takes 2 seconds to upload the data to the screen. Please wait patiently.

4.3 LCD operation flow chart

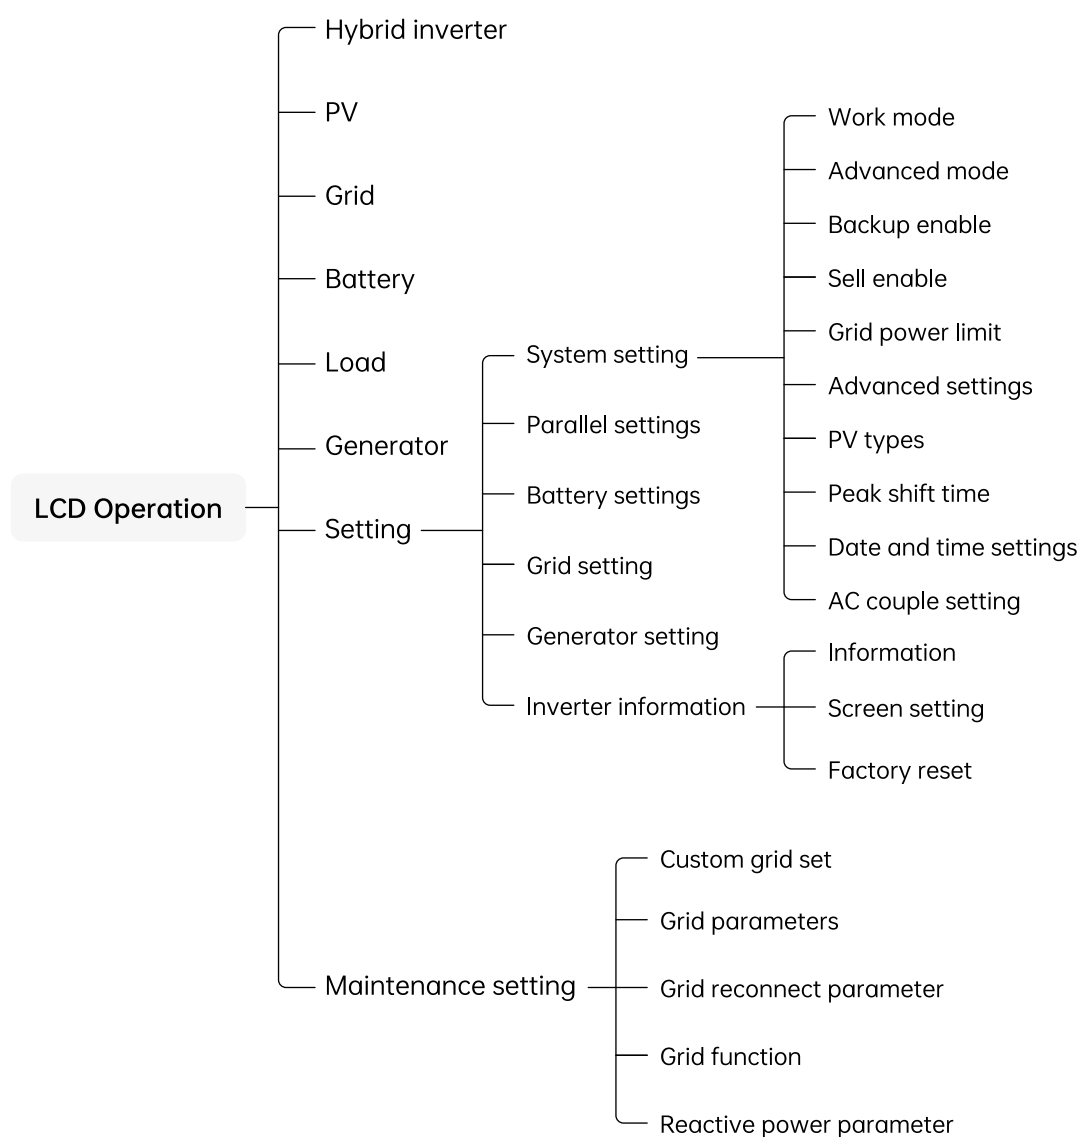

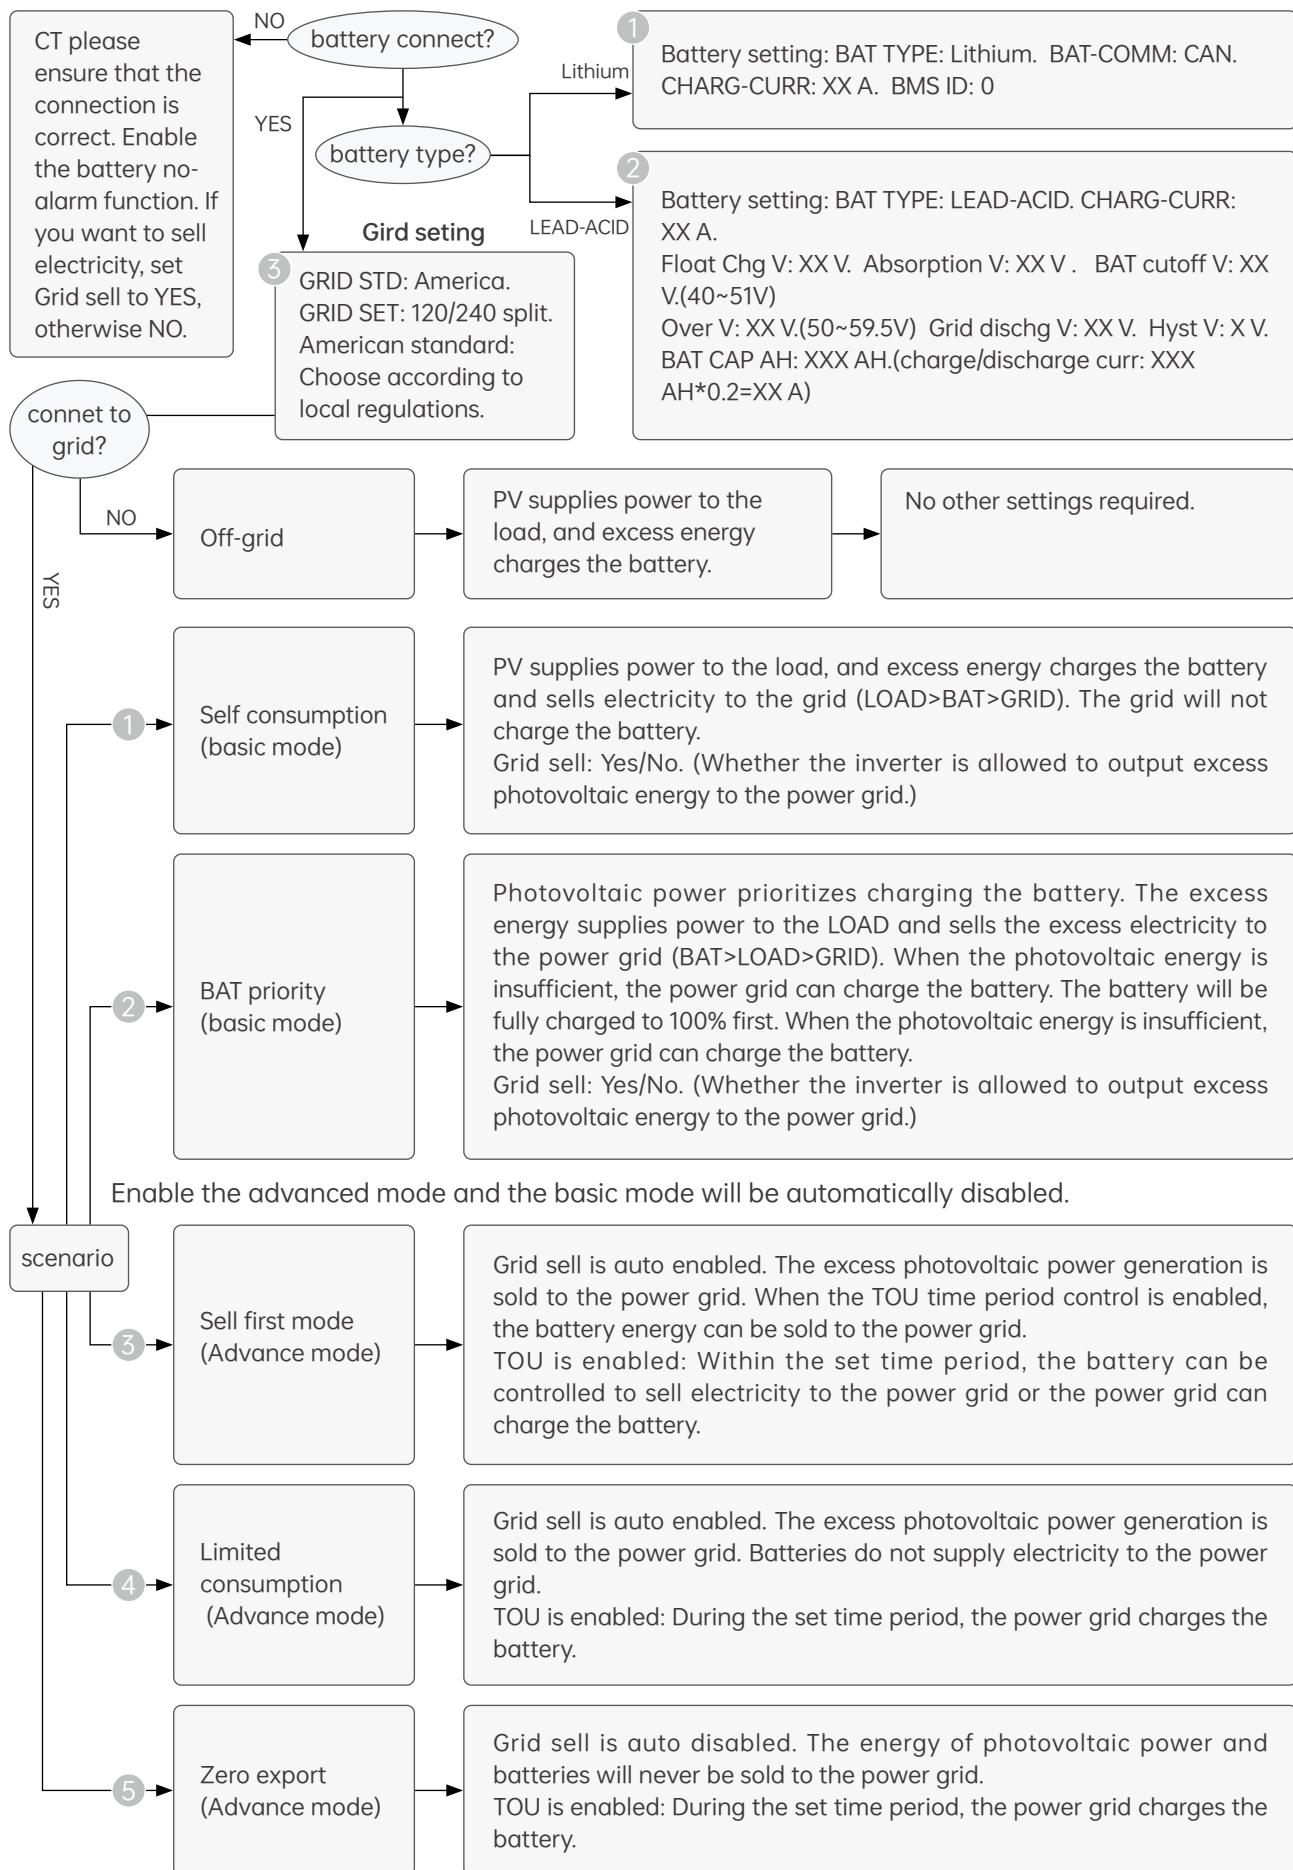

4.4 Energy statistical display

Solar							
	Voltage		Current		Power		
PV1	0.0	V	0.0	A	0	W	
PV2	0.0	V	0.0	A	0	W	
PV3	0.0	V	0.0	A	0	W	
PV4	0.0	V	0.0	A	0	W	

Energy		
Day	0.0	kWh
Total	0.0	kWh


- Data panel of PV**
- Display the working parameters of the four channels of PV (PV1, PV2, PV3, PV4), including real-time voltage, current, and power. (PV input type can be set in the settings).
 - Display the cumulative charging capacity of the PV, including daily and total accumulated energy.

Battery					
Voltage	0.0	V	Charge Volt	0.0	V
Current	0.0	A	Charge Curr	0.0	A
SOC	0	%	Discharge Curr	0.0	A
Temp(°C)	0.0		Charge EN	Disable	
Power	0	W	Discharge EN	Disable	
Bat Type			Force Charge	Disable	

	Charge		Discharge	
Day	0	kWh	0	kWh
Total	0	kWh	0	kWh

- Data panel of battery**
- Display the working parameters of the battery, including real-time voltage, real-time current, battery surplus capacity, battery temperature, battery power, and battery type.


- 2 Display battery charging voltage, charging current, and discharge current.
Three working states of batteries (from BMS), including charging, discharging, and forced charging.
- 3 **Charge en:** Charge enable. **Discharge en:** Discharge enable.
- 4 Accumulated discharge and charging capacity of the battery, including daily and total accumulated energy.

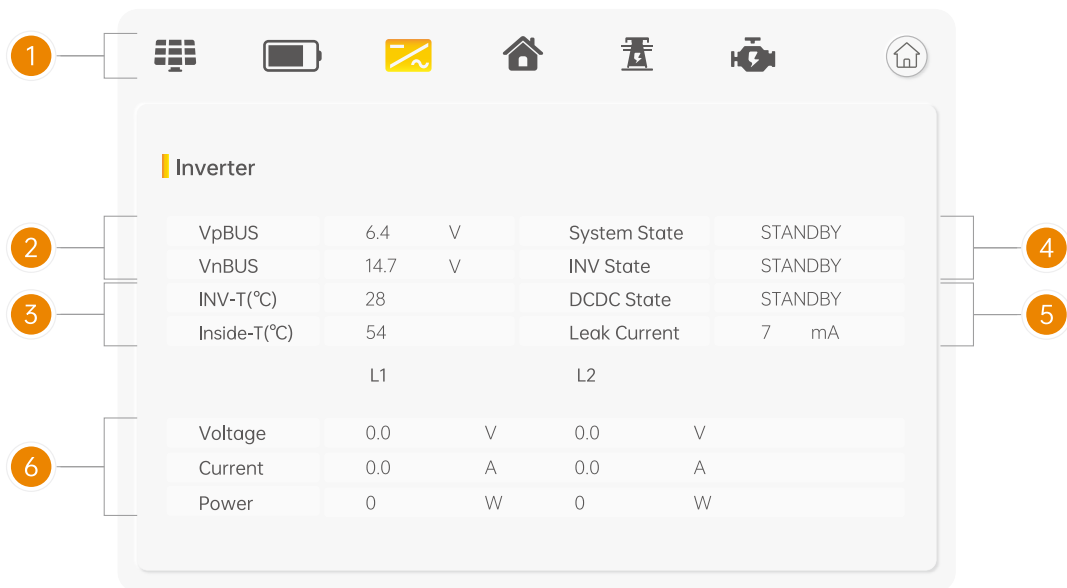

Data panel of hybrid inverter

- 1 Users can click on the icon above to switch device status data (PV, Battery, Hybrid inverter, Load, Grid, BUS) and return to the home page. (not to be repeated later)
- 2 **VpBUS:** Real-time voltage of bus capacitor of the inverter.
VnBUS: Real-time voltage of bus capacitor of the inverter.
- 3 **Temperature:**
INV-T(°C): INV temperature.
Inside-T(°C): Internal ambient temperature of the inverter.
- 4 Display status information, including system status, Inverter status, and DCDC status.
System status: Display complete inverter status information, include INIT, STANDBY, PV GRID, BAT GRID, BYP, AC BAT CHG, HYBRID POW etc.
INV: Displays the inverter status information, including: STANDBY, OFF GRID, GRID, OFF GRID PL, INV TO PFC.
GRID: Grid connected state.
OFF-GRID: Off-GRID working state.
OFF GRID PL: Working state of off-grid conversion to grid connection.
INV TO PFC: Status of power by public grid turn into on grid working mode.
DCDC status: Displays charging and discharging status information, include STANDBY, CHARGE, DISCHARGE.


- 5 **Leak current:** Real-time leak current of the inverter.
- 6 Display the real-time voltage, current, and power of the device.

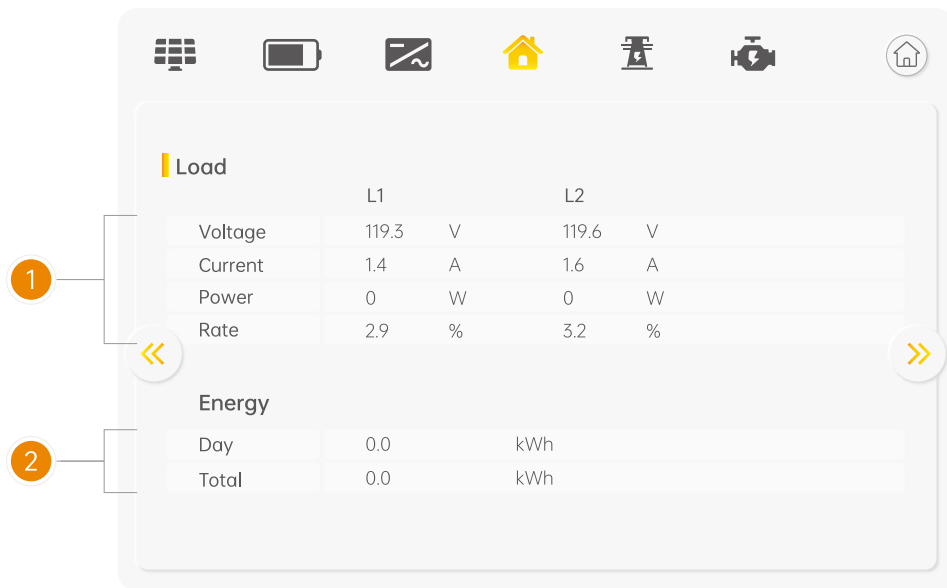


User can click << to return to the previous page, and click >> to enter the next page. (not to be repeated later)

Load/page one

- 1 Display the working parameters of the load, including real-time voltage, current, power, and load rate.
- 2 Accumulated usage of load, including daily and total accumulated energy.

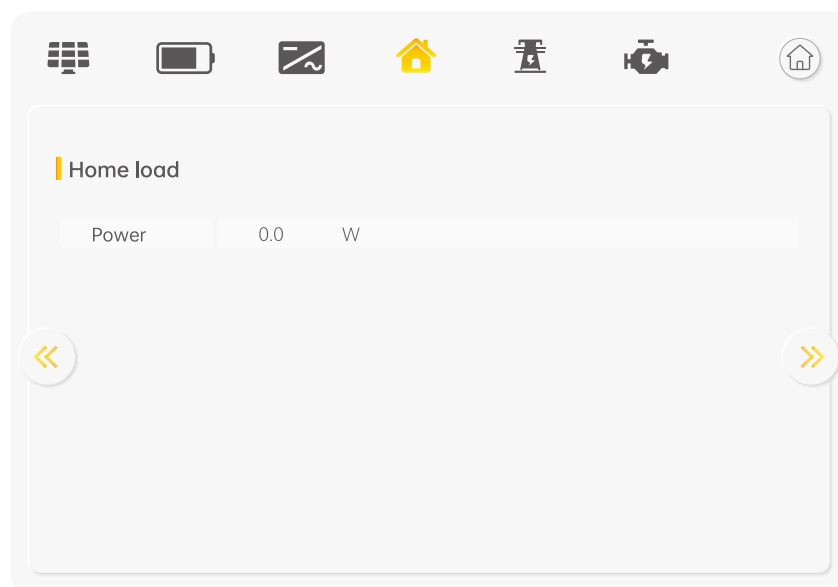


When set home load en to "ENABLE", if you have a load connected to the mains port, you can see its home load power.

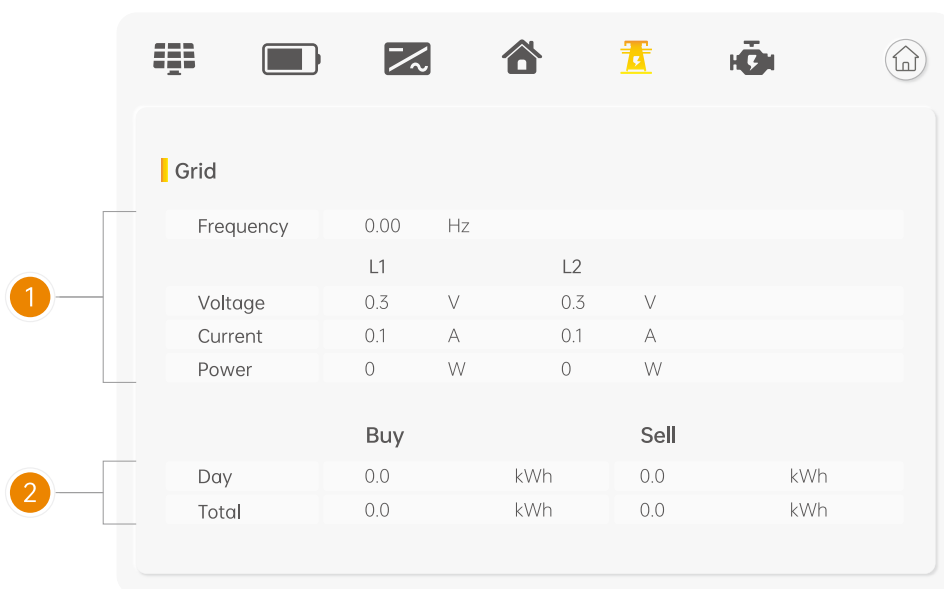

Data panel of grid


- 1 Display the working parameters on the grid, including frequency, real-time voltage, real-time current, and real-time power.
- 2 Accumulated energy from the power grid to the equipment(Sell) and accumulated energy from equipment to the power grid(Buy), including daily and total accumulated energy.

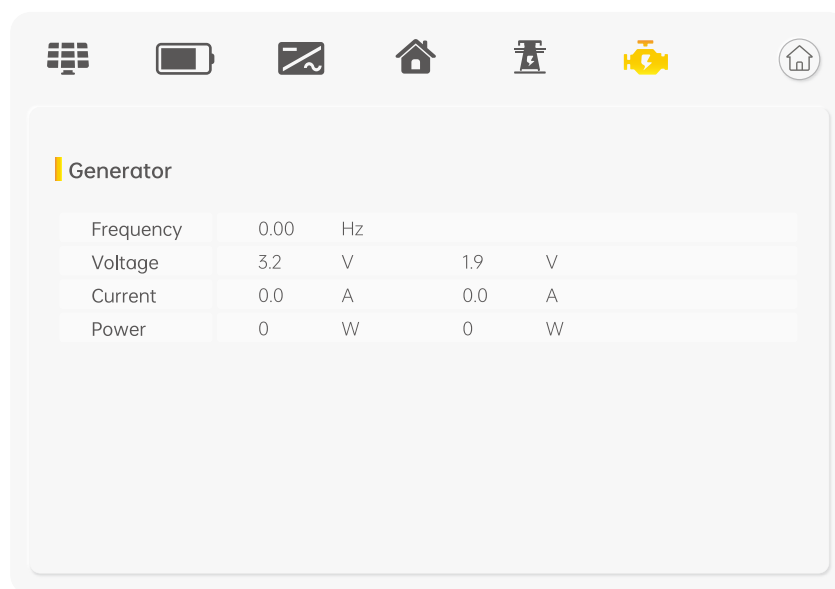

Display the working parameters of the generator, including real-time voltage, current, and power.

5 Basic setup menu


5.1 Input password

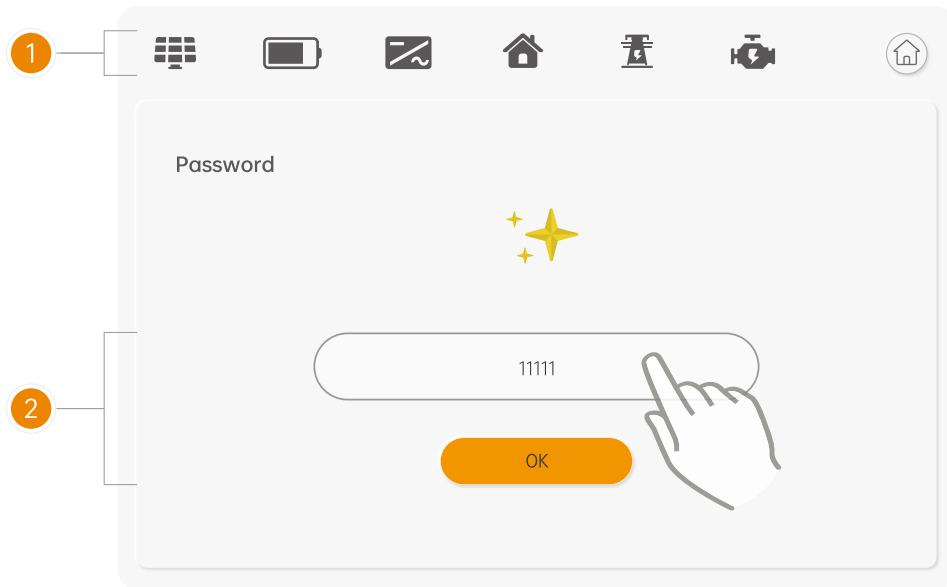







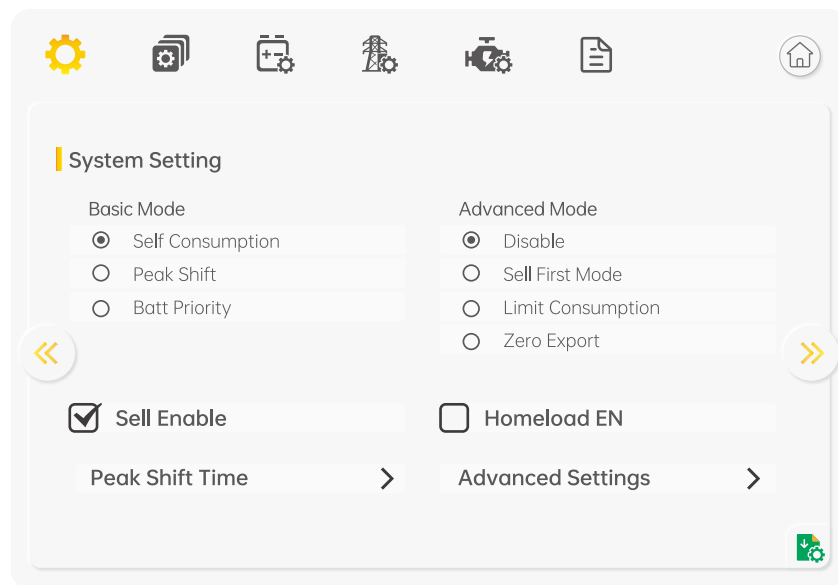

Input password


- 1 Users can click on the icon above to enter device status data (PV, Battery, Hybrid inverter, Load, Grid, Generator) and return to the home page.
- 2 To enter the settings, a password is required. The default password is 1111. Click OK to enter the settings interface.

5.2 Enter the settings interface



Users can click on the icon above to switch between setting options, machine related information, and return to the home page.

-  System setting
 -  Parallel setting
 -  Battery setting
 -  Grid setting
 -  Generator setting
 -  Machine information
 -  Return home page
-  After modifying the parameters, the user needs to click on this icon to confirm the modification.

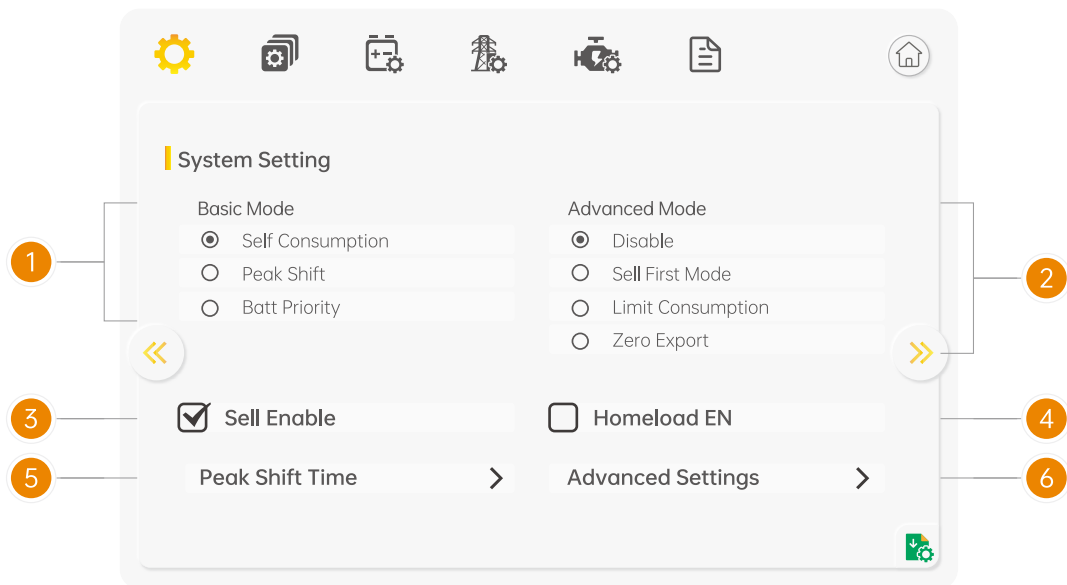

Input password

- 1 **Basic mode:** Users have three basic modes to choose from, Self consumption, Peak shift, and battery priority.


- 2 **Advanced mode:** There are four options here: Disable, Sell first mode, Limited consumption mode and zero export mode.

- 3 **Sell enable:** Whether the inverter is allowed to sell electricity to the grid. The option is checked, which means that the inverter can generate electricity to the grid. If this option is not selected, the inverter is prohibited from selling power to the power grid.

- 4 **Homeload en:** After this function is enabled, home load statistics is enabled for the inverter and power is correctly displayed.


- 5 **Peak shift time:** Click to enter the peak shift mode time period setting interface.

- 6 **Advanced settings:** Users can click **advanced settings >** to enter the advanced settings interface.
There are also some attributes of these mode: Global grid charge enable, PV charge only, Bat charge on priority, Time-of-use enable and 6 time-of-use slots.

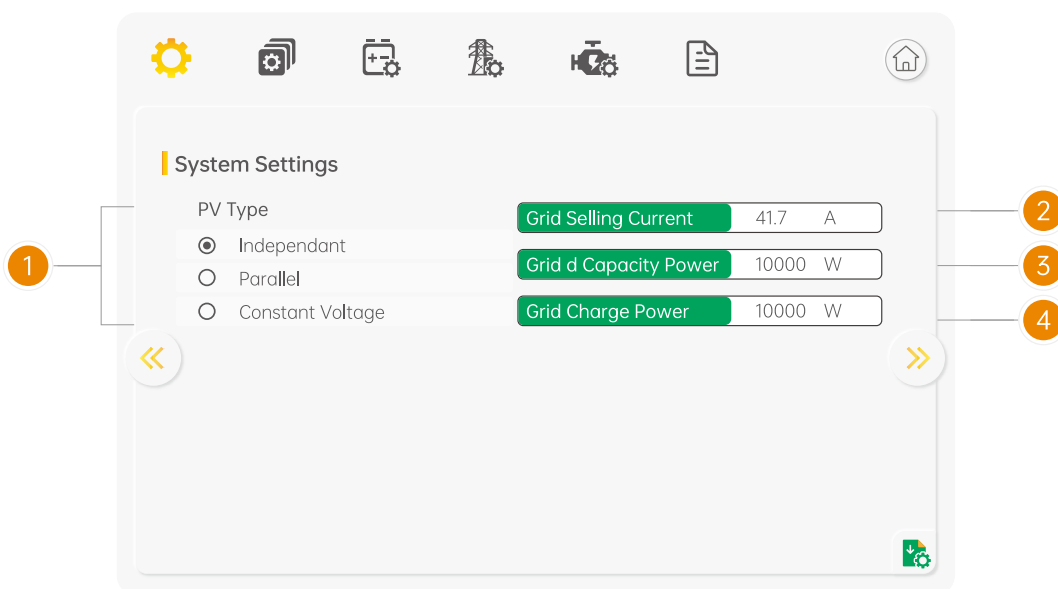


System setting

- 1 Users can set PV types, including independent, Parallel and constant voltage.
Default parameters vary by inverter model, which can be set for the inverter to sell current to the power grid.
- 2 Grid export limit, Grid selling current, Compare the two parameters and take the minimum value to take effect.
- 3 The maximum power drawn by the battery and load from the grid.
The limiting threshold for battery charging power drawn from the grid (applicable exclusively during charging mode, i.e., the battery's maximum charge power shall not exceed this value).
- 4

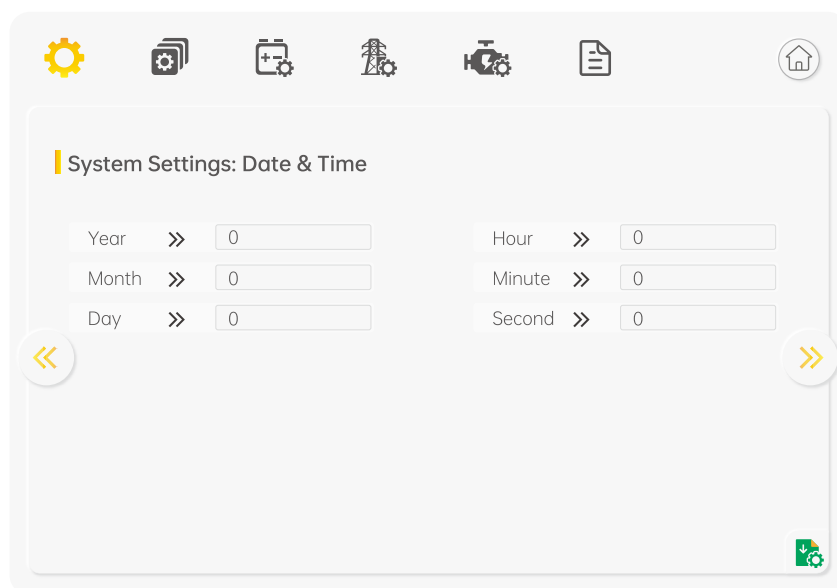

Date and time settings:

Users can manually modify the year, month, day, hour, minute and second.
The year input range should be between 2000 and 2099.

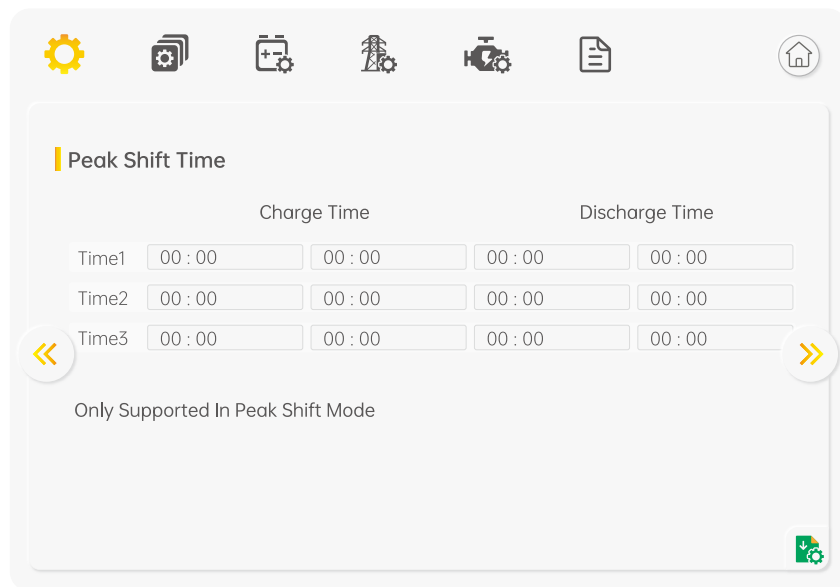


Setting of charging and discharging time for peak shift.

When the working mode is peak shift, users need to enter this interface to set the charging and discharging time. And users need to manually input the start charge/discharge time and the end charge/discharge time.

WORK TIME:

1. The maximum allowable setting time is 24 hour (one day), It is allowed to set six different charging and discharging states within 24 hours (time1 twice, time2 twice, time3 twice), The inverter runs repeatedly every day according to the set time.

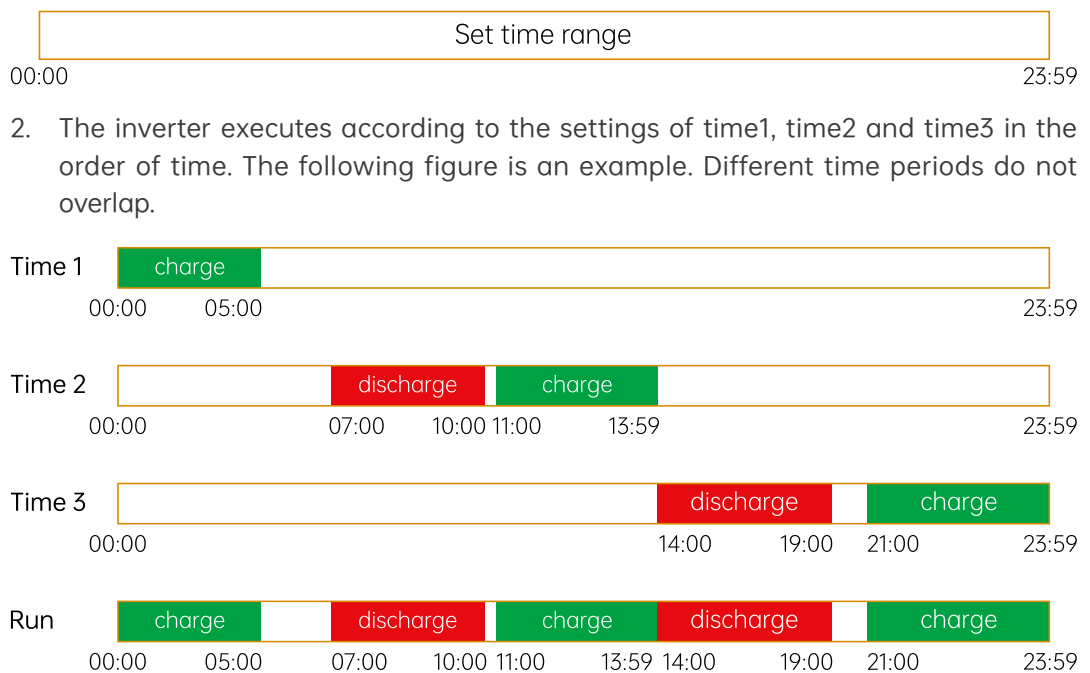


3. If you want to set a continuous charging time from the first night to the next morning. For example, you want to charge the battery from the first day 21:00pm to the next day 5:00am, divide this time period into two time periods (21:00~23:59, 00:00~05:00), and select two charging time periods from time1, time2 and time3 and set them.

5.2.1 Work mode


Inverter provides multiple work modes based on different requirements.

Work mode: self-use


1. When PV, Grid, Battery is available:

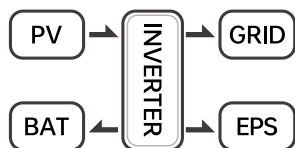

A. Solar energy provides power to the loads as first priority, if solar energy is sufficient to power all connected loads, solar energy excess power will provides to charge battery, and then redundant power will feed to grid.

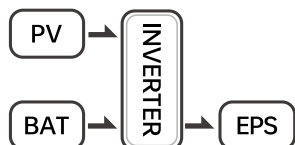


B. Solar energy provides power to the loads as first priority, if solar energy is not sufficient to power all connected loads, battery energy will supply power to the loads at the same time.

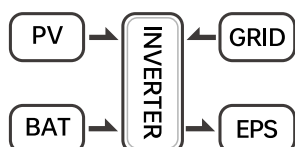


C. Solar energy provides power to the loads as first priority, if solar energy and battery are not sufficient to power all connected loads, utility energy (Main grid) will supply power to the loads with solar energy at the same time.

2. When PV, Grid is available (without battery):

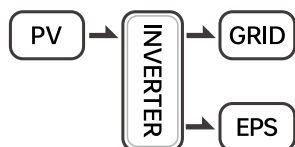


A. Solar energy provides power to the loads as first priority, if solar energy is sufficient, the excess power will be fed to grid.

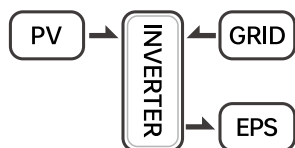


B. Solar energy provides power to the loads as first priority, if solar energy is not sufficient to power all connected loads, Grid energy will supply power to the loads at the same time.

3. When PV, Battery is available (Grid is disconnected):

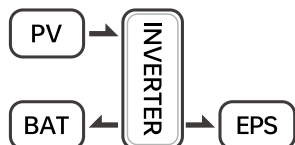


A. Solar energy provides power to the loads as first priority, if solar energy is sufficient to power all connected loads, solar energy will provides to charge battery.

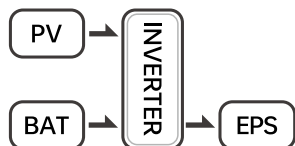


B. Solar energy provides power to the loads as first priority, if solar energy is not sufficient to power all connected loads, battery energy and solar energy will supply power to the loads at the same time.

Work mode: peak shift


1. When PV, Grid, Battery is available:

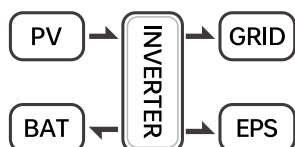


A. On charge time, solar energy will charge battery as first priority. The excess energy will supply power to the loads. If solar energy is sufficient to supply loads and charge battery, and If there's still some extra energy, then the excess power will feed the power to grid.

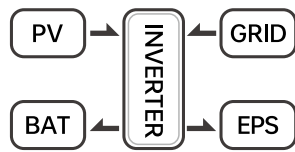

B. On charge time, solar energy will charge battery as first priority, then the excess solar energy will supply power to loads. If solar energy is not sufficient to charge battery and supply loads, grid will supply all the connected loads with solar energy together.

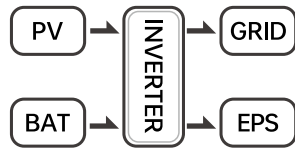


C. On discharge time, solar energy provides power to the loads as first priority, if solar energy is sufficient to supply loads, and if there's still some extra energy from solar energy, then the excess power and battery will deliver the power to the grid at the same time.

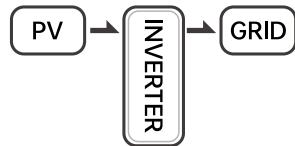


D. In the period of no charge or discharge, the solar power supply loads at first priority, excess energy to the grid.


2. When Grid, Battery is available (PV is disconnected):

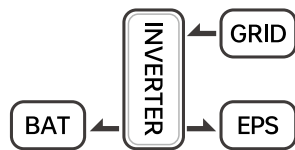

A. On charge time, grid will charge battery and supply power to the connected loads at the same time.

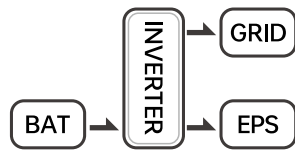


B. On discharge time, if load power is less than battery power, battery will supply power to loads as first priority, the excess power will be feed to grid.

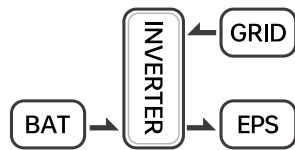


C. On discharge time, if load power is more than battery power, battery and grid will supply power to the loads at the same time.

Work modes: Bat priority

1. When PV, Grid, Battery is available:

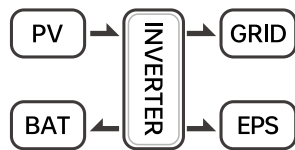


A. Solar energy will charge battery as first priority, if solar energy is excess, the excess power will supply load. If there's still some extra energy, then the excess power will be feed the power to grid.

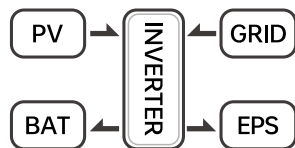

B. Solar energy will charge battery as first priority, if solar energy is excess, the excess power will supply load. If solar energy is not sufficient to charge battery and supply loads, grid will supply power to loads.

2. When Grid, Battery is available (PV is disconnected):

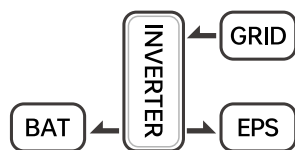

Grid will supply power to load and charge battery at the same time.




- If set anti-reverse function allowable, Once on the work mode of self-use, Peak shift, battery priority, the system will not feed power to grid.


5.3 AC couple function setting

You can access the AC couple settings page by following these steps:

Password -> System settings

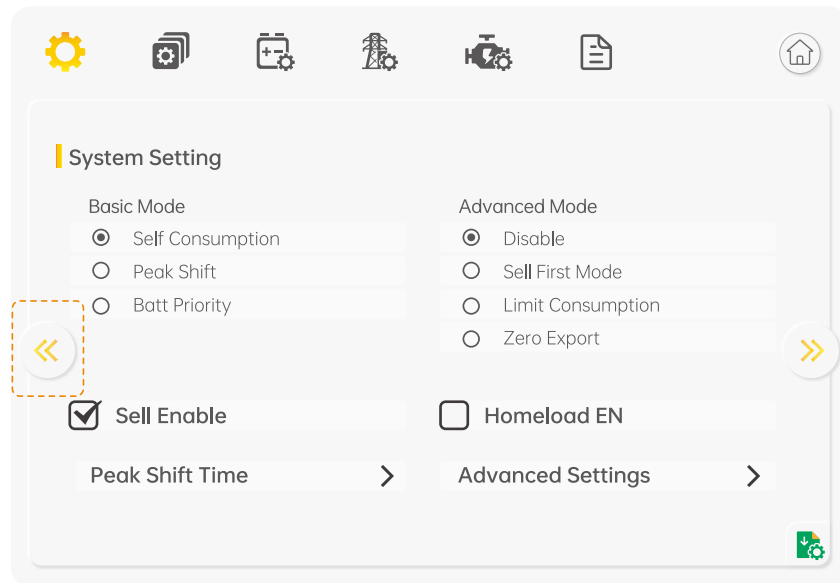

Click the arrow on the next page of the settings interface to find the AC couple settings interface.

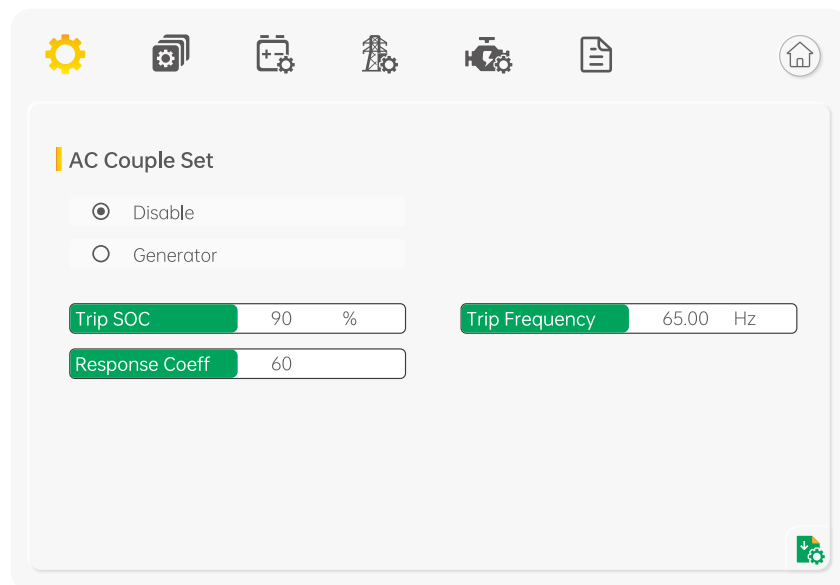

AC couple set: When using AC couple select the generator option.

Trip SOC: When the battery SOC > the setting value, the PV inverter or micro inverters will be cut off. This option only takes effect in the event of a grid outage (If there is no power outage on the grid to which the hybrid inverter is connected, the set SOC does not take effect).

In off-grid mode, set SOC-10% > battery SOC, and the AC COUPLE will activate (AC COUPLE can only be used under the condition that a lithium battery is present).

Trip frequency: This function is reserved. In US, it is 64.5Hz by default.


AC couple set: When using AC couple select the generator option.

Trip SOC: When the battery SOC > the setting value, the PV inverter or micro inverters will be cut off. This option only takes effect in the event of a grid outage (If there is no power outage on the grid to which the hybrid inverter is connected, the set SOC does not take effect).

In off-grid mode, set SOC-10% > battery SOC, and the AC COUPLE will activate (AC COUPLE can only be used under the condition that a lithium battery is present).

Trip frequency: This function is reserved. In US, it is 64.5Hz by default.

Response coeff: This setting is used to increase or decrease delay in the frequency steps between the rated frequency and trip frequency. If you find that the AC couple is easy to be disconnected after it is connected, you can reduce this value.

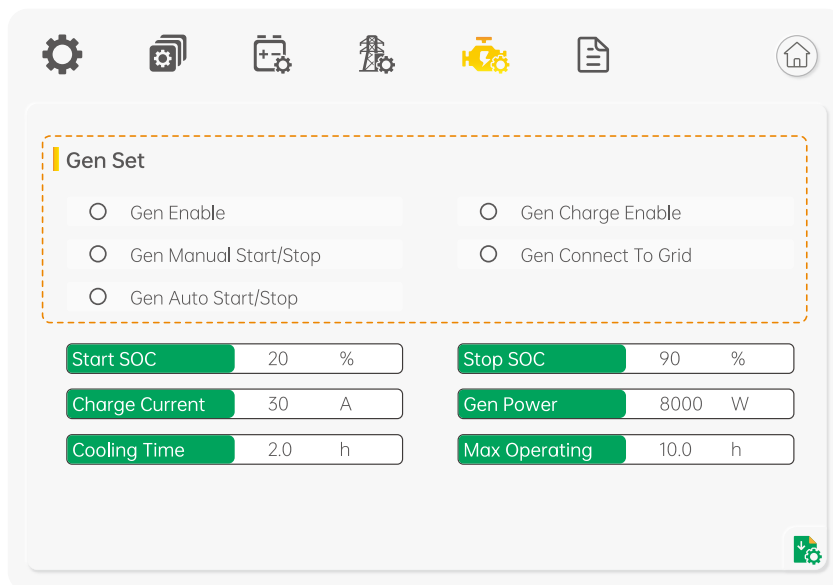

Gen enable: As shown in the figure, if you are using an AC couple, you need to manually turn off all functions on the gen enable interface.


- If the grid is turned on, then the hybrid inverter will no longer control the power of the photovoltaic inverter by adjusting the frequency.
- If the inverter needs to retain grid-tie functionality, then the photovoltaic inverter also requires a pair of CT clamps to be attached to the grid, as shown in figure 3-4 (the direction of the CT arrow should be connected according to the photovoltaic inverter user manual).
- The hybrid inverter will automatically switch off the AC coupled inverters while the generator needs to be used.





- The AC couple function can only be used after matching the hybrid inverter with the photovoltaic inverter. (The photovoltaic inverter needs to have a power generation frequency response function, which is utilized when the hybrid inverter is operating off-grid.)

5.4 Parallel setup menu

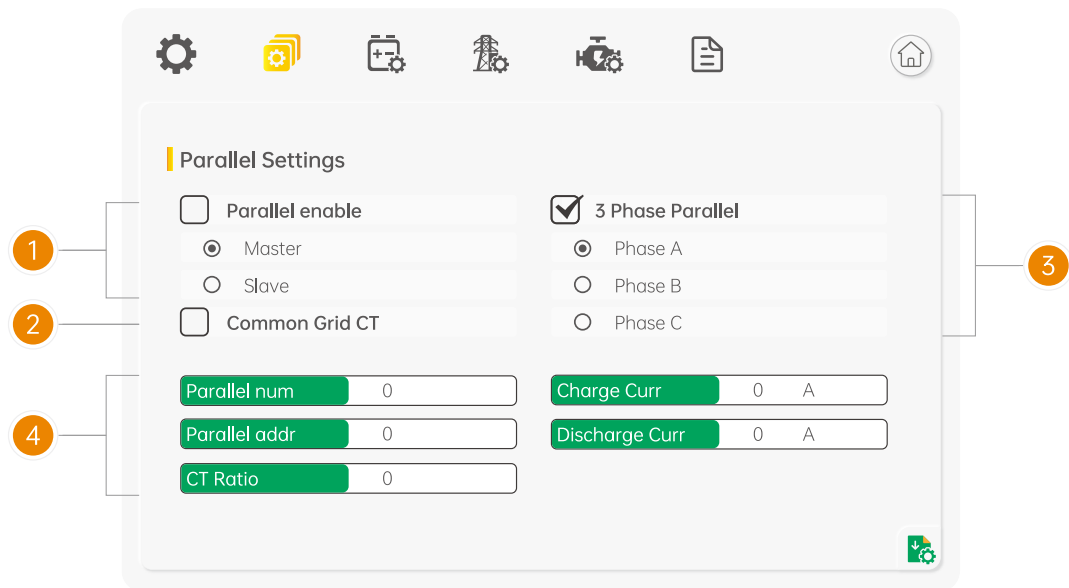

Parallel setup menu

Parallel enable: Start or disable the parallel function.

- Master/Slave:** This interface is used for parallel, and the inverter is selected as the master or slave.

- Common grid CT:** Enable or disable CT sharing.

3 phase parallel: Enable or disable group 3 phase enable.

- PHASE A/B/C:** This interface is used to select the output phase of the device when three phases are used. (Reserved function).

Parallel num: This operation is used to select the number of parallel inverters.

- Parallel addr:** This interface is used to select the parallel address, the host address is set to 1 by default, there is a slave, and the slave is set to 2; If there are two slaves, the slaves are set to 2 and 3 respectively; the address settings of each inverter cannot be the same.

CT ratio: Set the CT ratio to 2000:1 by default.

Charge curr: Set the total battery charging current of multiple parallel inverters, and the current will be evenly distributed to each inverter. Parameters are set only by the master.

Parallel setup menu

- 4 **Discharge cur:** Set the total battery discharge current of multiple parallel inverters, and the current will be evenly distributed to each inverter. Parameters are set only by the master.
-

5.4.1 Parallel operation notes

1. Ensure that all inverters in the parallel system are using the same software version. (Different versions of the software have different control logic, which may cause the parallel system to run abnormally.)
 2. Check the circuit connection again to make sure it is properly connected. (In many cases, the abnormal operation of the parallel system is caused by wiring errors)
 3. The distance between the AC output end of each inverter and the common contact should be the same, and the role is to adjust the impedance value in the power line so that the current of each inverter is equal.
 4. The settings of the parallel system are given in the wiring diagram. Please set them according to the corresponding inverter connection sequence. (The vast majority of parallel systems run abnormally because of incorrect settings.)
 5. In a parallel system, multiple batteries are connected in parallel by default, and only the BMS communication line of the battery needs to be connected to the master inverter. (Ensure that the battery system is connected in parallel correctly and the battery communication protocol matches the inverter.)
 6. When the parallel system uses the generator function, connect and set up each inverter simultaneously. The purpose is to ensure that the operating state of each inverter is consistent.
 7. In a parallel system, the user can choose to common CT (Common CT, current data is transmitted to the master and then distributed to the slave) or not to common CT (each inverter counts current data separately, Need to use multiple CT). When using home load, the user must select common CT.
 8. The communication between inverters in the parallel system needs to be completed by parallel communication cables to carry out data transmission and exchange between the master and slave inverters. Each inverter provides two parallel system communication network ports (CAN1、CAN2). The two network ports do not distinguish the sequence.
 9. If the parallel system fails to run properly, contact after-sales personnel for technical support.
-

5.5 Battery setup menu

Battery setup menu

Set battery type and battery communication method.

- 1 Users can choose the battery type is lead-acid battery/lithium battery, and the battery communication method is CAN/485. The default option is CAN.

- 2 Users can manually input the value of charging current and discharge power limit.


Battery wake-up: When the battery is low and the battery relay has been disconnected, the inverter will send instructions to the battery forcibly sucking relay by BMS, and the inverter will charge.

- 3 The default option is disabled. (Partial battery support)

If you want to use this feature, please consult the battery brand supported by the dealer. Use it only when the battery is too low.


After the battery wakes up successfully, please turn off the function, otherwise it will affect the normal operation of the inverter.

- 4 **CAN ID:** The default is 0, and this function is only used for lithium batteries with specific communication protocols. If required, please contact the supplier.

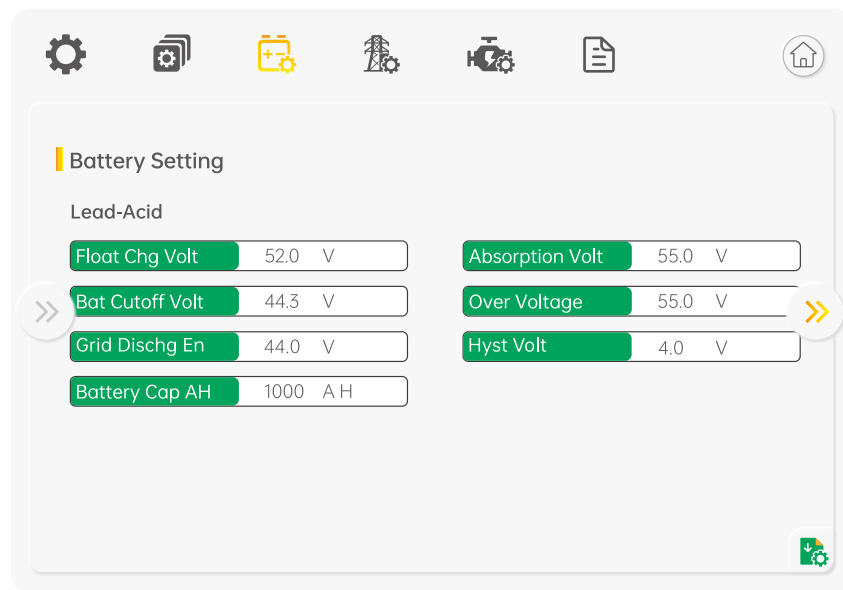

Settings required when using lead-acid batteries:


- **Float chg volt:** Charge the battery with constant voltage and small current (This interface is used to set the lead acid battery charging voltage. (The input value ranges from 40 to 59.5) Set the floating charge voltage to be less than the constant charge voltage).
- **Bat cutoff volt:** Discharge protection voltage (This interface is used to set the lead acid battery discharging voltage. (The input value ranges from 40 to 51) Discharge cut-off voltage, as recommended by the battery manufacturer).
- **Grid dischg en:** Discharge cut-off voltage of lead-acid battery in On-grid state.
- **Battery cap ah:** Battery capacity (This interface is used to set the lead acid Battery capacity. It is related to the input power. (The input value ranges from 50 to 1000) The battery capacity setting will affect the maximum charging current, for example, set 100Ah, the maximum charging current is $100A \times 0.2 = 20A$).
- **Absorption volt:** Charge the battery with constant current.
- **Over voltage:** Charging protection voltage (This interface is used to set the lead acid battery charge protection voltage. (The input value ranges from 50 to 59.5) Charge protection voltage, as recommended by the battery manufacturer).
- **Hyst volt:** If the voltage of a lead-acid battery is too low alarm, charge the battery so that the voltage is higher than the "Hyst voltage + Cutoff voltage". When the alarm is cleared, the battery can discharge again.

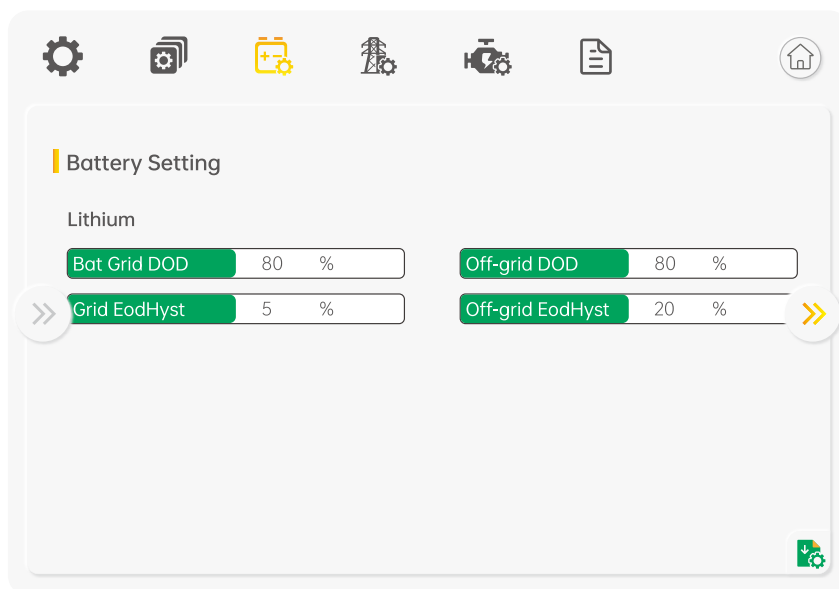

Settings required when using lithium:

- **Bat grid DOD/ Off-grid DOD:** When the battery discharge is higher than the set parameter, the inverter generates a battery low voltage alarm. Distinguish between grid-connected alarm parameters and off-grid alarm parameters.
- **Grid eod hyst /Off-grid eod hyst:** When a low-voltage alarm is generated, the alarm is cleared if the battery charge is higher than the specified amount. The default minimum is 5% end hyst.

5.6 Grid setup menu

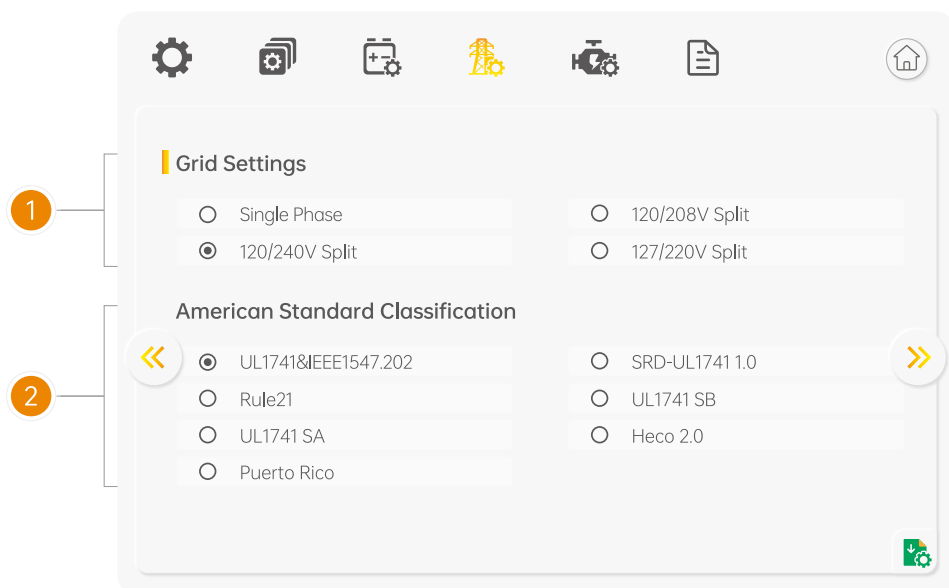


Grid setting/page one

- 1 **Grid settings:** Inverter default option is 120/240V split phase.

American standard classification: Effective only when the grid standard is

- 2 America, American standard classification for multiple regions of america is provided.

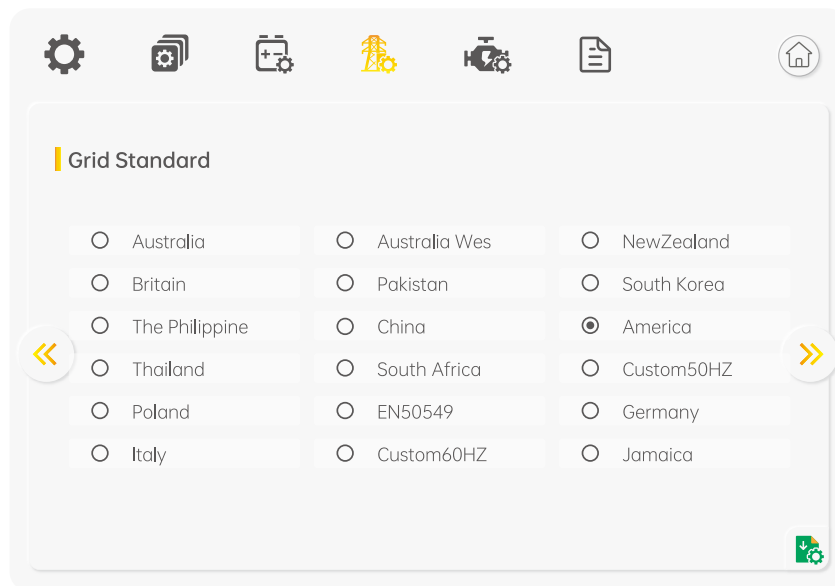


This interface is used to select grid standard. Users can set and switch grid standards according to their needs.

Custom50Hz/60Hz: Customize grid settings.

5.7 Generator setup menu

5.7.1 Generator setting (lithium battery)

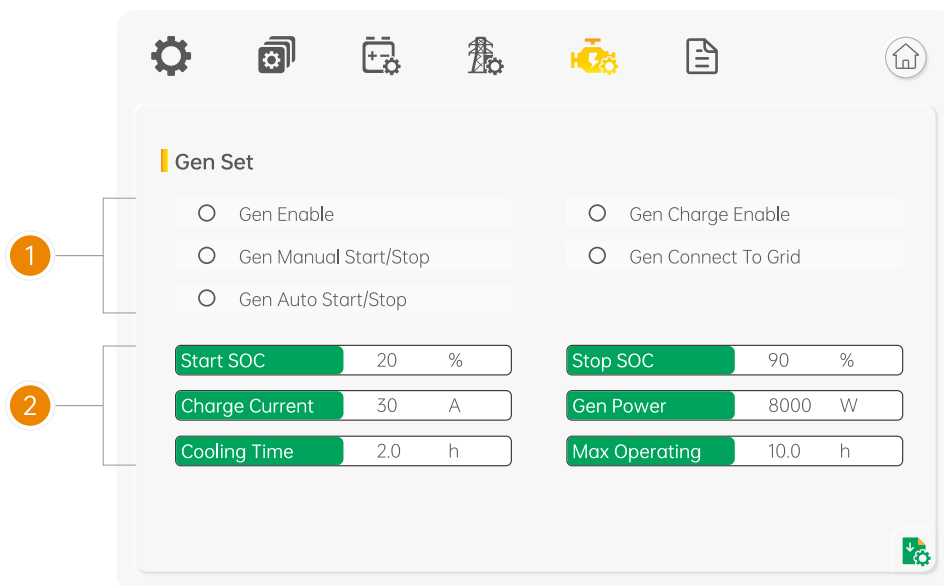

Generator setting (lithium battery)

Diesel generator enable settings:

Gen enable: Enable control of the generator function.

Gen chare enable: Generator charge enable control.

- 1 **Gen auto start/stop:** If the user wants the generator to be automatically controlled to start and stop through the dry contact, please enable it.

Gen manual start/stop: The on/off command in manual control mode.

Gen connect to grid: Connect the diesel generator to the grid input port.

Diesel generator parameter setting:

Start SOC: Generator in automatic mode. When the SOC of battery is lower than the set point, the generator dry contact is closed and the connected generator will be started.

Stop SOC: Generator in automatic mode. When the SOC of battery is higher than the set point, the generator dry contact is disconnected, the connected generator will be stopped (START SOC < STOP SOC).


- 2 **Charge current:** It indicates the maximum current that the inverter charges the battery from generator.

Gen power: Rated power of generator.

Cooling time: It indicates the waiting time of the generator to restart after it has reached the running time. The unit is 0.1 hour.

Max operating: It indicates the longest time generator can run in one day, when time is up, the generator will be turned off. The value 240 means 24 hours in which state the generator will not be shut down all the time. The unit is 0.1 hour.

5.7.2 Generator setting (lead-acid battery)

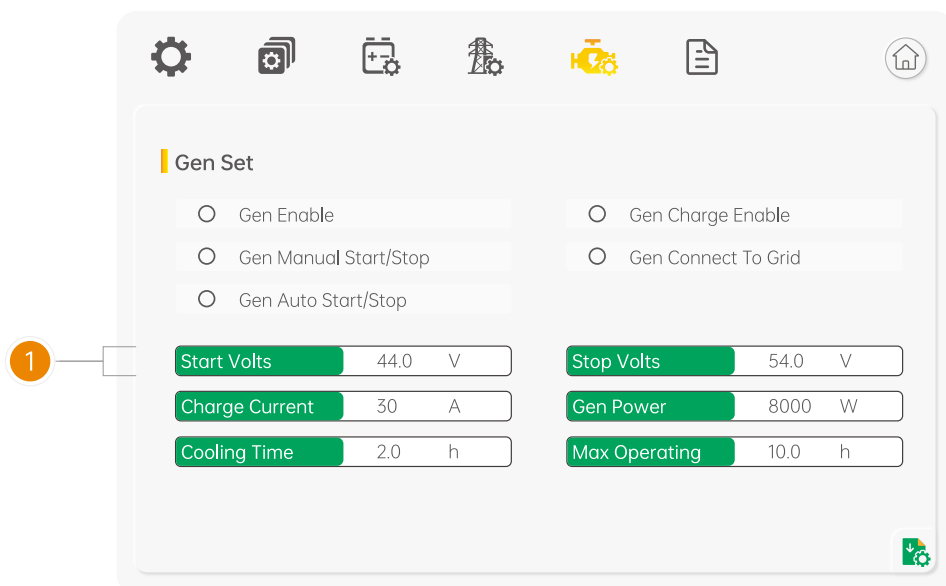


Generator setting (lead-acid battery)

Start volt: Generator in automatic mode. When the volt of battery is lower than the setpoint, the generator dry contact is closed and the connected generator will be started.

1

Stop volt: Generator in automatic mode. When the volt of battery is higher than the set point, the generator dry contact is disconnected, the connected generator will be stopped (START volt < STOP volt).

5.7.3 Generator voltage and frequency protection parameters

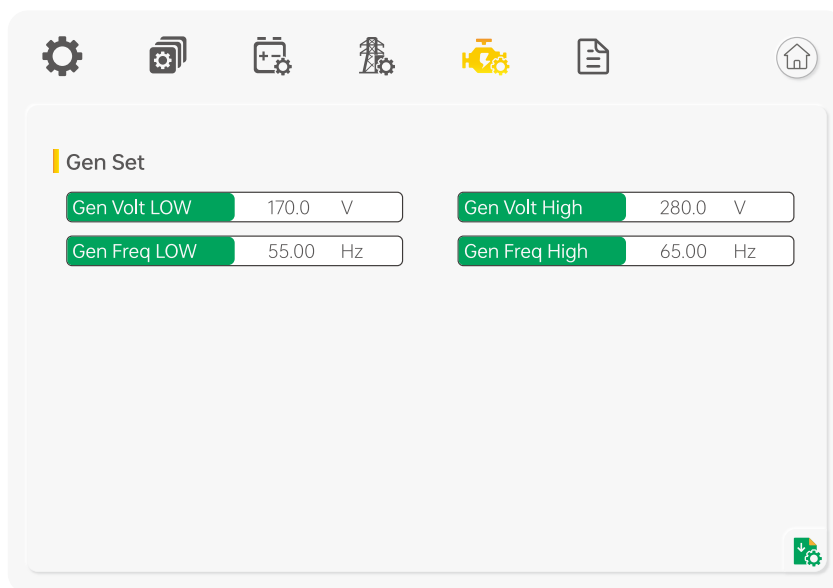

- The input voltage and frequency of the generator are controlled by the protection parameters of this page.
- Gen low voltage: The input value of generator low voltage.
- Gen high voltage: The input value of generator high voltage.
- Gen low freq: The input value of generator low frequency.
- Gen high freq: The input value of generator high frequency.

5.7.4 Generator automatic mode setting

Gen Set

☒ Gen Enable
 ☐ Gen Manual Start/Stop
 ☐ Gen Auto Start/Stop

☒ Gen Charge Enable
 ☐ Gen Connect To Grid

Start SOC: 20 %
 Stop SOC: 90 %

Charge Current: 30 A
 Gen Power: 8000 W

Cooling Time: 2.0 h
 Max Operating: 10.0 h

As shown in the picture on the left, select gen enable, Gen auto and gen charge enable. Set generator on, off SOC or voltage, charging current, generator power, stop cooling time, maximum running time.

5.7.5 Generator manual mode setting

Gen Set

☐ Gen Enable
 ☒ Gen Manual Start/Stop
 ☐ Gen Auto Start/Stop

☒ Gen Charge Enable
 ☐ Gen Connect To Grid

Start SOC: 20 %
 Stop SOC: 90 %

Charge Current: 30 A
 Gen Power: 8000 W


Cooling Time: 2.0 h
 Max Operating: 10.0 h

As shown in the picture on the left, select gen enable, Gen manual and gen charge enable. charging current, generator power, stop cooling time, maximum running time.

5.7.6 Generator operation notes

1. Double check that the circuit is connected correctly.
2. The generator provides two modes (automatic and manual) for control, please select one mode to use, do not set both at the same time.
3. When the generator is connected to the inverter's grid port, select connect to grid port. (Use only when the local power grid is off or the inverter's generator port is damaged.)
4. The voltage and frequency range of the generator should be consistent with the current inverter grid setting standards.
5. The two wires start signal DRYO_1A and DRYO_1B of the generator is used to automatically control the start and stop of the generator.
6. When the generator is used in inverter parallel system, the two wires start signal is only needed to be connected to the master. The generator functions must be set for both the master and slave Inverter, and the generator function parameters must be consistent.
7. In automatic mode, when the generator suddenly stops during the generation process, and the actual SOC value of the battery cannot reach the trigger SOC value, the generator will not trigger again. In this case, the start SOC value needs to be set again to enable the generator to start. The same goes for voltage control.
8. During connection, the generator's voltage protection and frequency protection parameters are also controlled by custom grid set on the maintenance interface.


5.8 Inverter information

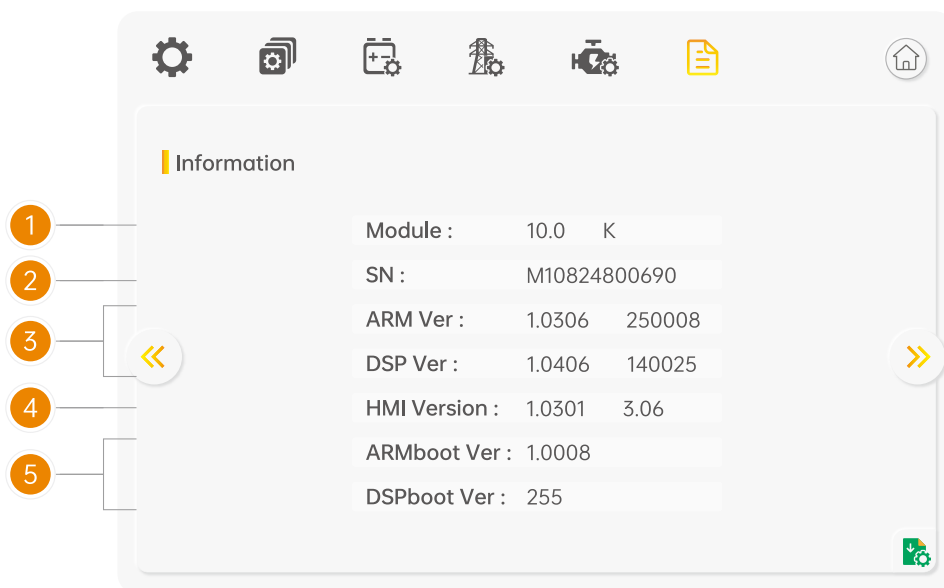

Inverter information/page one


- 1 Show inverter module.
- 2 Hybrid inverter serial number.

- 3 Show inverter software version.
- 4 Display firmware version.
- 5 Display inverter bootloader version.

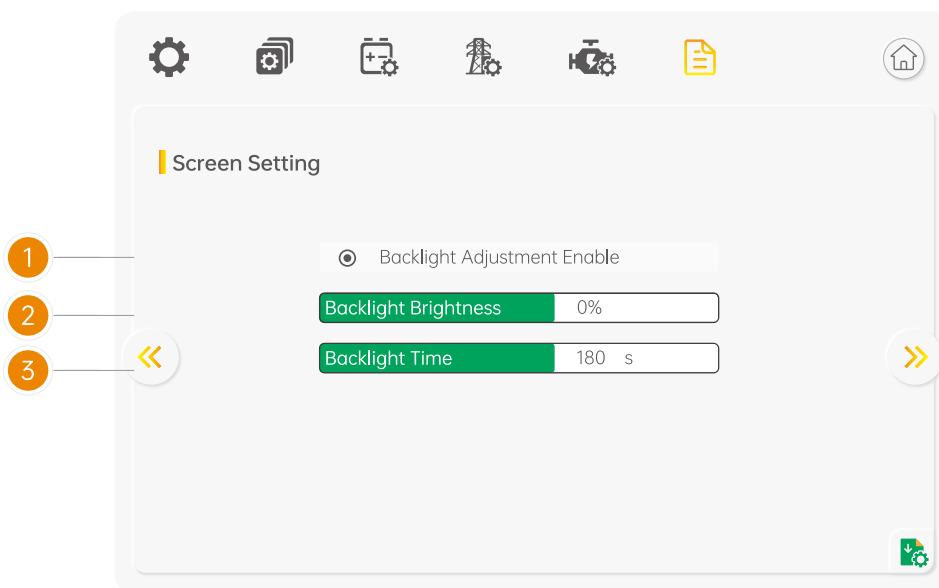

Inverter information/page two


- 1 Screen backlight adjustment control, you can use the following options to control the screen backlight. If the option does not enable, the screen will turn off in 3 minutes by default.
- 2 Screen backlight brightness adjustment. The value ranges from 0 to 100%.
- 3 Set the screen-off time, value ranges from 5 to 250S.

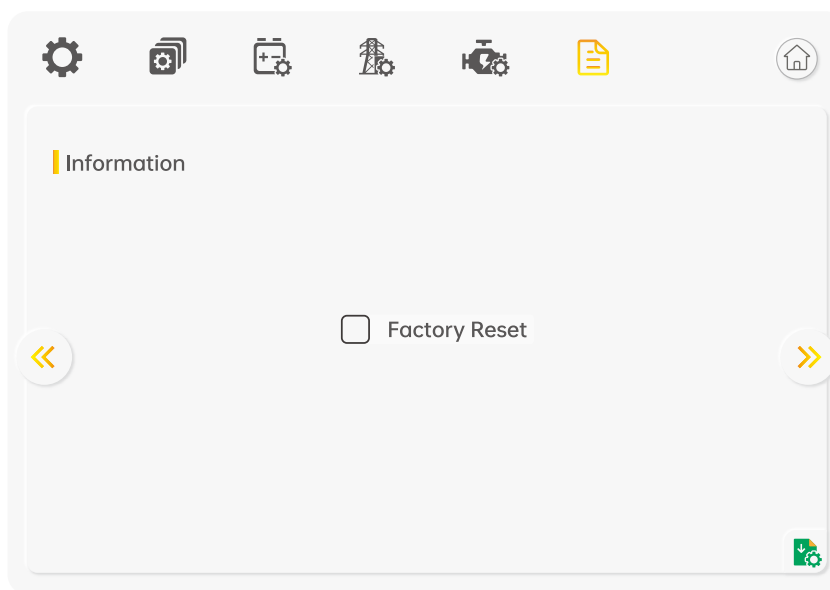

When the inverter is restored to factory settings, the parameters will be reset to the default values. This function takes effect only when the inverter is in the standby state. (ON/OFF button is disabled.)


6 Maintenance setup menu

6.1 Input password

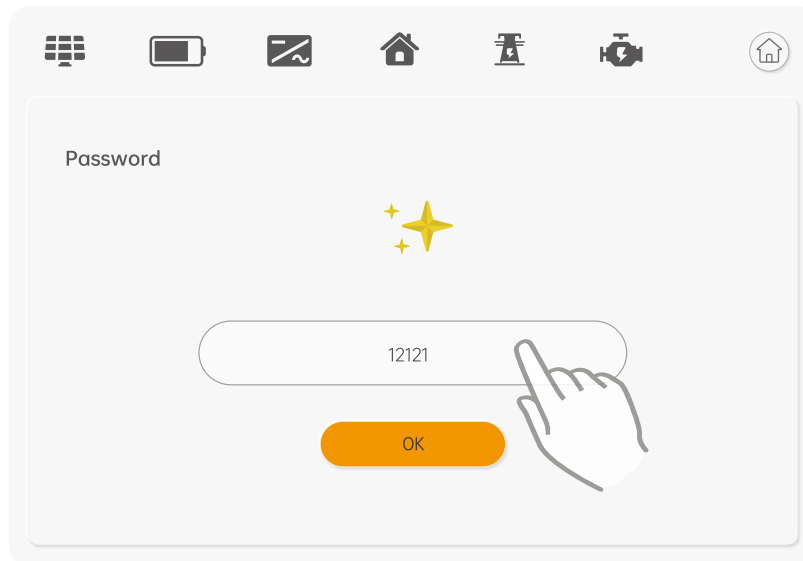

To enter the maintenance settings, a password is required. The default password is 12121. Click OK to enter the settings interface.

6.2 System settings

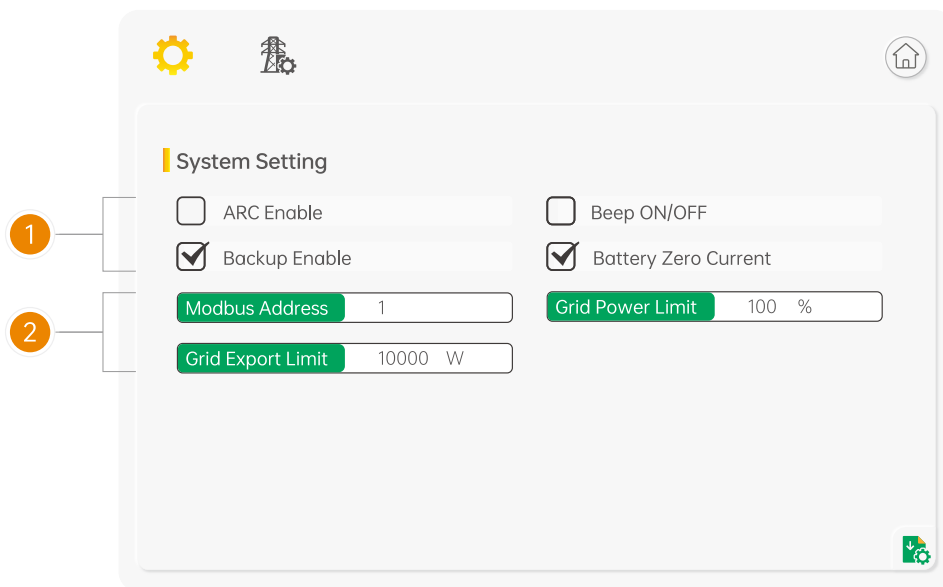

System settings

ARC enable: ARC detection function.

Beep ON/OFF: Screen alarm switch. Set enabled, the buzzer will sound when the inverter alarms.

Backup enable: When the grid and PV are powered off, Enable the battery to supply power to the load, default option is enabled. **Modbus address:** The default value is 1 and you do not need to change it.

Battery zero current (Activated solely under sell first mode configuration):

When the inverter is in a no-charge/no-discharge period (i.e., both gridChg and sell first options are deselected):

- 1
 - If battery zero current is selected: Grid-supplied power directly feeds the load, isolating battery discharge path.
 - If battery zero current is deselected: Battery priority supply maintains load operation.

Modbus address: The default value is 1 and you do not need to change it.

- 2

Grid power limit: Users can click to enter the numerical input interface. This function is used to limit the inverter conversion power of the inverter. The default parameter is 100%.

Grid export limit: Default parameters vary by machine model, allowing you to set the power the inverter sells to the grid.

6.3 Custom grid set

The screenshot displays the 'Custom Grid Set' configuration screen. At the top, there are icons for settings (gear), a warning (lightning bolt), and a home button. The main area contains five input fields with green labels and white text boxes: 'Low Voltage' (150.0 V), 'High Voltage' (280.0 V), 'Low Freq' (55.00 Hz), 'High Freq' (65.00 Hz), and 'Rated Voltage' (230 V). Navigation arrows (left and right) are located on the left and right sides of the input fields. A save icon (green square with a white gear) is in the bottom right corner.

This parameter takes effect only when the power grid standard is custom.

Low voltage: The input value of grid low voltage. When the grid voltage falls below this threshold, the inverter triggers a 'Grid under-voltage' fault.


High voltage: The input value of grid high voltage. When the grid voltage exceeds this threshold, the inverter issues a 'Grid over voltage' alarm.

Low freq: The input value of grid low frequency. When the grid frequency drops below this threshold, the inverter triggers a 'Grid under-frequency' alarm.

High freq: The input value of grid high frequency. When the grid frequency exceeds this threshold, the inverter triggers a 'Grid over-frequency' alarm.

Rated voltage: Custom rated voltage setting. If a custom grid is selected, configure this value to modify the inverter's rated output voltage (*only effective under custom grid mode*).

6.4 Grid parameters

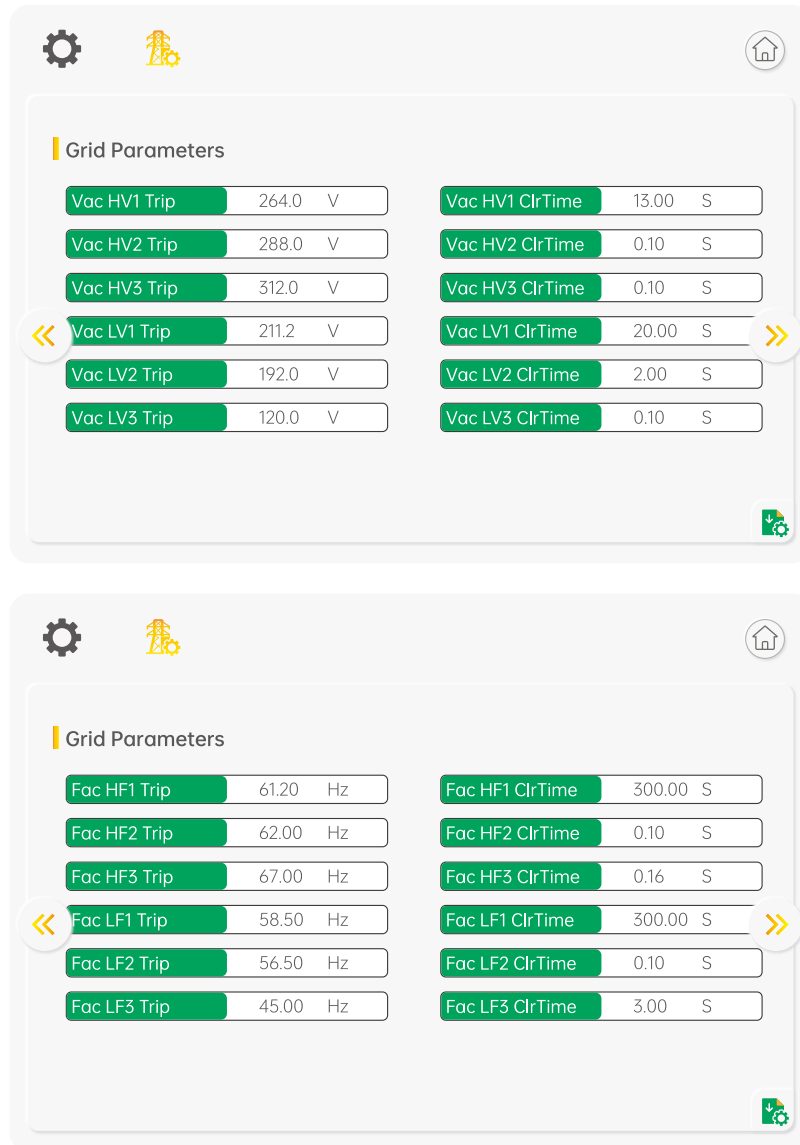

The screenshot displays the 'Grid Parameters' configuration screen. It features a settings icon, a power line icon, and a home icon at the top. The screen is divided into two columns of parameters, each with a green slider bar and a numerical value followed by a unit. The left column lists voltage trip levels (Vac HV1 Trip to Vac LV3 Trip) and frequency trip levels (Fac HF1 Trip to Fac LF3 Trip). The right column lists corresponding clearing times (ClrTime) for each trip level. Navigation arrows are visible on the left and right sides of the parameter list.

Parameter	Value	Unit
Vac HV1 Trip	264.0	V
Vac HV2 Trip	288.0	V
Vac HV3 Trip	312.0	V
Vac LV1 Trip	211.2	V
Vac LV2 Trip	192.0	V
Vac LV3 Trip	120.0	V
Vac HV1 ClrTime	13.00	S
Vac HV2 ClrTime	0.10	S
Vac HV3 ClrTime	0.10	S
Vac LV1 ClrTime	20.00	S
Vac LV2 ClrTime	2.00	S
Vac LV3 ClrTime	0.10	S
Fac HF1 Trip	61.20	Hz
Fac HF2 Trip	62.00	Hz
Fac HF3 Trip	67.00	Hz
Fac LF1 Trip	58.50	Hz
Fac LF2 Trip	56.50	Hz
Fac LF3 Trip	45.00	Hz
Fac HF1 ClrTime	300.00	S
Fac HF2 ClrTime	0.10	S
Fac HF3 ClrTime	0.16	S
Fac LF1 ClrTime	300.00	S
Fac LF2 ClrTime	0.10	S
Fac LF3 ClrTime	3.00	S

Grid protect parameters:

This parameter is determined by the national grid standard. If the user needs to use over-voltage and under-voltage protection, please contact the supplier.

HV means high voltage trip protection.

LV means low voltage trip protection.

HF means high frequency trip protection.

LF means low frequency trip protection.

6.5 Grid reconnect parameter

Grid reconnection parameter:

Grid volt low/high: Set the upper and lower limits of power grid voltage reconnect parameters.

Grid freq low/high: Set the upper and lower limits of power grid frequency reconnect parameters.

Grid reconnection time: The grid connection time can be set, but the minimum time cannot exceed 31S.

Grid Reconnect Parameter

Grid Volt Low	204.0 V	Grid Volt High	264.0 V
Grid Freq Low	57.00 Hz	Grid Freq High	60.30 Hz
Grid Reconnection Time	300.00 S		

6.6 Grid function

Grid Function

<input type="radio"/> Discharge P(u)	<input checked="" type="radio"/> Anti Island
<input type="radio"/> Discharge P(f)	<input checked="" type="radio"/> Leak Current
<input type="radio"/> Charge P(u)	<input checked="" type="radio"/> Insulation Detection
<input type="radio"/> Charge P(f)	<input type="radio"/> LVRT
<input type="radio"/> HVRT	

Discharge p(u): Generation voltage response.

When the grid voltage is abnormal, the active power is limited, and the function is enabled when required by the national grid standard.

Discharge p(f): Generation frequency response.

When the power grid frequency is abnormal, the active power will be limited, and the function will be enabled if required by the national power grid standard.

Charge p(u): Charge voltage response.

When the grid voltage is abnormal, the charging power will be limited, and the function will be enabled if required by the national grid standards.

Charge p(f): Charge frequency response.

When the power grid frequency is abnormal, the charging power will be limited, and the function will be enabled if required by the national power grid standard.

HVRT/ LVRT (high/ low voltage ride through):

Enable the high/low voltage ride through function of the inverter.


Anti island: When the grid goes down, inverter will detect the loss of power and disconnect from the grid within milliseconds. It prevents your solar panels from feeding electricity into a downed power line. (The default option is enabled)

Leak current: Leak current detect (The default option is enabled).

Insulation detection: Insulation detect (The default option is enabled).

When the insulation detection function is enabled in the grid connected state, the insulation detection is performed once a day when the photovoltaic energy comes in, and the inverter switches to the by-pass band load. If the inverter is off-grid, the output will be disconnected during insulation detect and the load will stop working.

6.7 Reactive power parameter

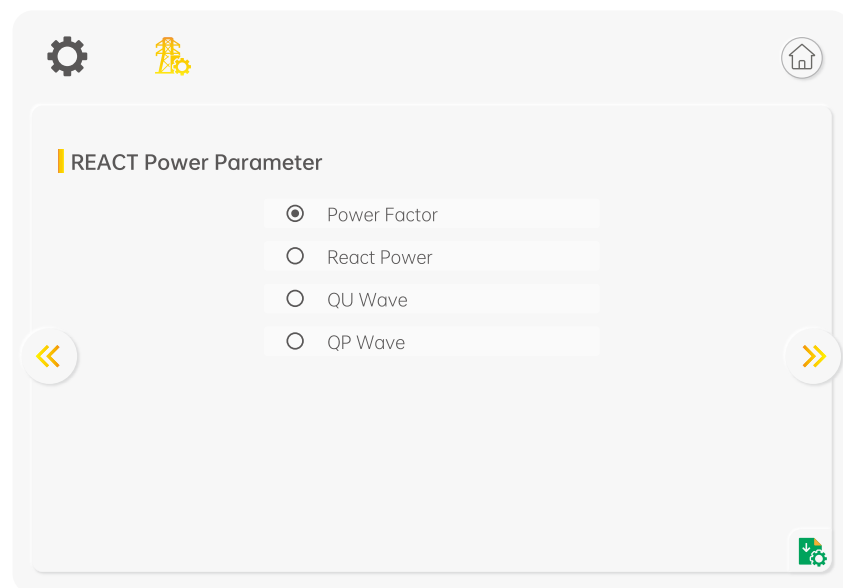

REACT power parameter: REACT power parameter, including: Power factor, React power, QU wave, QP wave. (For specific country if required by the local grid.)

Power factor: The input value should range between L0.80 and L0.99 or C0.8 and C1.00.


React power: Reactive power control.

The input value should range between -60% and +60%, which varies with the standard.

QU wave: Voltage-reactive curve.

QP wave: Active power-reactive power curve. (These two functions are not available on the screen, please contact the distributor if you need to use them.)

7 Advanced mode operation guide

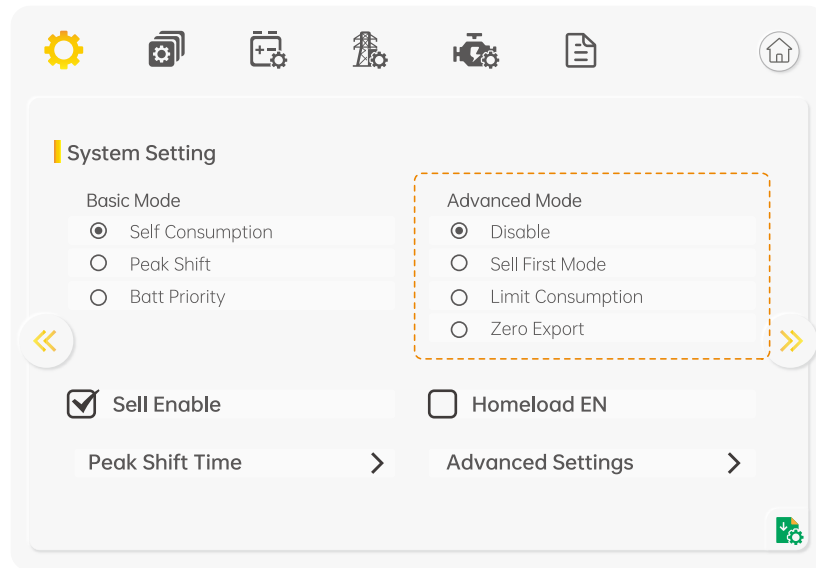

Advanced mode: There are four options here: Disable, sell first mode, limited consumption mode and zero export mode.

Disable: Only when users selected "disable", the basic work modes (Self consumption, Peak shift, battery priority) take effect. When the user selects the other three options (Sell first, Limit consumption, Zero export), the basic work modes are invalid.

Sell first mode: First consider selling electricity to the grid. In this mode the sell-enable setting is automatically enabled. The users can use this mode to sell back surplus solar power to grid. If time of use is enabled, the battery power can also be sold to grid (Excess PV and battery power can be sold to the grid).

Limit consumption: In this mode, the CT limiters are used to sense the grid power flow direction. The hybrid inverter can be select to sell power or not sell power to grid. There is a CT limit power parameter available in this mode. When the battery is needed to discharge to reduce the load consumption, the grid will cover the parameter set part consumption firstly and the battery discharges energy to makes up the rest part. Other conditions are similar to SELF CONSUME working mode (Excess PV power can be sold to the grid through CT limit.).

Zero export: In this mode, the CT limiters should be installed in the input of the inverter's grid port. The hybrid inverter will not sell power to grid. The user can use zero export power parameter to ensure the inverter won't feedback power to grid (Neither PV nor battery excess power is sold to the grid).

Advanced settings: Users can click to enter the advanced settings interface.


Table 7-1


Advanced work mode

	Selling first	Limited consumption	Zero export
Grid sell disable/enable	Ignored. Be enabled automatically.	For those region with feed-in-tariff, plz enabled it.	Ignored. Be disabled automatically.
Mode description	Features: Bat storage power can be sold out to power under TOU control.	Features: Use some grid power first, then use battery storage power under TOU control.	Features: Never sell power to grid forever.

Mode description	<p>When TOU is enabled:</p> <p>When inside time slots: Charge or discharge to grid at scheduled time and specific power without caring consumption.</p> <p>When outside of the time slots: The grid can not charge the battery, only allow the PV to charge the battery.</p>	<p>When TOU is enabled:</p> <p>Day time: PV power load and charge battery first, surplus power feedback to grid(grid sell enable) or limit the pv yield (grid sell disable). The grid charge can be scheduled.</p> <p>When outside of the time slots: The grid can not charge the battery, only allow the PV to charge the battery.</p>	<p>When TOU is enabled:</p> <p>Day time: PV power load and charge battery first, surplus power will be limited automatically. The grid charge can be scheduled.</p> <p>When outside of the time slots: The grid can not charge the battery, only allow the PV to charge the battery.</p>
	<p>When TOU is disabled:</p> <p>Always charge the battery first whatever from pv or grid. The battery doesn't discharge on grid mode.</p>	<p>When TOU is enabled:</p> <p>Night time: discharge battery to power the load if the battery capacity is available. For those region with tiered electricity price, user can set ct limit power to use some grid power first. The grid charge can be scheduled.</p>	<p>When TOU is enabled:</p> <p>Night time: discharge battery to power the load if the battery capacity is available. The grid charge can be scheduled.</p>
		<p>When TOU is disabled:</p> <p>Always charge the battery first whatever from pv or grid. The battery doesn't discharge on grid mode.</p>	<p>When TOU is disabled:</p> <p>Always charge the battery first whatever from pv or grid. The battery doesn't discharge on grid mode.</p>

There are also some attributes of these mode: Global grid charge enable, PV charge only, Bat charge on priority, Time-of-use enable and 6 time-of-use slots.

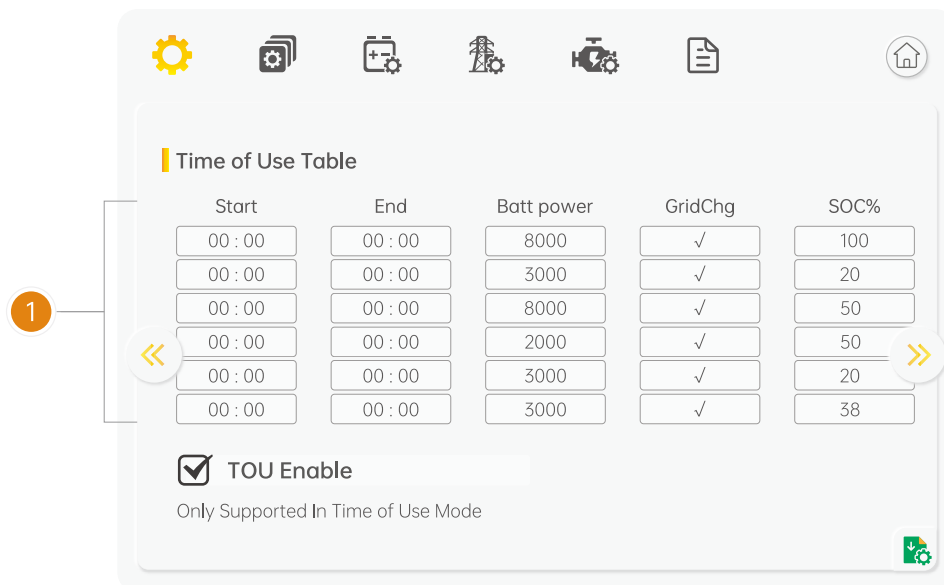

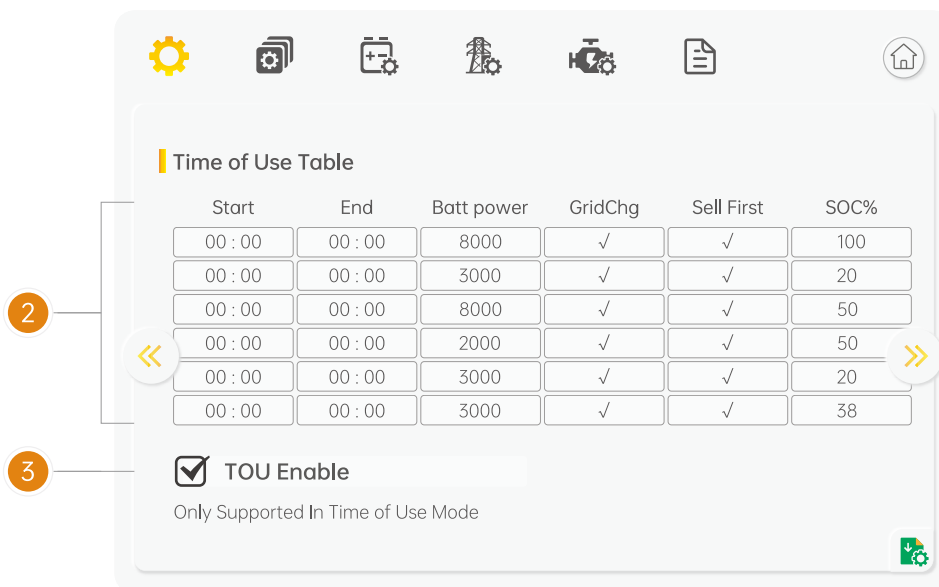

Advanced settings/first page

Time-of-use enable: There are 6 slots which can be programmed. If grid charge is enabled, the grid is used to power the load and charge the battery to target SOC at specific bat power attribute value. If selling electricity to the grid enable, the battery will discharge to target SOC at specific battery power attribute value (**Time period configuration restriction:** The initial time segment parameters cannot be set entirely to zero values. Failure to configure valid time intervals will result in malfunction of the time-based scheduling functionality.).

Batt power: The power that the grid charges and discharges to the battery.


GridChg: Grid is ticked, indicating that in the effective interval of the current interface time period, if the set SOC is greater than the actual SOC of the battery, the power grid will charge the battery (if not ticked, the power grid will not charge the battery); if the set SOC is less than the actual SOC of the battery, the battery can be discharged.

Sell first: This function is only displayed in the sell first mode, Only after enabling can the battery sell to the grid, otherwise the battery will not sell the grid, Other modes do not have this feature.

Only when TOU enable is selected, the time table in the figure can be effective.

There are also some attributes of these mode: Global grid charge enable, PV charge only, Battery first, Time-of-use enable and 6 time-of-use slots. The time slots parameters are shown in as below:

Start time	End time	Bat power	Grid charge	Bat SOC
00:00	05:00	8000 W	✓	50 %
05:00	08:00	8000 W		50 %
08:00	10:00	8000 W	✓	50 %
10:00	16:00	8000 W		50 %
16:00	19:00	8000 W	✓	50 %
19:00	23:59	8000 W	✓	50 %

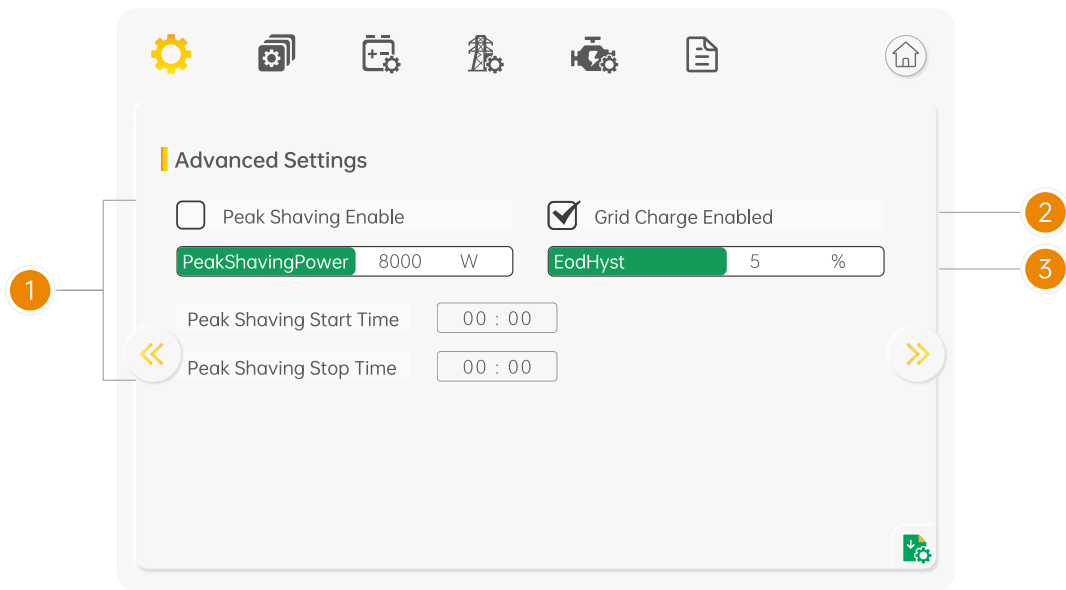

Advanced settings/second page

Peak shaving enable: The configured PeakShavingPower value becomes effective during the active period of peak shaving start/stop (Peak shaving start time < Peak shaving stop time) when peak shaving enable is activated.

PeakShavingPower: The grid peak shaving capacity (limiting the maximum power inverters can draw from the grid).

- 1
 - During charging, the maximum power drawn from the grid by the combined load and battery is limited. When the load exceeds the threshold, the battery charging current will be dynamically reduced based on the load increase, provided that the total power (load + battery) remains below the PeakShavingPower value.
 - During discharging, The load prioritizes power supply from the battery (with discharge power capped by the batt_power_limit defined in advanced mode time windows). Excess load demand is supplemented by grid power while maintaining total grid power consumption \leq Peak shaving power.

- 2

Global grid charge enable: It is advanced control attribute of grid charge enable. If time of use function is disabled, this attribute is used to judge whether or not to charge the battery by grid. If time of use function is enabled, the battery can be charged by grid only when the time slot grid charge attribute is enabled.

- 3

EodHyst: In the slot period, when the actual SOC value of the battery reaches the set SOC value, the battery will enter the state of no charge or discharge. If actual SOC > set SOC value+EodHyst value, battery discharge is allowed. If actual SOC < set SOC value-EodHyst value, battery charge is allowed.



If the use time is started and the inverter is operating outside the timeline, it will run in SELF CONSUME mode.

Advanced mode only makes sense when both the battery and the grid exist.

8 Fault diagnosis and solutions

The inverter is easy to maintain. When you encounter the following problems, please refer to the solutions below, and contact the local distributor if the problem remains unsolved. The following table lists some of the basic problems that may occur during the actual operation as well as their corresponding basic solutions.

Fault diagnosis table

Table 8-1

Fault diagnosis table

Content	Codes	Explanation	Solutions
Dischg over cur	01	Battery discharge over current. When the battery is loaded, the load is too large.	<ul style="list-style-type: none"> Nothing needed to do, wait one minute for the inverter to restart. Check whether the load is in compliance with the specification. Cut off all the power and shut down all the inverters; disconnect the load and plug in to restart inverters, then check.
Over load	02	The load power is greater than other power. (PV, BAT)	<ul style="list-style-type: none"> Check whether the load is in compliance with the maximum power of the inverter. Cut off all the power and shut down all the inverters; disconnect the load and plug in to restart inverters, then check whether the load is short circuited if the fault has been eliminated. Contact customer service if error warning continues.
Bat disconnect	03	Battery disconnect. (Battery voltage not identified)	<ul style="list-style-type: none"> Check whether the battery is connected. Check if battery wiring port is open circuited. Contact customer service if error warning continues.
Bat under volt	04	Battery voltage low that normal range.	<ul style="list-style-type: none"> Checking system settings, If so, power off and restart. Check if the grid power down. If so, wait for grid to power up, the inverter will automatically charge. Contact customer service if error warning continues.
Bat low capacity	05	Bat low capacity.	<ul style="list-style-type: none"> Battery low that setting capacity. (SOC<100%-DOD)
Bat over volt	06	The battery voltage is greater than the inverter maximum voltage.	<ul style="list-style-type: none"> Checking system settings, If so, power off and restart. Contact customer service if error warning continues.
Gird low volt	07	Grid voltage is abnormal.	<ul style="list-style-type: none"> Check if the grid is abnormal.
Grid over volt	08		<ul style="list-style-type: none"> Restart the inverter and wait until it functions normally. Contact customer service if error warning continues.

Content	Codes	Explanation	Solutions
Grid low freq	09	Grid frequency is abnormal.	<ul style="list-style-type: none"> • Check if the grid is abnormal.
Grid over freq	10		<ul style="list-style-type: none"> • Restart the inverter and wait until it functions normally. • Contact customer service if error warning continues.
Gfci over	11	Inverter GFCI exceeds standard.	<ul style="list-style-type: none"> • Check PV string for direct or indirect grounding phenomenon. • Check peripherals of inverter for current leakage. • Contact the local inverter customer service if fault remains unremoved.
Bus under volt	14	BUS voltage is lower than normal.	<ul style="list-style-type: none"> • Check the input mode setting is correct. • Restart the inverter and wait until it functions normally. • Contact customer service if error warning continues.
Bus over volt	15	BUS voltage is over maximum value.	<ul style="list-style-type: none"> • Check the input mode setting is correct. • Restart the inverter and wait until it functions normally.
INV over cur	16	The inverter current exceeds the normal value.	<ul style="list-style-type: none"> • Restart the inverter and wait until it functions normally.
Cha over cur	17	Battery charge current over than the inverter maximum voltage.	<ul style="list-style-type: none"> • Restart the inverter and wait until it functions normally.
Meter comm fail	18	Meter comm fail.	<ul style="list-style-type: none"> • Check whether the meter communication line is connected correctly.
INV under volt	19	INV voltage is abnormal.	<ul style="list-style-type: none"> • Check if the INV voltage is abnormal.
INV over volt	20		<ul style="list-style-type: none"> • Restart the inverter and wait until it functions normally. • Contact customer service if error warning continues.
INV freq abnor	21	INV frequency is abnormal.	<ul style="list-style-type: none"> • Check if the INV frequency is abnormal. • Restart the inverter and wait until it functions normally. • Contact customer service if error warning continues.
IGBT temp high	22	The inverter temperature is higher than the allowed value.	<ul style="list-style-type: none"> • Cut off all the power of the inverter and wait one hour, then turn on the power of the inverter.
Bat over temp	23	Battery temperature is higher than the allowed value.	<ul style="list-style-type: none"> • Disconnect the battery and reconnect it after an hour.
Bat under temp	25	Battery temperature is low than the allowed value.	<ul style="list-style-type: none"> • Check the ambient temperature near the battery to see if it meets the specifications.
Relay open circuit	26	Grid side relay open circuit detection.	<ul style="list-style-type: none"> • Used to detect whether the relay on the power grid side is disconnected due to a fault.

Content	Codes	Explanation	Solutions
BMS comm.fail	28	Communication between lithium battery and inverter is abnormal.	<ul style="list-style-type: none"> • Check the cable, crystal, Line sequence. • Checking the battery switch.
Fan fail	29	Fan fail.	<ul style="list-style-type: none"> • Check whether the inverter temperature is abnormal. • Check whether the fan runs properly. (If you can see it)
Grid over load	30	Power of EPS load too large.	<ul style="list-style-type: none"> • Reduce the power of the EPS load, thereby reducing the power of the grid.
Grid phase err	31	The grid fault phase.	<ul style="list-style-type: none"> • Check power grid wiring.
Arc fault	32	PV arc fault.	<ul style="list-style-type: none"> • Check photovoltaic panels, PV wire. • Contact customer service if error warning continues.
Bus soft fail	33	Hardware may be damaged and need to troubleshoot the cause.	<ul style="list-style-type: none"> • Restart the inverter and wait until it functions normally. • Contact customer service if error warning continues.
INV soft fail	34		
Bus short	35		
INV short	36		
Fan fault	37	Fan fault.	<ul style="list-style-type: none"> • Check whether the inverter temperature is abnormal. • Check whether the fan runs properly. (If you can see it)
PV iso low	38	PV iso low.	<ul style="list-style-type: none"> • Check if the PE line is connected to the inverter and is connected to the ground. • Contact customer service if error warning continues.
Bus relay fault	39	The inverter may be damaged.	<ul style="list-style-type: none"> • Restart the inverter and wait until it functions normally. • Contact customer service if error warning continues.
Grid relay fault	40		
EPS rly fault	41		
Gfci fault	42		
Self test fail	45		
System fault	46		
Current DC over	47		
Voltage DC over	48		




- If an error occurs that is not listed in the table, Please contact customer service.

9 APP operation

9.1 Home page

The home page includes Wi-Fi configuration , Logger diagnostics, Local mode, Refactory, Language toggle (click the upper right corner to switch languages), and change API.

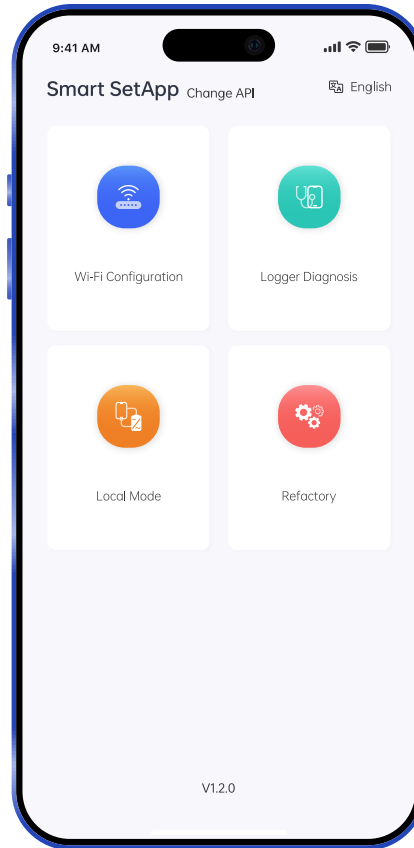


When using the smart set app, the users can view the relevant status of the device in real time and control it wirelessly.

The APP provides the user with two different connectivity options, IoT remote mode (configured by the user according to the SOLARMAN smart APP's user manual) and local mode.

9.2 Local mode


9.2.1 Add a logger

Click on local mode, it will immediately jump to the scanning interface. Scan to enter logger SN (You can find logger SN in the external packaging or on the logger body) or click enter SN to manually enter the SN.

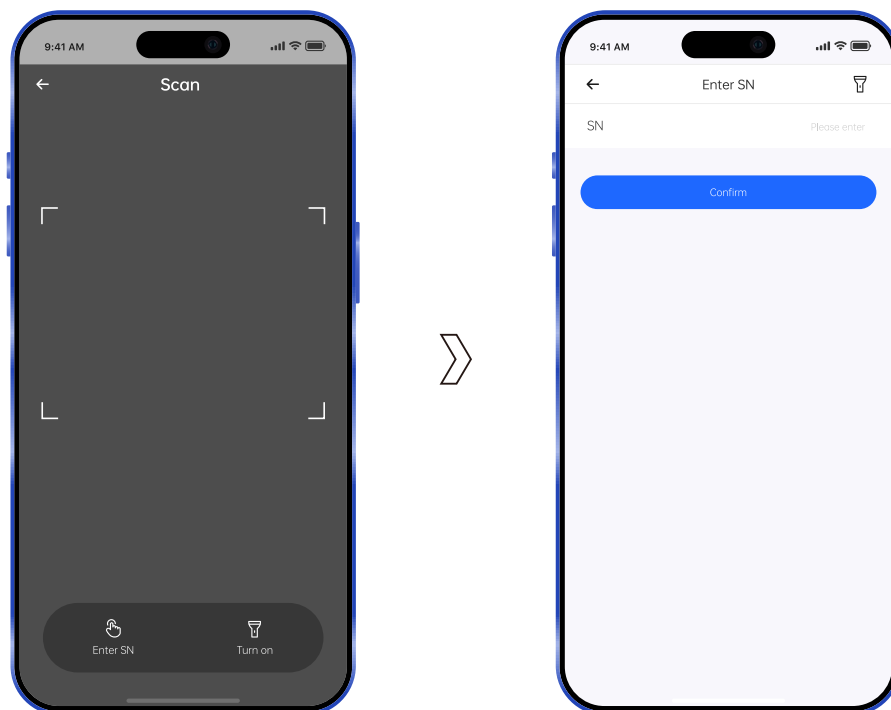


9.2.2 Bluetooth ON

Local mode supports bluetooth connection. You can turn on bluetooth in advance or add a logger firstly and then turn on bluetooth according to the page prompt. If the connection fails, users need to reconnect the logger.

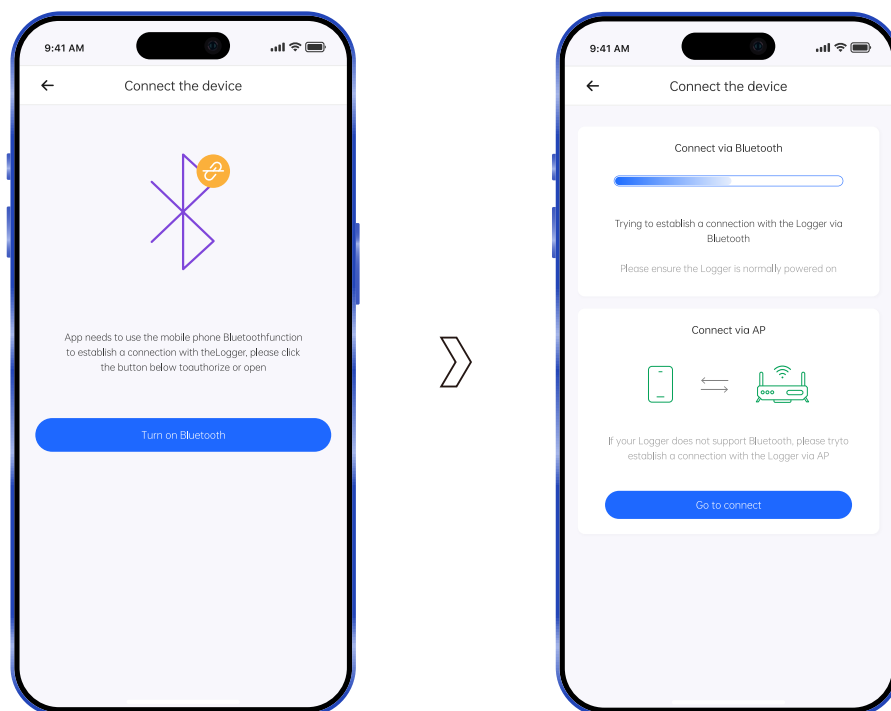


Or:

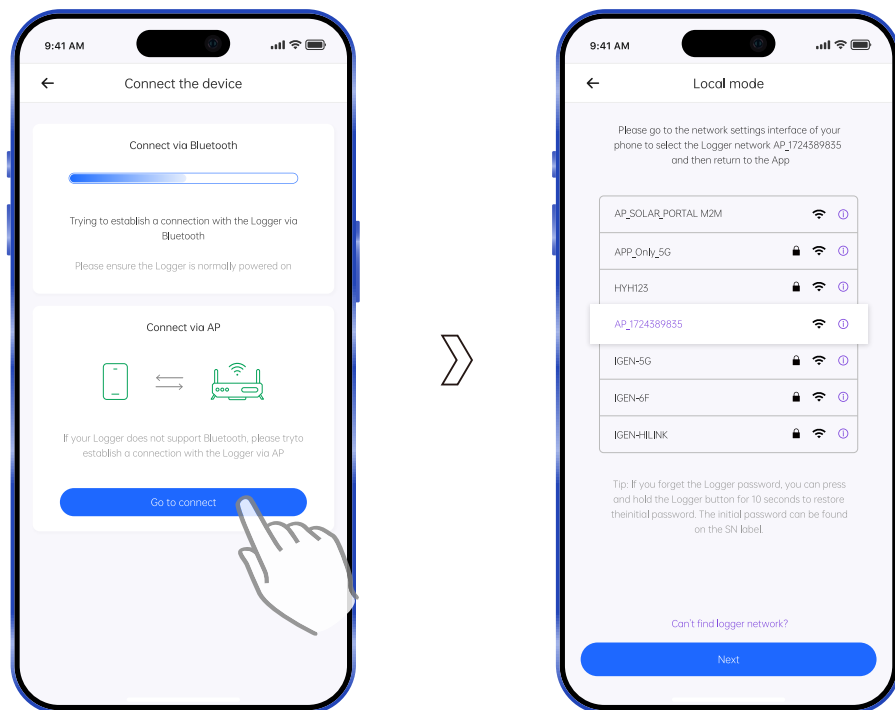

9.2.3 Enter the local mode interface

Once the connection is complete, you can view the operating status of the device and the parameters set.


Click on the grouping to go to the detailed parameter page.

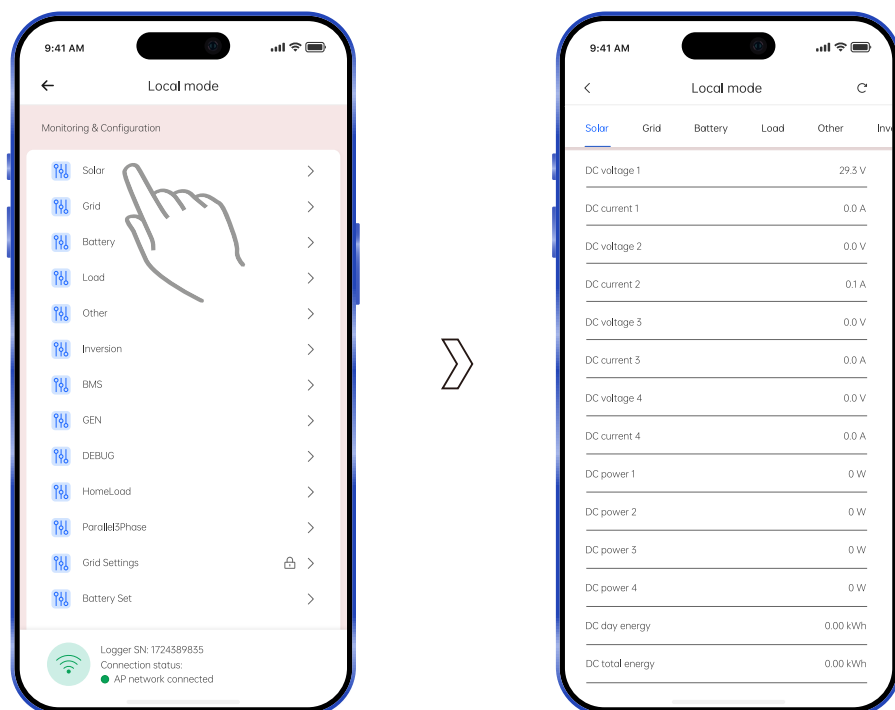

9.2.4 Working status


Click on the top groups to switch.

The monitoring & configuration page contains the following subgroups: Solar, Grid, Battery, Load, Other (Display software version SN code, fault information, working mode, device temperature, inverter temperature, etc.), Inversion, BMS, GEN, DEBUG, Home load, Parallel 3Phase.

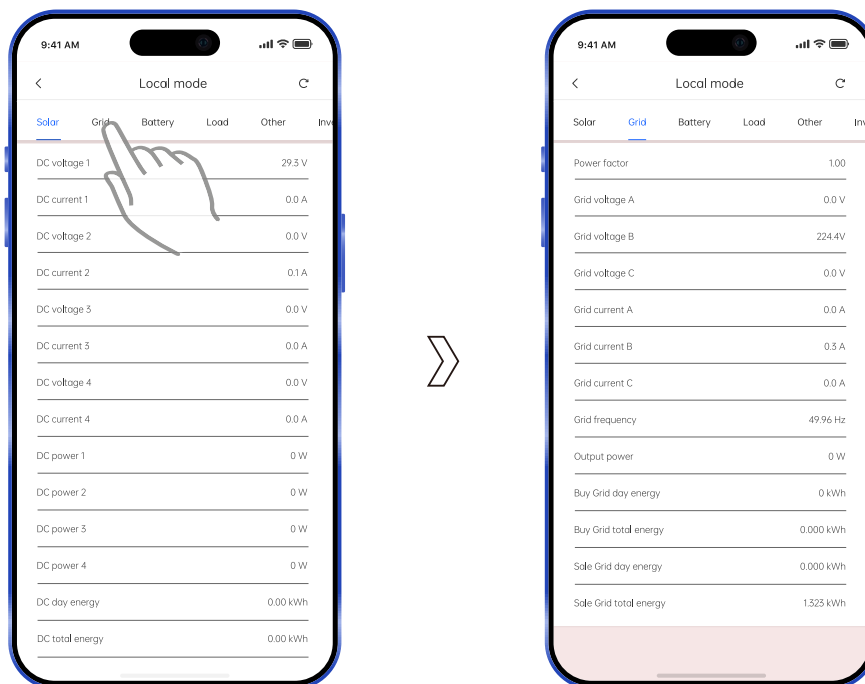


9.2.5 Set parameters

You can set the operating parameters of the device according to their needs. The parameters set by the user need to be within the specified range.

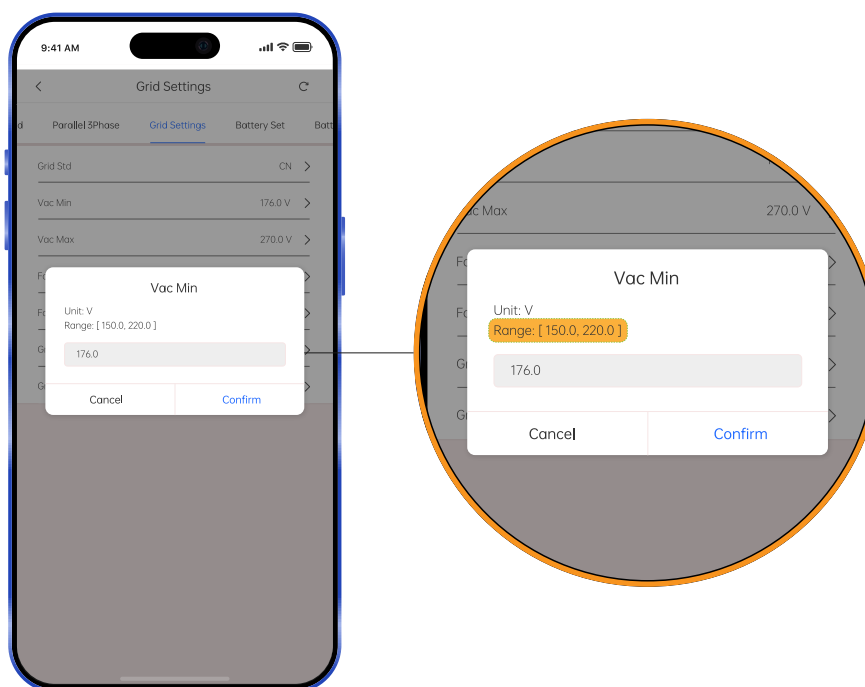


(1) Grid settings and grid protect set.


A password is required to access the grid settings. The default password is "00000".

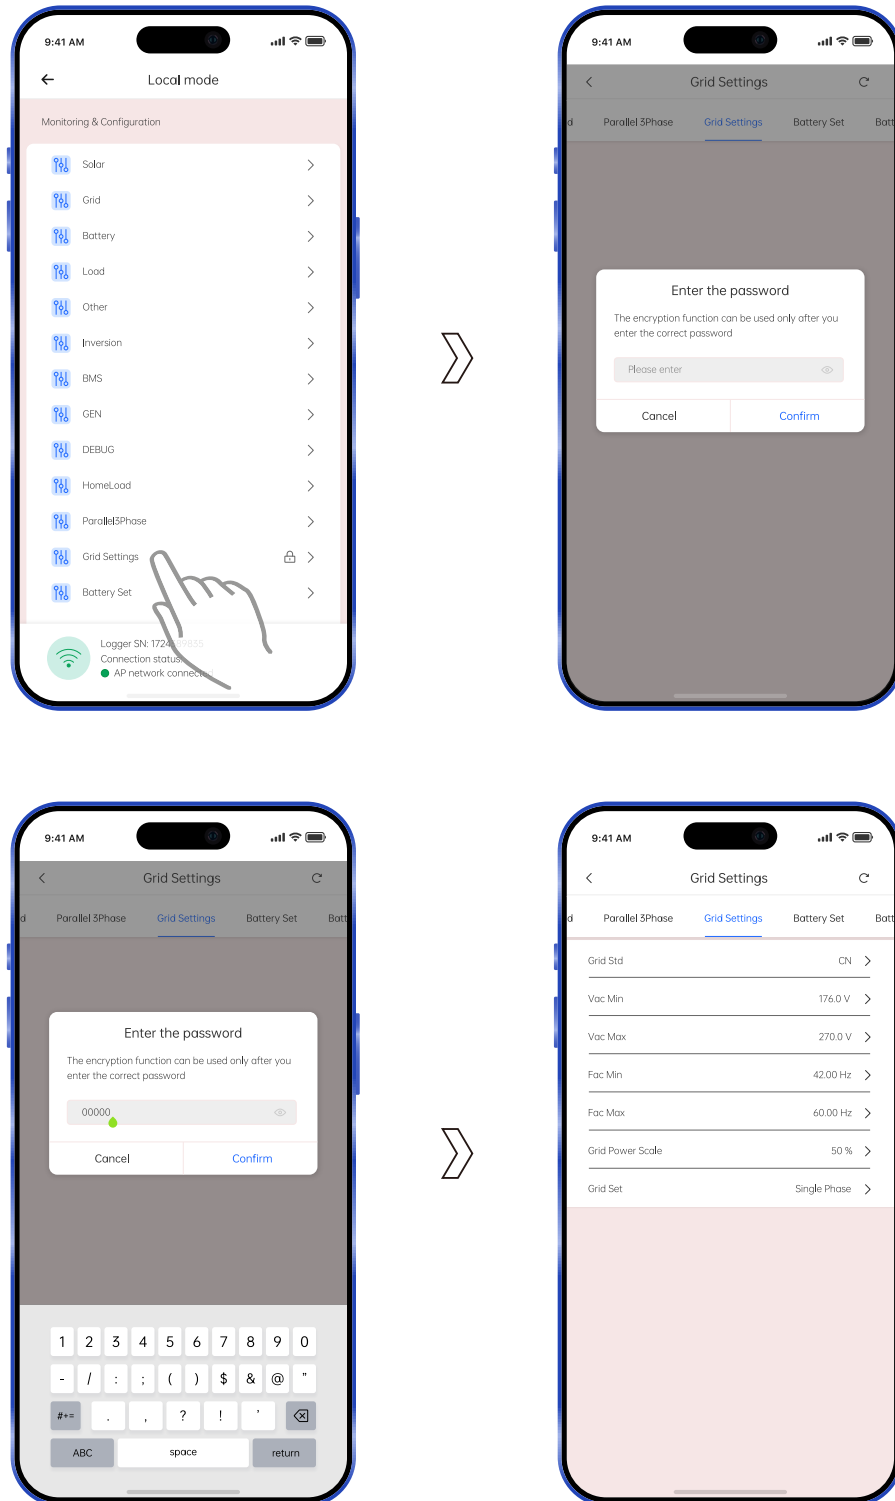

(2) Battery set, Battery management-custom model available and battery 485 communication parameter.

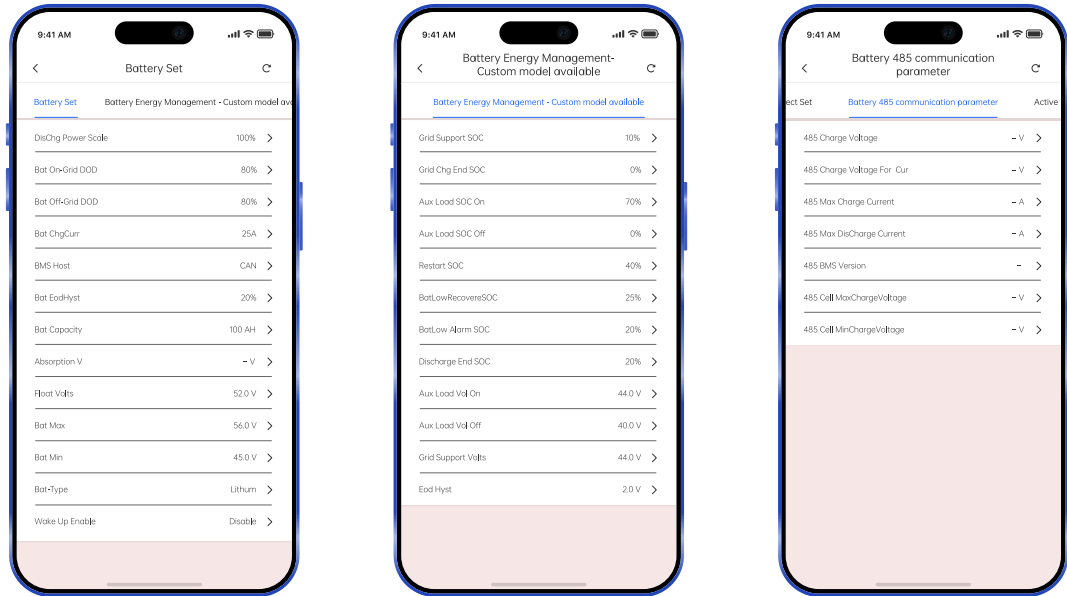


(3) Active control.

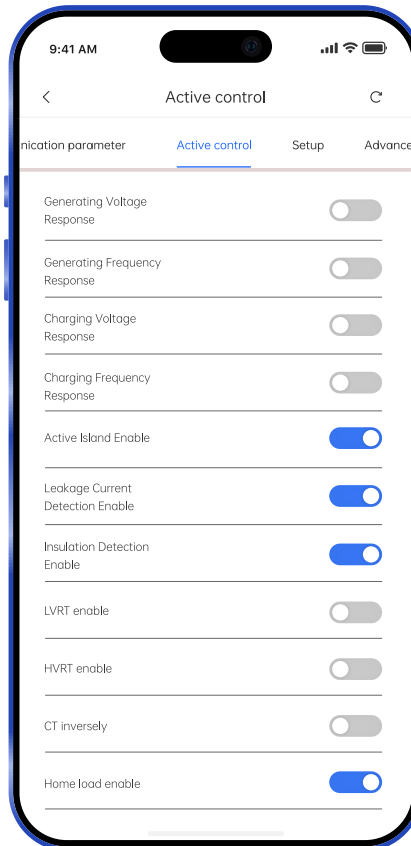


(4) Setup and advance.

Set work mode and PV input type, language, date/time, etc.





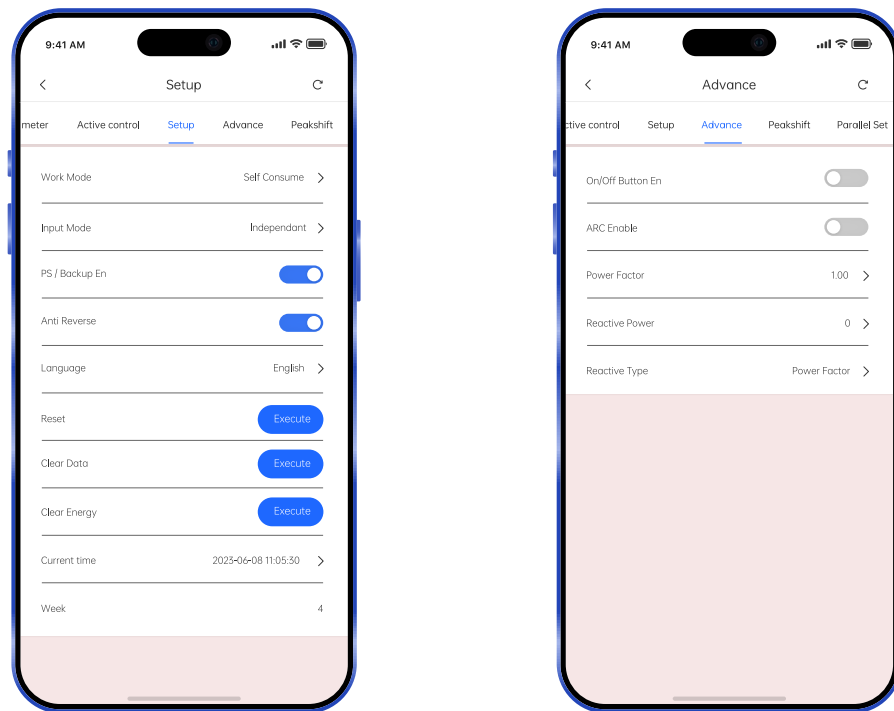


(5) Peak shift.

Set peak-shift charging and discharging time. When the operating mode is peak-shift, you need to enter this interface to set the charging and discharging time and manually enter the start charging/ discharging time and the end charging/discharging time.

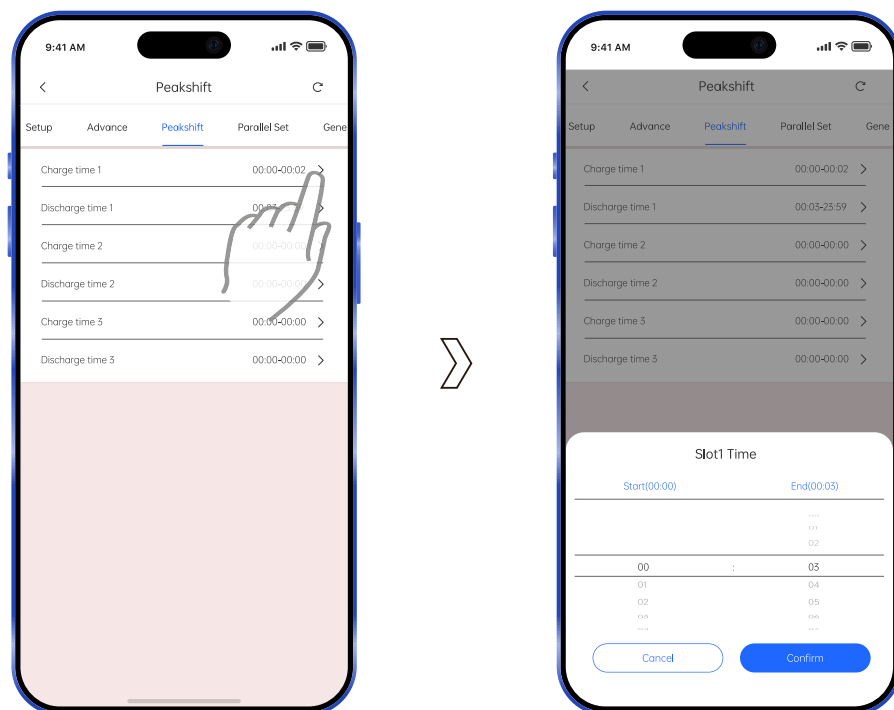

(6) Parallel set, Generator set, Advance work mode set, Custom function and AC couple.

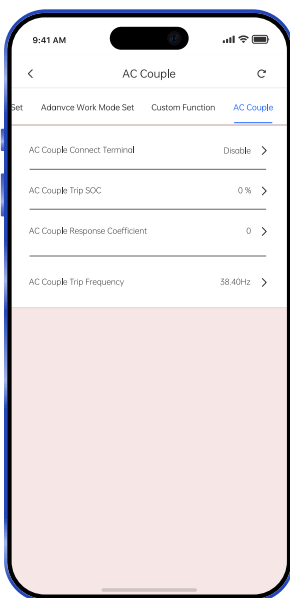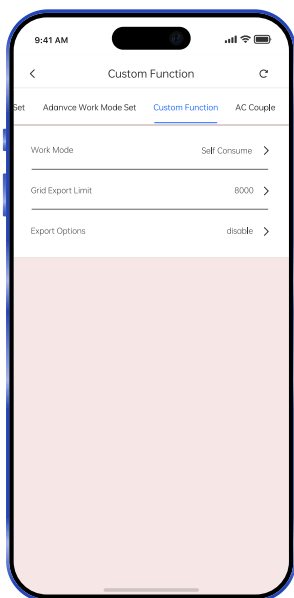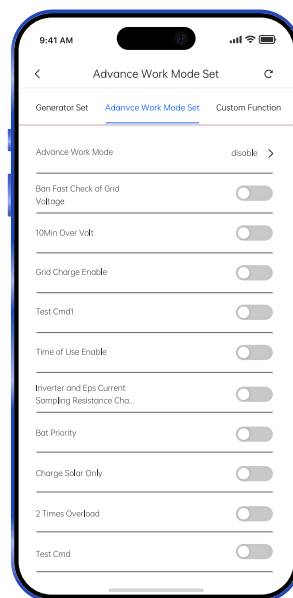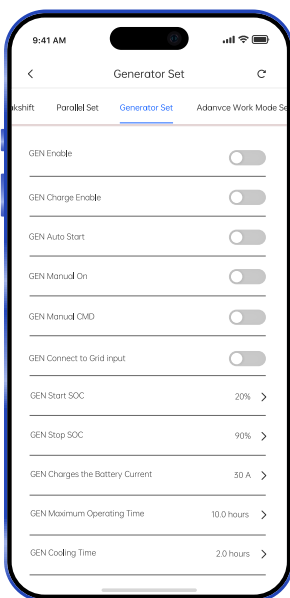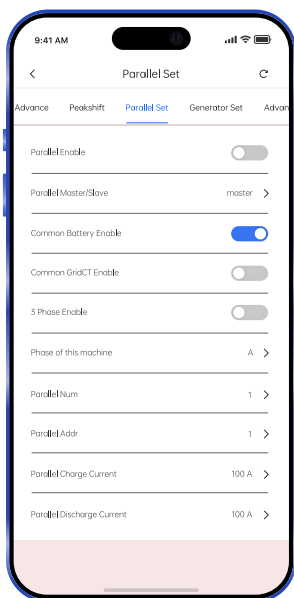

10 Technical parameters

Table 10-1 Technical parameter

PV input data

Model	R5KLNA	R6KLNA	R7K6LNA	R8KLNA	R10KLNA
Max.DC input power (kW)	7.5	9	12	12	15
No. MPPT tracker	4				
MPPT range (V)	120 - 500				
Max. DC input voltage (V)	500				
Full power operating voltage range (V)	120-430				
Max. input current (A)	14				
Max. short circuit current (A)	22				

Battery input data

Model	R5KLNA	R6KLNA	R7K6LNA	R8KLNA	R10KLNA
Nominal voltage (Vdc) (V)	48				
Max. charging /discharging current (A)	120/120	135/135	190/190	190/190	190/210
Battery voltage range (V)	40-60				
Battery recommended voltage range (V)	40-58				
Battery type	Lithium and lead acid battery				
Charging strategy for li-Ion battery	Self-adaption to BMS				

AC output data (on-grid)

Model	R5KLNA	R6KLNA	R7K6LNA	R8KLNA	R10KLNA
Nominal output power to grid (kVA)	5	6	7.6	8	10
Max. apparent power output to grid (kVA)	5.5	6.6	8.4	8.8	11
Output voltage range	110-120/220-240V split phase, 1Ø, 230 1 phase				
Output frequency (Hz)	50/60 (45 to 54.9 / 55 to 65)				
Nominal AC current output to grid (A)	20.8	25	31.7	33.3	41.7
Max. AC current output to grid (A)	22.9	27.5	35	36.7	45.8
Output power factor	0.8leading...0.8lagging				

Model	R5KLNA	R6KLNA	R7K6LNA	R8KLNA	R10KLNA
Output THDI			< 2%		
Max. grid passthrough current (A)			100		

AC output data (back-up)

Model	R5KLNA	R6KLNA	R7K6LNA	R8KLNA	R10KLNA
Nominal. apparent power output (kVA)	5	6	7.6	8	10
Max. apparent power output (kVA)	5.5	6.6	8.4	8.8	11
Nominal output voltage L-N/ L1-L2 (V)			120/240		
Nominal output frequency (Hz)			60		
Output THDU			< 2%		

Efficiency

Model	R5KLNA	R6KLNA	R7K6LNA	R8KLNA	R10KLNA
Europe efficiency			≥ 97.8%		
Max. battery to load efficiency			≥ 97.2%		

Protection

Model	R5KLNA	R6KLNA	R7K6LNA	R8KLNA	R10KLNA
Grounding detection			YES		
Arc fault protection			YES		
Island protection			YES		
Insulation resistor detection			YES		
Residual current monitoring unit			YES		
Output over current protection			YES		
Back-up output short protection			YES		
Output over voltage protection			YES		
Output under voltage protection			YES		

General data

Model	R5KLNA	R6KLNA	R7K6LNA	R8KLNA	R10KLNA
Output conduit (mm)			25.4		
PV input conduit (mm)			25.4		
BAT input conduit (mm)			34.5		
Operating temperature range (°C)			-25 ~ +60 (> 45derating)		
Relative humidity			0-95%		
Operating altitude (m)			0~4000		
Ingress protection			IP65/Type 3R		
Weight (kg)			48		
Size (width*height*depth) (mm)			450 * 820 * 240		
Cooling			Natural convection		
Noise emission (dB)			<48		
Display			LCD touch screen		
Communication with BMS/ meter/EMS			RS485, CAN		
Supported communication interface			RS485, WLAN, 4G (optional)		
Self-consumption (W)			< 25		
Safety			UL1741SA all options, UL1699B, CSA 22.2		
EMC			FCC part 15 class		
Grid connection standards			IEEE 1547, IEEE 2030.5, Hawaii rule 14H, Rule 21 phase I, II, III		

Table 10-2 Abbreviated noun interpretation

Abbreviation	Full name	Abbreviation	Full name
RSD	Rapid shutdown	TOU	Time-of-use
CV	Constant voltage	Aux load SOC	Auxiliary load SOC
EPS	EMERGENCY POWER SYSTEM	GRID HYST	GRID hysteresis
Zero export P	Zero export power	DOD	Depth of discharge
BAT COM	Battery communication	E-TODAY	Energy-today



SHENZHEN MEGAREVO TECHNOLOGY CO., LTD.



Building 2,Winlead,Shutianpu Community, Matian Street, Guangming District,
Shenzhen City, Guangdong Province, P.R. China

T: +86 0755 2138 0136

M: sales@megarevo.com.cn

WEBSITE: www.megarevo.com

NOTICE: Megarevo has the right not to perform quality assurance if: 1. Without the permission of Megarevo, damage the sealing of the product (tear the anti-demolition label, open the hybrid inverter cover). 2. Damage during transportation. 3. Improper installation and debugging. 4. Do not comply with the hybrid inverter user manual instructions, installation instructions and storage specifications. 5. Unauthorized changes or attempts to repair the energy storage converter. 6. Improper use and operation. 7. Hybrid inverter installation site is not ventilated enough. 8. Failing to comply with applicable safety regulations and ignoring safety warnings described in product documentation. 9. Irresistible factors (such as: lightning, over-voltage, storm, fire, etc.). If the customer needs to provide repair service due to the above situation, Megarevo can provide paid repair service after judging.

The copy right of this manual belongs to Shenzhen Megarevo technology co. LTD. Any corporation or individual should not plagiarize, copy, reduction, or distribution this manual in any form or by any means. All rights reserved.

The information in this document (including software, etc.) is subject to change without notice. Every effort has been made to ensure the accuracy of the contents during the preparation of this document, but all statements, information and suggestions in this document do not constitute any express or implied warranty in any form. Shenzhen Megarevo technology co. LTD reserves the right of final interpretation.